

arendo A304307x40

Arendo BREAKFAST X2 4-Slot Toaster Instruction Manual

Model: A304307x40

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Arendo BREAKFAST X2 4-Slot Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

The Arendo BREAKFAST X2 is a 1630W stainless steel toaster designed for convenience and performance. It features four extra-wide slots, six browning levels, and dedicated functions for defrosting and reheating. Its retro brushed steel design complements any modern kitchen.

Your browser does not support the video tag.

Video: Arendo BREAKFAST X2 4-Slot Toaster product overview, showcasing its design and features.

2. SAFETY INSTRUCTIONS

Please observe the following safety precautions to prevent injury or damage to the appliance:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plug, or toaster in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not insert oversized foods, metal foil packages, or utensils into the toaster as this may create a fire or electric shock hazard.

- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- The toaster is equipped with non-slip rubberized feet for stability.
- This appliance is GS certified for tested safety.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Arendo BREAKFAST X2 toaster:

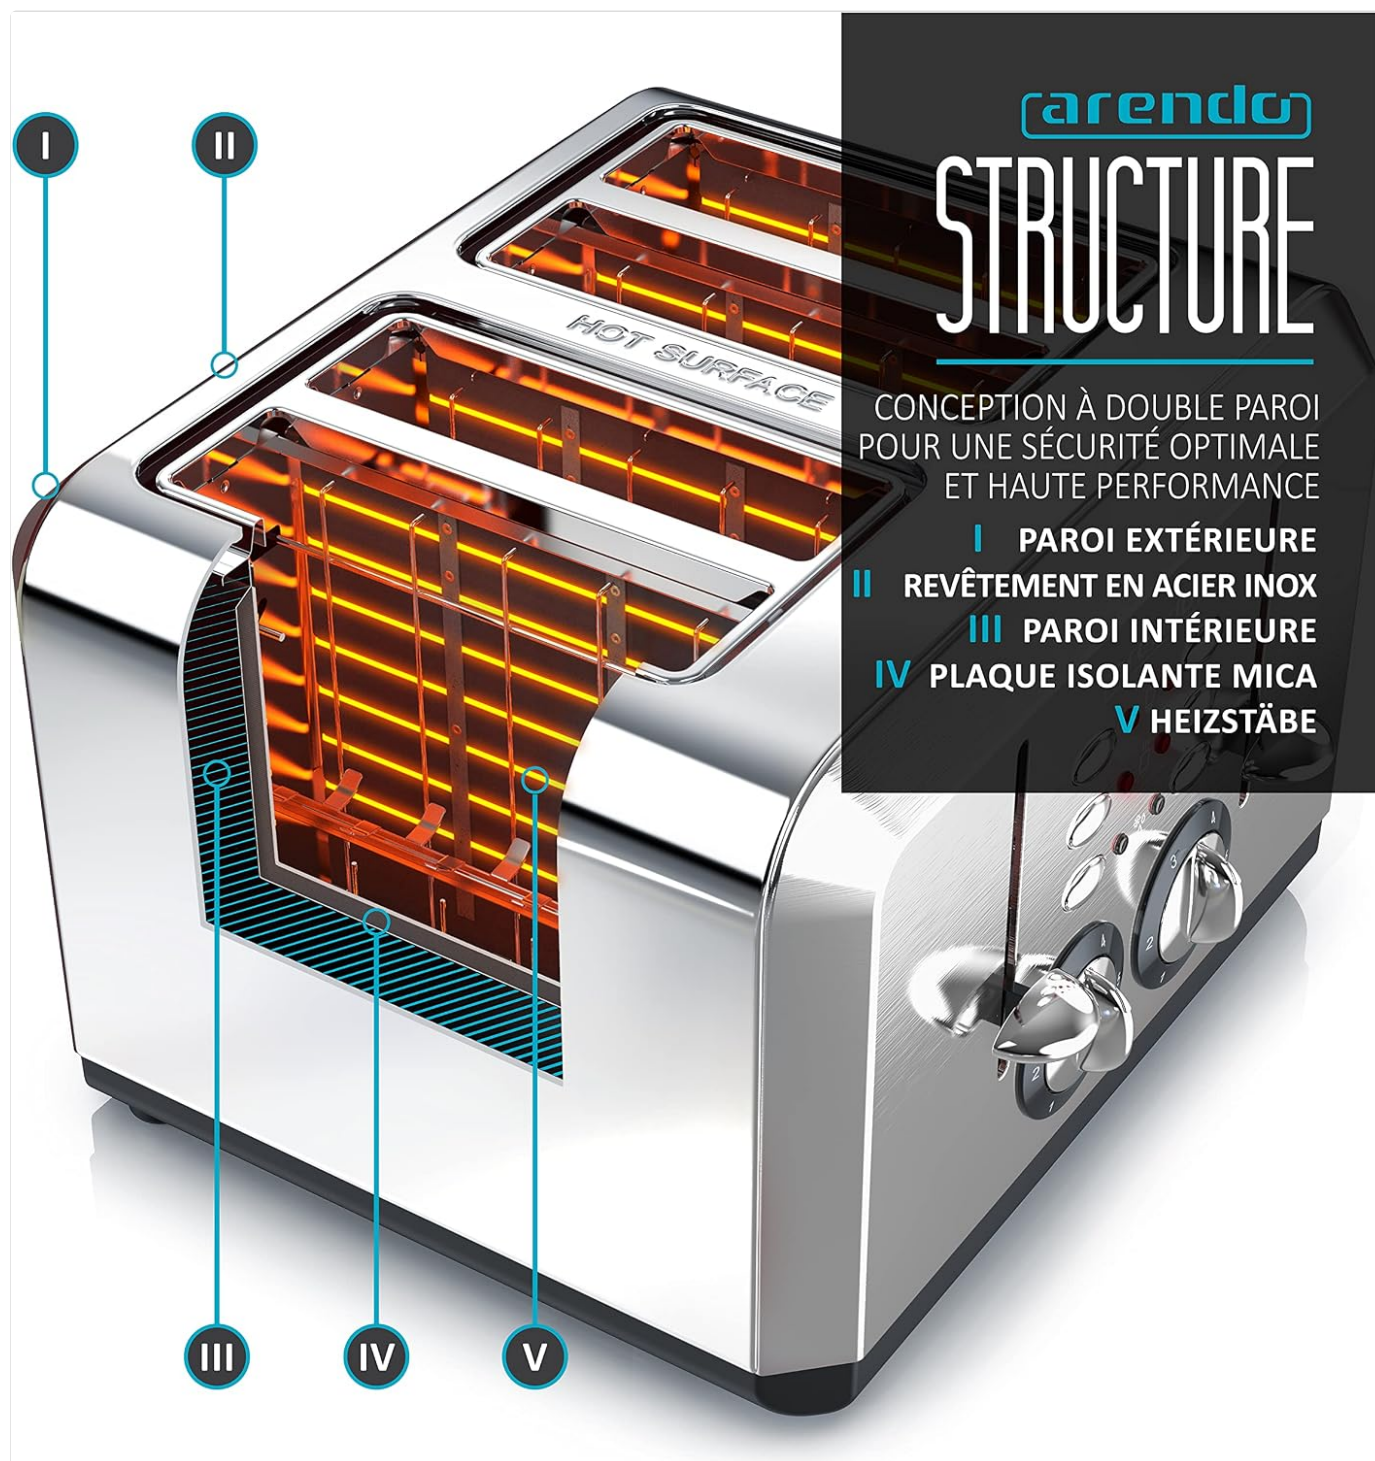


Image: Diagram showing the internal structure of the Arendo toaster, indicating the exterior wall, stainless steel lining, inner wall, mica insulating plate, and heating elements for optimal safety and performance.

1. **Exterior Wall:** The outer casing of the toaster.

2. **Stainless Steel Lining:** Internal stainless steel components.
3. **Inner Wall:** The interior structure.
4. **Mica Insulating Plate:** Provides insulation for safety.
5. **Heating Elements:** The components responsible for toasting.
6. **Toasting Slots (4):** For inserting bread slices.
7. **Browning Control Dials (2):** Adjust browning level from 1 to 6.
8. **Defrost Buttons (2):** For toasting frozen bread.
9. **Reheat Buttons (2):** For warming already toasted bread.
10. **Cancel/Eject Levers (2):** To stop toasting and eject bread.
11. **Removable Crumb Trays (2):** Collect crumbs for easy cleaning.

4. SETUP

4.1 Unpacking

- Carefully remove the toaster and all packaging materials.
- Ensure all components are present and undamaged.

4.2 Initial Use (Burn-off)

Before toasting food for the first time, operate the toaster without bread for a few cycles to burn off any manufacturing residues. This may produce a slight odor and smoke, which is normal. Ensure the area is well-ventilated.

4.3 Placement

- Place the toaster on a stable, flat, heat-resistant surface.
- Ensure there is adequate space around the toaster for ventilation, at least 10 cm (4 inches) from walls or other appliances.
- Do not place the toaster near flammable materials such as curtains.

5. OPERATING INSTRUCTIONS

arendo

FONCTIONNEMENT

- I COMMUTATEUR ROTATIF**
Niveau de brunissement réglable de 1 à 6
- II DÉCONGÉLATION**
Le pain congelé sera rapidement grillé
- III RÉCHAUFFAGE**
- IV ÉJECTION ANNULATION**



GRILLE-PAIN À 4 FENTES
POUR 4 TRANCHES AVEC DEUX
UNITÉS DE GRILLAGE SÉPARÉES!



Image: Close-up of the Arendo toaster's control panel, illustrating the rotary browning control, defrost, reheat, and cancel buttons, along with the toast lift lever.

1. **Plug In:** Connect the power cord to a suitable electrical outlet (240V).
2. **Insert Bread:** Place up to four slices of bread into the toasting slots. The toaster features automatic slice centering to ensure even browning.
3. **Select Browning Level:** Use the rotary browning control dial to select your desired browning level from 1 (lightest) to 6 (darkest). There are two independent control panels, allowing different browning levels for each pair of slots.
4. **Start Toasting:** Press down the toast lift lever until it locks into place. The indicator light will illuminate, and toasting will begin.
5. **Eject Toast:** Once the selected browning cycle is complete, the toast will automatically pop up, and the toaster will switch off.
6. **Cancel Toasting:** To stop the toasting cycle at any time, press the 'Cancel' button (often integrated with the eject lever).

6. SPECIAL FUNCTIONS

Your Arendo BREAKFAST X2 toaster includes convenient special functions:

- **Defrost Function:** To toast frozen bread, insert the bread, select your desired browning level, and then press the 'Defrost' button. The indicator light will illuminate, and the toaster will automatically adjust the toasting time for frozen items.
- **Reheat Function:** To warm up already toasted bread without further browning, insert the bread, and press the 'Reheat' button. The indicator light will illuminate, and the toaster will gently warm the bread.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

A high-quality product photograph of the Arendo BREAKFAST X2 toaster. The toaster is a sleek, modern design with a brushed metal finish and a black control panel on the right side. The top-loading slots are visible. Two black plastic crumb trays are shown partially pulled out from the bottom of the toaster, revealing a layer of golden-brown crumbs. A blue line points from the text '2 PLATEAUX À MIETTES' to the crumb trays. The background is a clean, light gray.

SECURITE

- PIEDS GOMMÉS (ANTI-DÉRAPANT)
- CONCEPTION À DOUBLE PAROI

GSÉCURITÉ TESTÉE & CERTIFIÉE PAR LA NOME GS

TÜV Rheinland
ZERTIFIZIERT

GS
geprüfte Sicherheit

arendo
NETTOYAGE

2 PLATEAUX À MIETTES
Les miettes de pain peuvent être facilement enlevées, retirez le ramasse-miettes et nettoyez-le avec un chiffon humide.

Image: The Arendo toaster with its two removable crumb trays partially extracted, showing collected crumbs, for easy cleaning.

7.1 Crumb Trays

- Always unplug the toaster and allow it to cool completely before cleaning.
- Pull out the two removable crumb trays located at the bottom of the toaster.
- Discard accumulated crumbs.
- Wipe the trays with a damp cloth and dry thoroughly before reinserting.
- Ensure the crumb trays are fully inserted before operating the toaster.

7.2 Exterior Cleaning

- Wipe the exterior of the toaster with a soft, damp cloth.
- Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- Never immerse the toaster in water or any other liquid.

8. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.
Bread does not eject.	Bread is stuck; mechanism malfunction.	Unplug the toaster and carefully remove bread with non-metallic tongs. Do not force the lever.
Uneven browning.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are of similar thickness. Clean crumb trays regularly.
Smoke coming from toaster.	Food stuck inside; crumb buildup; first use burn-off.	Unplug immediately. Remove any stuck food or clean crumb trays. If it's first use, ensure ventilation.

9. SPECIFICATIONS



Image: The Arendo BREAKFAST X2 4-slot toaster with its key dimensions indicated: 29 cm (depth), 26 cm (width), and 19 cm (height).

Feature	Detail
Model Number	A304307x40
Power	1630 Watts
Voltage	240 Volts
Number of Slots	4
Browning Levels	6
Material	Stainless Steel
Color	Brushed Steel
Dimensions (L x W x H)	29 cm x 26 cm x 19 cm
Weight	2.07 Kilograms
Special Features	Defrost Function, Reheat Function, Cancel Function, Automatic Slice Centering, Two Removable Crumb Trays, Independent Toasting Units

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The Arendo BREAKFAST X2 4-Slot Toaster comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Arendo customer support through the retailer where the product was purchased or refer to the official Arendo website for contact information.

© 2024 Arendo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question