

PARKSIDE PPHA 20-Li A1

PARKSIDE PERFORMANCE Cordless Planer PPHA 20-Li A1, 20 V Instruction Manual

Model: PPHA 20-Li A1

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective operation, setup, and maintenance of your PARKSIDE PERFORMANCE Cordless Planer PPHA 20-Li A1. Please read this manual thoroughly before using the tool and keep it for future reference. This tool is designed for planing wood and similar materials.

2. SAFETY INSTRUCTIONS

Always observe general power tool safety guidelines to prevent electric shock, fire, and serious injury. Keep your work area clean and well-lit. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Always wear appropriate personal protective equipment, including eye protection, hearing protection, and dust masks. Ensure the tool is switched off and the battery is removed before making any adjustments, changing accessories, or storing the tool.

- Keep hands away from the planing area and the blade.
- Ensure the workpiece is securely supported.
- Do not reach under the workpiece while the planer is operating.
- Avoid accidental starting. Ensure the switch is in the off-position before inserting the battery pack.
- Use only battery packs specified by the manufacturer.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the components of your cordless planer.



Figure 1: The PARKSIDE PERFORMANCE Cordless Planer PPHA 20-Li A1. This image shows the overall design of the planer, highlighting its compact and ergonomic form factor, with the battery slot visible at the rear.

- **Brushless Motor:** Provides reduced wear and extended service life.
- **Planing Base:** Features 3 V-grooves for easy chamfering.
- **Reversible HSS Planer Blades:** Interchangeable for prolonged use.
- **Chip Ejection Port:** Adjustable for left or right side ejection.
- **Dust Extraction Connection:** For external vacuum adapter (included).
- **Soft Grip Handle:** For comfortable and secure handling.
- **Tool Storage Compartment:** Integrated for mounting tools.
- **Battery Slot:** Compatible with PARKSIDE X 20 V Team series batteries (battery and charger sold separately).



Figure 2: Side view of the planer, illustrating the battery compartment and the main body design. The Parkside branding and "Brushless" motor indication are visible.

4. SETUP

4.1 Battery Installation

1. Ensure the planer is switched off.
2. Insert a charged PARKSIDE X 20 V Team series battery (e.g., 4 Ah recommended) into the battery slot until it clicks into place.
3. To remove, press the release button on the battery and slide it out.



Figure 3: Diagram illustrating the compatibility of the planer with the PARKSIDE X 20 V Team battery series, showing various tools that share the same battery platform.

4.2 Dust Extraction Connection

Attach the included adapter to the chip ejection port. Connect an external vacuum cleaner hose to the adapter for efficient dust and chip collection during operation.

4.3 Blade Installation/Replacement

Always remove the battery before handling blades. The planer uses reversible HSS blades. Refer to the tool's integrated storage compartment for the necessary mounting tools. Carefully loosen the blade clamping screws, remove the old blade, insert the new or reversed blade, and securely tighten the screws. Ensure blades are correctly seated and balanced.



Figure 4: This image displays the cordless planer alongside a small red tool, likely used for changing or adjusting the planer blades. The tool's side profile and battery slot are also visible.

5. OPERATION

5.1 Adjusting Planing Depth

The planing depth can be adjusted from 0-2 mm using the depth adjustment knob located at the front of the tool. Rotate the knob to select the desired depth. Start with a shallow depth and increase gradually if needed.

5.2 Planing Technique

1. Secure the workpiece firmly.
2. Hold the planer with both hands, ensuring a firm grip on the soft grip handle.
3. Place the front shoe of the planer flat on the workpiece.
4. Start the planer and allow the motor to reach full speed before moving it forward.
5. Apply even pressure and move the planer smoothly across the workpiece.
6. For chamfering, use one of the three V-grooves on the planing base.



Figure 5: The cordless planer actively being used on a wooden surface, demonstrating its function in creating smooth, planed finishes. Wood shavings are visible, indicating operation.

5.3 Chip Ejection

The chip ejection direction can be switched between left and right to suit your working conditions and prevent chips from interfering with your work area.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your planer.

- **Cleaning:** After each use, remove the battery and clean the tool, especially the chip ejection port and planing base, with a brush or compressed air. Do not use water or solvents.
- **Blade Inspection:** Regularly inspect the HSS planer blades for sharpness and damage. Replace or reverse dull blades promptly to maintain cutting efficiency and safety.
- **General Check:** Periodically check all screws and fasteners for tightness.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Planer does not start.	Battery not inserted correctly or discharged.	Ensure battery is fully charged and correctly inserted.
Poor planing result / Rough surface.	Dull or damaged blades. Incorrect planing depth.	Replace or reverse blades. Adjust planing depth.
Excessive vibration.	Unbalanced blades or loose components.	Check blade installation. Tighten all fasteners.
Motor stops during operation.	Overload or battery protection activated.	Reduce feed pressure. Allow motor to cool. Recharge battery.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	PPHA 20-Li A1
Brand	PARKSIDE PERFORMANCE
Power Source	20 V Battery (PARKSIDE X 20 V Team series)
No-load Rotation Speed	14,000 rpm
Planing Width	82 mm
Planing Depth	0-2 mm
Rebate Depth (Max.)	17 mm
Motor Type	Brushless
Material	Metal
Color	Black
Weight (without battery)	Approx. 4.24 kg (package weight)



9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or spare parts, please visit the official PARKSIDE website or contact their customer service department. Keep your proof of purchase for any warranty claims.



© 2025 PARKSIDE. All rights reserved.

Related Documents - PPHA 20-Li A1

	<p>PARKSIDE Cordless Planer 20V PPHA 20-Li B2 User Manual & Operating Instructions</p> <p>Download the official PARKSIDE Cordless Planer 20V PPHA 20-Li B2 user manual. Find detailed operating instructions, safety warnings, technical specifications, and maintenance information for your PARKSIDE power tool.</p>
	<p>Parkside 20V Cordless Planer PPHA 20-Li B2 - Operating Instructions</p> <p>Comprehensive operating instructions for the Parkside 20V Cordless Planer (PPHA 20-Li B2), covering safety, usage, maintenance, and technical specifications. Compatible with the Parkside X20V Team series.</p>

 <p>PARKSIDE PERFORMANCE</p> <p>20V CORDLESS PLUNGE SAW PPTSA 20-Li C3</p> <p>20V CORDLESS PLUNGE SAW 20V AKUMULATORSKA PILOTHNA ŽAGA 20V AKKUS MERŐLŐFÉRSZ 20V AKKU-TRAUSCHSÄGE</p> <p>IAN 458755_2401</p>	<p>PARKSIDE 20V Cordless Plunge Saw PPTSA 20-Li C3 User Manual</p> <p>Comprehensive user manual for the PARKSIDE 20V Cordless Plunge Saw (PPTSA 20-Li C3). Includes safety guidelines, operating instructions, technical data, maintenance, and warranty information for this powerful X 20 V TEAM series tool.</p>
 <p>PARKSIDE</p> <p>20V CORDLESS WOOD CUTTER PAGHS 20-Li B2</p> <p>20V AKKUS FAHÁZVÁGÓ 20V AKKU-FAHÁZVÁGÓ</p> <p>IAN 458755_2401</p>	<p>PARKSIDE 20V Cordless Wood Cutter PAGHS 20-Li B2 User Manual</p> <p>Comprehensive user manual for the PARKSIDE 20V Cordless Wood Cutter PAGHS 20-Li B2, covering safety instructions, intended use, parts list, technical data, operation, maintenance, and troubleshooting.</p>
 <p>PARKSIDE</p> <p>20V CORDLESS STAPLER GRAPADORA 20-Li A1</p> <p>20V AKKUS KAPARÓ 20V AKKU-KAPARÓ</p> <p>IAN 373432_2104</p>	<p>PARKSIDE Grapadora Recargable 20V PAT 20-Li A1: Manual de Usuario y Seguridad</p> <p>Manual completo para la grapadora/clavadora recargable PARKSIDE 20V PAT 20-Li A1. Aprenda sobre sus características, uso seguro, mantenimiento y solución de problemas para sus proyectos de bricolaje.</p>
 <p>PARKSIDE</p> <p>20V CORDLESS HANDHELD VACUUM CLEANER PHSSA 20-Li B1</p> <p>20V AKKUS-HANDSTAUBSAUGER 20V AKKU-HANDSTAUBSAUGER</p> <p>IAN 360589_2010</p>	<p>PARKSIDE PHSSA 20-Li B1 20V Akku-Handstaubsauger Bedienungsanleitung</p> <p>Entdecken Sie den PARKSIDE PHSSA 20-Li B1 20V Akku-Handstaubsauger. Diese Bedienungsanleitung bietet detaillierte Informationen zur sicheren Verwendung, Wartung und den technischen Daten dieses leistungsstarken und vielseitigen Geräts für trockene und nasse Oberflächen.</p>