

manuals.plus /

- › [Razer](#) /
- › [Razer Wolverine V2 Chroma Wired Gaming Pro Controller User Manual](#)

**Razer RZ06-04010100-R3U1**

# Razer Wolverine V2 Chroma Wired Gaming Pro Controller User Manual

Model: RZ06-04010100-R3U1

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Razer Wolverine V2 Chroma Wired Gaming Pro Controller. Designed for use with Xbox Series X|S, Xbox One, and PC, this controller offers advanced customization and performance features.



Image 1.1: Front view of the Razer Wolverine V2 Chroma Controller, showcasing its design and button layout.

## 2. KEY FEATURES

The Razer Wolverine V2 Chroma controller incorporates several features designed to enhance your gaming experience:

- **Razer Chroma RGB Lighting:** Customize your controller's lighting with 16.8 million colors and various effects using the Razer Controller Setup for Xbox App.
- **6 Additional Remappable Buttons:** Gain a competitive edge with four extra triggers and two remappable bumpers, configurable via the Razer Controller Setup for Xbox App.
- **Hair Trigger Mode with Trigger Stop-Switches:** Reduce trigger travel distance for faster actuation in competitive scenarios by activating the two slide-locks located on the underside of the controller.
- **Mecha-Tactile Action Buttons and D-Pad:** Experience responsive actuation with a cushioned touch and enhanced tactile feedback for precise command execution.
- **Interchangeable Thumbstick Caps:** Adapt to different play styles with included short and extended grip thumbstick

caps for natural and precise analog motion.

- **Improved Ergonomics:** The controller features modified L-shaped handgrips with non-slip rubber for a secure and comfortable hold during extended gaming sessions.
- **Designed for Xbox:** Officially licensed and developed in collaboration with Xbox to ensure optimal compatibility and performance.

## 3. SETUP INSTRUCTIONS

---

### 3.1 Package Contents

- Razer Wolverine V2 Chroma Wired Gaming Pro Controller
- Detachable USB-C to USB-A Cable
- Interchangeable Thumbstick Caps (Short and Extended)
- Important Product Information Guide

### 3.2 Connecting the Controller

1. Connect the USB-C end of the provided cable to the port on the top of the Razer Wolverine V2 Chroma controller.
2. Connect the USB-A end of the cable to an available USB port on your Xbox console (Xbox Series X|S, Xbox One) or PC.
3. The controller will automatically be detected and configured by your system.



Image 3.2: The Razer Wolverine V2 Chroma Controller with its USB-C cable connected, ready for use.

### 3.3 Installing the Razer Controller Setup for Xbox App

For full customization of your controller's features, including button remapping and Chroma RGB lighting, download and install the Razer Controller Setup for Xbox App.

- On Xbox: Search for "Razer Controller Setup for Xbox" in the Xbox Store.
- On PC: Search for "Razer Controller Setup for Xbox" in the Microsoft Store.

Follow the on-screen instructions to complete the installation and begin customizing your controller.

## 4. OPERATING INSTRUCTIONS

### 4.1 Remapping Buttons

The Razer Wolverine V2 Chroma features six additional remappable buttons (M1-M6). These can be configured to perform various functions using the Razer Controller Setup for Xbox App.

1. Ensure your controller is connected and the Razer Controller Setup for Xbox App is open.
2. Navigate to the button remapping section within the app.
3. Select the desired M-button and assign it to any standard controller input (e.g., A, B, X, Y, D-pad directions, bumper, trigger).
4. Save your profile.



Image 4.1: Rear view of the controller highlighting the six additional remappable buttons (M1-M6) for customized gameplay.

## 4.2 Activating Hair Trigger Mode

Hair Trigger Mode significantly reduces the travel distance of the main triggers (LT/RT), allowing for faster firing in games. This mode is activated via physical switches on the controller.

1. Locate the two slide-locks on the underside of the controller, beneath the main triggers.
2. Slide the locks to the engaged position to activate Hair Trigger Mode for the corresponding trigger.
3. Slide the locks back to the disengaged position to return to standard trigger travel.



# HAIR TRIGGER MODE WITH TRIGGER STOP-SWITCHES

for quickfire execution



Image 4.2: A user's hands adjusting the trigger stop-switches on the underside of the controller to enable Hair Trigger Mode.

## 4.3 Changing Thumbstick Caps

The controller comes with interchangeable thumbstick caps to suit different preferences and gaming styles.

1. Gently pull upwards on the existing thumbstick cap to remove it.
2. Align the desired new thumbstick cap (short or extended) with the thumbstick base.
3. Press down firmly until the cap clicks securely into place.

# INTERCHANGEABLE THUMBSTICK CAPS

for greater accuracy



Image 4.3: The controller displayed with its removable thumbstick caps, showing both the standard and extended options.

## 4.4 Customizing Chroma RGB Lighting

Personalize your controller's appearance with dynamic RGB lighting effects using the Razer Controller Setup for Xbox App.

1. Open the Razer Controller Setup for Xbox App.
2. Navigate to the Chroma lighting section.
3. Select from various lighting effects, colors, and brightness levels.
4. Apply your chosen settings to the controller.

**POWERED BY RAZER CHROMA™ RGB**  
for greater personalization and immersion



Image 4.4: The controller illuminated with vibrant RGB lighting, demonstrating its customizable aesthetic features.

#### 4.5 Mecha-Tactile Action Buttons and D-Pad

The controller features Razer Mecha-Tactile Action Buttons and a Mecha-Tactile D-Pad, engineered for precise and satisfying feedback with every press. These buttons combine the soft, cushioned touch of a membrane switch with the crisp, tactile feedback of a mechanical switch.



# RAZER™ MECHA-TACTILE ACTION BUTTONS AND D-PAD

for responsive actuation with tactile feedback



Image 4.5: A detailed view of the controller's Mecha-Tactile action buttons (A, B, X, Y) and D-pad, highlighting their design.

## 4.6 Ergonomics

The controller's improved ergonomic design, featuring modified L-shaped handgrips and non-slip rubber surfaces, ensures a comfortable and secure grip, reducing fatigue during prolonged gaming sessions.

# IMPROVED ERGONOMICS

for greater handling and comfort



Image 4.6: A user holding the controller, illustrating the comfortable and secure grip provided by its ergonomic design.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Controller

- Ensure the controller is disconnected from your console or PC before cleaning.
- Use a soft, dry, lint-free cloth to wipe down the surface of the controller.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaning solution. Avoid excessive moisture.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the controller's finish and internal components.
- Use a cotton swab or compressed air to clean around buttons, thumbsticks, and crevices.

### 5.2 Storage

When not in use, store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the controller to prevent damage.

## 6. TROUBLESHOOTING

### 6.1 Controller Not Responding

- **Check Cable Connection:** Ensure the USB-C cable is securely connected to both the controller and the console/PC. Try unplugging and re-plugging the cable.
- **Try a Different USB Port:** Connect the controller to a different USB port on your console or PC to rule out a faulty port.
- **Restart Console/PC:** A system restart can often resolve connectivity issues.
- **Test on Another Device:** If possible, test the controller on another compatible Xbox console or PC to determine if the issue is with the controller or the original device.

### 6.2 Customization Settings Not Applying

- **Razer Controller Setup App:** Ensure the Razer Controller Setup for Xbox App is installed and up to date.
- **Controller Connected:** Verify that the controller is connected and recognized by the app.
- **Save Profile:** Make sure you have saved any changes made within the app to your controller profile.

### 6.3 RGB Lighting Issues

- **App Settings:** Check the Chroma lighting settings within the Razer Controller Setup for Xbox App. Ensure lighting is enabled and configured as desired.
- **Software Update:** Ensure both the controller firmware and the Razer Controller Setup for Xbox App are updated to the latest versions.

## 7. SPECIFICATIONS

|                        |  |
|------------------------|--|
| Model Number           | RZ06-04010100-R3U1   |
| Connectivity           | Wired (USB-C to USB-A)   |
| Compatibility          | Xbox Series X S, Xbox One, PC (Windows)  |
| Dimensions (L x W x H) | 6.26 x 4.17 x 2.57 inches (15.9 x 10.6 x 6.5 cm)   |
| Weight                 | 9.52 ounces (270 grams)  |
| Buttons                | Razer Mecha-Tactile Action Buttons, Mecha-Tactile D-Pad, 6 Remappable Multi-Function Buttons |
| Triggers               | Hair Trigger Mode with Trigger Stop-Switches   |
| Lighting               | Razer Chroma RGB   |
| Release Date           | September 14, 2021   |
| Manufacturer           | Razer  |

## 8. WARRANTY AND SUPPORT

For detailed warranty information, product support, and frequently asked questions, please visit the official Razer support website.

Razer Support Website: <https://support.razer.com/>

You may also find additional resources and community forums on the Razer website.





## 9. VIDEO RESOURCES

No official product videos from the seller were available in the provided data for embedding. Please refer to the official Razer support website or YouTube channel for instructional videos and product demonstrations.





© 2023 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer Chroma, and "For Gamers. By Gamers." are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States and other countries. All other trademarks are the property of their respective owners.

### Related Documents - RZ06-04010100-R3U1

|   |   |
|---|---|
|   | <p><a href="#">Razer Wolverine V2 Pro Master Guide</a></p> <p>Comprehensive guide to the Razer Wolverine V2 Pro wireless pro controller, officially licensed by PlayStation. Learn about setup, features, personalization, and maintenance for PS5 consoles and PC.</p>   |
|  | <p><a href="#">Razer Wolverine V3 Tournament Edition Master Guide - Setup, Features, and Safety</a></p> <p>Comprehensive master guide for the Razer Wolverine V3 Tournament Edition wired esports controller. Learn about its features, technical specifications, setup, usage, safety guidelines, and maintenance for Xbox and PC.</p> |
|  | <p><a href="#">Razer Raion Fightpad Handbuch - Funktionen, Einrichtung und technische Daten</a></p> <p>Umfassendes Handbuch für das Razer Raion Fightpad, das seine Funktionen, Einrichtungsanleitungen für PS4 und PC, technische Spezifikationen, Sicherheitshinweise und Garantieinformationen detailliert beschreibt.</p>           |
|  | <p><a href="#">Razer Wolverine V3 Pro Master Guide - Wireless Esports Controller</a></p> <p>Comprehensive master guide for the Razer Wolverine V3 Pro, a wireless esports controller officially licensed by Xbox. Learn about its features, setup, usage, and maintenance for optimal performance on console and PC.</p>                |



|   |  |
|---|--|
|  The image shows the cover of the Razer Raiju Tournament Edition Master Guide. It is a solid blue square with the Razer logo (a stylized green snake) in the center. Below the logo, the text "RAIJU TOURNAMENT EDITION" and "Razer Inc." are visible in small white font.   | <p><a href="#">Razer Raiju Tournament Edition Master Guide</a></p> <p>Comprehensive master guide for the Razer Raiju Tournament Edition gaming controller, detailing setup, features, and maintenance for PS4 and PC.</p>  |
|  The image shows the cover of the Razer Kishi Ultra Master Guide - Mobile Gaming Controller. It is a solid green square with the Razer logo (a stylized green snake) in the center. Below the logo, the text "KISHI ULTRA" and "Razer Inc." are visible in small white font. | <p><a href="#">Razer Kishi Ultra Master Guide - Mobile Gaming Controller</a></p> <p>Comprehensive master guide for the Razer Kishi Ultra, a pro-grade mobile gaming controller featuring console-class ergonomics, Razer Chroma RGB, and Mecha-tactile buttons. Learn about setup, usage, technical specifications, safety, and maintenance.</p> |