

## ECONTROLLY RC-AKB75095315-EC

# ECONTROLLY AKB75095315 Replacement Remote Control User Manual

For LG Smart TVs

## 1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB75095315 replacement remote control, designed for use with various LG Smart TV models. This remote offers direct functionality without the need for programming, allowing immediate control of your television once batteries are installed. It replicates the functions of the original LG AKB75095315 remote.





Image 1.1: Front view of the ECONTROLLY AKB75095315 Replacement Remote Control. This image displays the full layout of buttons, including the power button, number pad, volume and channel controls, navigation keys, and dedicated buttons for streaming services like Netflix and Amazon.

## 2. SETUP

---

### 2.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with compatible LG Smart TVs without any additional programming.

### 3. OPERATING INSTRUCTIONS

---

This section details the functions of the buttons on your ECONTROLLY AKB75095315 replacement remote control.

#### 3.1 Basic Functions

- **Power (Red Button):** Turns the TV on or off.
- **TV:** Switches the input source to TV mode.
- **CAPTION:** Toggles closed captions on or off.
- **Settings (Gear Icon):** Accesses the TV's main settings menu.
- **Search (Magnifying Glass):** Opens the search function on your Smart TV.
- **Number Pad (0-9):** Directly enters channel numbers or other numerical inputs.
- **LIST:** Displays a list of channels or recorded programs.
- **VOL (+/-):** Increases or decreases the volume level.
- **Mute (Speaker with Cross):** Mutes or unmutes the TV audio.
- **CH PAGE (Up/Down):** Changes the TV channel up or down.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **OK/Enter:** Confirms a selection or enters a menu item.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.

#### 3.2 Smart TV and Special Functions

- **NETFLIX:** Direct access button to launch the Netflix application.
- **Amazon:** Direct access button to launch the Amazon Prime Video application.
- **QUICK ACCESS:** Provides quick access to frequently used apps or functions.
- **FAV (Favorite):** Accesses your list of favorite channels.
- **INFO:** Displays information about the current program or content.
- **Q.VIEW:** Allows quick switching between two recently viewed channels.
- **GUIDE:** Opens the electronic program guide (EPG).
- **LIVE ZOOM:** Zooms in on a specific area of the screen during live TV.
- **Magic Link (Wheel Icon):** Activates the Magic Link feature for related content.
- **REC (Red Circle):** Initiates recording of the current program (requires compatible recording device).
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop):** Controls playback of media content.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons have various functions depending on the specific application or menu displayed on the TV screen. Refer to the on-screen prompts.

### 4. TROUBLESHOOTING

If your remote control is not functioning as expected, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
  - Ensure the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the TV's infrared receiver.
  - Ensure you are within the effective range of the TV's IR receiver.
- **Specific Buttons Not Working:**
  - Clean the remote control's surface and buttons with a soft, dry cloth to remove any dirt or residue that might be interfering with button presses.
  - If only certain buttons are unresponsive, it might indicate a fault with the remote. Consider replacing the remote if other troubleshooting steps fail.
- **TV Not Responding to Remote:**
  - Verify that the remote control is compatible with your specific LG Smart TV model. A list of compatible models is often provided with the product.
  - Try restarting your TV by unplugging it from the power outlet for a few minutes, then plugging it back in.

## 5. SPECIFICATIONS

Feature	Detail
Model Number	RC-AKB75095315-EC
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Batteries Required	2 AAA batteries
Connectivity Technology	Infrared (IR)
Compatible Devices	LG Smart Televisions (various models including 32LJ600B, 43LJ5500, 43LJ5550, 49LJ5500, 49LJ5550, 55LJ5550, 55LJ5500, 43LK5750PUA, etc.)
Special Feature	Ergonomic design

## 6. WARRANTY AND SUPPORT

This ECONTROLLY replacement remote control is designed for reliable performance. For specific warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you encounter any issues not covered in this manual, please reach out to the customer support of your product

vendor for assistance.