

BSZHI A80

BSZHI A80 Portable Bluetooth Speaker User Manual

Model: A80

INTRODUCTION

This user manual provides detailed instructions for the operation and maintenance of your BSZHI A80 Portable Bluetooth Speaker. Please read this manual thoroughly before using the product to ensure proper function and longevity.

WHAT'S IN THE BOX

- 1 x A80 Bluetooth Speaker
- 1 x USB Charge Cable
- 1 x AUX Cable
- 1 x Remote Control
- 1 x User Manual

PRODUCT OVERVIEW AND FEATURES



The BSZHI A80 Portable Bluetooth Speaker, shown with its accompanying remote control. The speaker features a vibrant LED light display on the front and a control panel at the top.

Key operation introduction



Detailed view of the speaker's control panel, highlighting the number buttons, volume knob, lighting control, one-click recording, mode switch, next track, pause/playback, and previous piece buttons.

- **Powerful Audio Output:** Equipped with two 25W woofers and two 15W tweeters, delivering 80W of total output for heavy bass and surround stereo sound.
- **Multiple Connectivity Options:** Supports Bluetooth 5.1 for wireless connection up to 100ft, AUX input (3.5mm), TF Card, and U-disk playback.
- **Dynamic LED Lights:** Features colorful LED lights with multiple dynamic modes that synchronize with music rhythm.
- **True Wireless Stereo (TWS):** Allows pairing of two A80 speakers for a combined 160W stereo sound experience.
- **FM Radio:** Built-in FM radio function with automatic station search and manual input via remote control.
- **Long Battery Life:** Integrated 10800mAh rechargeable battery provides 8-20 hours of playtime depending on volume.
- **Portable Design:** Features a hand-held pull ring for easy transport and a stand holder for mobile devices.
- **Remote Control:** Full-function remote control for convenient operation.
- **Microphone Input:** Includes a 6.35mm microphone jack for karaoke or public speaking.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charge cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator will show the charging status.



The speaker is equipped with a large capacity battery for extended playtime. Ensure it is fully charged before use.

OPERATING INSTRUCTIONS

Power On/Off

Locate the power button on the speaker's control panel. Press and hold to power on or off the device.

Volume Control

Adjust the volume using the large volume knob on the control panel or the volume buttons on the remote control.

Mode Switching

Press the 'M' (Mode) button on the speaker or the 'MODE' button on the remote control to cycle through available modes: Bluetooth, FM Radio, AUX, TF Card, and U-disk.

Bluetooth Connectivity

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "A80" in your device's Bluetooth list and select it to connect.
4. A confirmation sound will indicate successful pairing.



The speaker utilizes Bluetooth 5.1 technology for stable wireless connections up to 100 feet.

AUX Input

Connect one end of the 3.5mm AUX cable to the speaker's AUX port and the other end to the audio output of your external device (e.g., TV, computer, MP3 player). The speaker will automatically switch to AUX mode.

TF Card / U-disk Playback

Insert a TF card or U-disk (USB flash drive) containing audio files into the respective slot. The speaker will automatically detect and begin playing music from the storage device.

LED Light Control

Press the light control button (often indicated by a sun icon) on the speaker's control panel or the remote control to turn the LED lights on/off or cycle through different lighting modes.



The speaker features dynamic LED lights that enhance the listening experience, especially in low-light environments.

True Wireless Stereo (TWS) Pairing

To pair two A80 speakers for TWS stereo sound:


1. Ensure both A80 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the TWS pairing button (refer to the control panel diagram if available, or try the play/pause button if not specified).
3. The speakers will attempt to connect to each other. A successful connection will be indicated by an audible prompt.
4. Once paired, connect your device to the primary speaker via Bluetooth. Audio will now play through both speakers in stereo.

FM Radio Operation

1. Switch the speaker to FM Radio mode using the 'M' (Mode) button.
2. To automatically search and save available stations, long press the Play/Pause button.
3. Use the Previous/Next track buttons to navigate through saved stations.
4. Manual station input can be done using the number buttons on the remote control.

Using the Remote Control

The included remote control provides convenient access to various speaker functions, including power, mode switching, volume adjustment, track control, LED light control, and FM radio tuning.

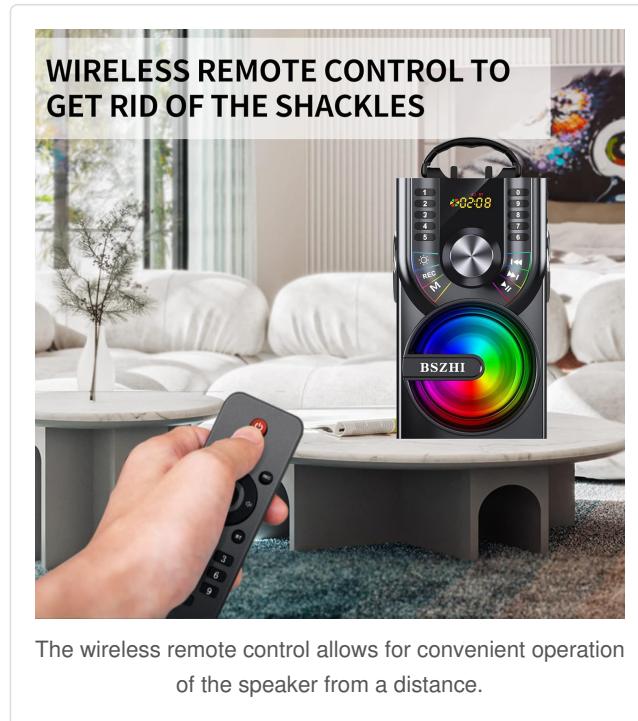

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
No sound from speaker.	Check the volume level on both the speaker and the connected device. Ensure the correct input mode is selected (Bluetooth, AUX, etc.).
Bluetooth pairing fails.	Ensure the speaker is in Bluetooth pairing mode. Turn off and on Bluetooth on your device. Move the speaker closer to your device. Clear previous Bluetooth connections on your device.
FM radio reception is poor.	Adjust the speaker's position. Extend any external antenna if available.
Remote control not working.	Check the battery in the remote control. Ensure there are no obstructions between the remote and the speaker.

SPECIFICATIONS

Feature	Detail
Brand	BSZHI
Model Number	A80
Output Wattage	80 Watts
Number of Channels	4 (Two 25W woofers, two 15W tweeters)
Connectivity Technology	Bluetooth 5.1, USB, AUX
Audio Input	3.5mm Microphone jack, AUX line-in
Battery	10800mAh Lithium Ion (included)
Playtime	8-20 hours (depends on playing volume)
Material	Wood, Plastic
Item Weight	4.4 pounds (2 Kilograms)
Product Dimensions (L x W x H)	5.51 x 6.69 x 10 inches
Impedance	4 Ohm

40W LOUND STEREO EXPRESSIVE BASS



3.5" Subwoofer 2.5" Tweeter*2

Internal components of the speaker, including the 3.5-inch subwoofer and two 2.5-inch tweeters, designed for powerful stereo bass.



Dimensions of the BSZHI A80 speaker, indicating its compact and portable design suitable for various uses.

WARRANTY AND SUPPORT

For any questions or support regarding your BSZHI A80 speaker, please contact customer service. The manufacturer aims to reply within 7-24 hours to provide assistance.

Note: Specific warranty details may vary by region and retailer. Please refer to your purchase documentation for precise warranty terms.

