

[Manuals.plus](#) /

> [Goshyda](#) /

> Goshyda IPx8 Waterproof MP3 Player Instruction Manual

## Goshyda IPx8 Waterproof MP3 Player

# Goshyda IPx8 Waterproof MP3 Player Instruction Manual

Model: IPx8 Waterproof MP3 Player | Brand: Goshyda

## 1. INTRODUCTION

---

The Goshyda IPx8 Waterproof MP3 Player is designed for active individuals who enjoy music during water sports and other activities. It features an IPx8 waterproof rating, 4GB of internal memory, and a long-lasting battery. This manual provides essential information for setting up, operating, and maintaining your device.

# Waterproof MP3 Player

The MP3 player meets the international IPx8 waterproof standard, suitable for swimming.



Figure 1: Goshyda IPx8 Waterproof MP3 Player with headphones in a swimming pool. The device is designed for use in water, meeting international IPx8 waterproof standards.

## 2. PACKAGE CONTENTS

---

Please check the package to ensure all items are present:

- 1 x MP3 Player
- 1 x Headphone
- 1 x Manual
- 4 x Ear Cap (various sizes)
- 1 x USB Cable
- 1 x Storage Bag
- 1 x Wipe Cloth
- 1 x Lanyard



Figure 2: All items included in the product package, ensuring you have everything needed for operation.

### 3. PRODUCT OVERVIEW & CONTROLS

---

The MP3 player features intuitive controls for easy operation during activities. The main unit includes buttons for power, play/pause, volume adjustment, and track navigation. A 360-degree rotatable clip is integrated for secure attachment.

#### Controls:

- **SW3 (P/P) Button:** Long press to power on/off. Short press to play/pause.
- **Volume + / - Buttons:** Adjust playback volume.
- **Previous Track / Rewind Button:** Short press for previous track. Long press to rewind.
- **Next Track / Fast Forward Button:** Short press for next track. Long press to fast forward.

#### Ports:

- **4PIN 3.5mm Port:** Used for charging, headphone connection, and data transfer.

Your browser does not support the video tag.

Video 1: This video demonstrates the basic controls and features of the waterproof MP3 player, including power, volume, and track navigation, along with the interchangeable earplugs and rotatable clip.

## 4. SETUP

---

### 4.1 Charging the Device

Connect the provided USB cable to the 4PIN 3.5mm port on the MP3 player and plug the other end into a USB power source (e.g., computer, wall adapter). The device supports fast charging and offers 8-10 hours of playback time on a full charge.

### 4.2 Loading Music

The MP3 player has 4GB of internal memory. To load music:

1. Connect the MP3 player to your computer using the provided USB cable.
2. The device will appear as a removable disk drive.
3. Drag and drop your desired MP3, WMA, APE, or FLAC audio files into the device's storage.
4. Safely eject the device from your computer once files are transferred.

The player is compatible with Windows 2000/ME/XP/Vista, OS X 8.6+, and Linux 2.4.0.

Your browser does not support the video tag.

*Video 2: Learn how to navigate and switch between different music folders stored on your MP3 player using the device's controls.*

### 4.3 Ear Cap Selection and Installation

The package includes multiple sizes of ear caps to ensure a secure and comfortable fit, especially important for water activities. Choose the size that creates a snug seal in your ear canal to prevent water entry and optimize sound quality.



Figure 3: Various sizes of silicone ear caps for the waterproof headphones. Different sizes of ear caps are provided to ensure a comfortable and secure fit for optimal sound and water sealing.

#### 4.4 Wearing the MP3 Player

The MP3 player features a 360-degree rotatable back clip. Attach the player securely to your swimwear, goggles strap, or other suitable gear. Ensure the headphone cables are routed comfortably and do not interfere with your movements.

Your browser does not support the video tag.

Video 3: An overview of the Goshyda IPx8 Waterproof MP3 Player, highlighting its waterproof capabilities and design for active use.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off

- To power on: In the off state, long press the SW3 (P/P) button. The green light will flash quickly, then turn on and automatically enter music playback state. The green light will continue to flash during operation.
- To power off: In the power on state, long press the SW3 (P/P) button. The green light will flash quickly before shutting down.

### 5.2 Music Playback

- **Play/Pause:** Short press the SW3 (P/P) button.

- **Volume Adjustment:** Use the Volume + and Volume - buttons.
- **Track Navigation:** Use the Previous Track and Next Track buttons to skip songs.
- **Fast Forward/Rewind:** Long press the Next Track or Previous Track buttons respectively.

### 5.3 FM Radio

The device includes an FM radio function (87MHz-108MHz). Refer to the specific controls for switching to FM mode and tuning stations, typically involving a dedicated mode button or a long press combination on existing buttons.

## 6. MAINTENANCE

---

- After each use in water, rinse the MP3 player and headphones with fresh water to remove chlorine or salt residue.
- Wipe the device dry with the provided wipe cloth or a soft, clean cloth.
- Store the device in the storage bag in a cool, dry place when not in use.
- Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.
- Ensure the 4PIN 3.5mm port is clean and dry before charging or connecting to a computer.

## 7. TROUBLESHOOTING

---

- **Device not powering on:** Ensure the device is fully charged. Connect to a power source and try again.
- **No sound:** Check headphone connection. Ensure volume is not set to minimum. Verify music files are correctly loaded and supported formats.
- **Cannot transfer files:** Ensure the USB cable is securely connected to both the device and the computer. Check computer's device manager to see if the MP3 player is recognized. Try a different USB port or cable.
- **Water in ears/poor sound in water:** Ensure ear caps are correctly sized and create a tight seal. Adjust the fit of the headphones.

## 8. SPECIFICATIONS

---

Feature	Detail
Waterproof Standard	IPx8
Memory Capacity	4GB
Audio Formats	MP3, WMA, APE, FLAC
Battery Type	Built-in Polymer Lithium Battery (130mAh)
Playing Time	8-10 Hours
FM Radio Frequency	87MHz-108MHz
Connectivity	USB (4PIN 3.5mm port)
Compatibility	Win2000/ME/XP/Vista, OS X 8.6+, Linux 2.4.0
Item Weight	3.52 ounces
Package Dimensions	7.52 x 3.62 x 1.42 inches

Manufacturer	GOSHYDA
--------------	---------

## 9. WARRANTY AND SUPPORT

---

The non-volatile solid-state storage data is retained for at least 10 years. For any issues or support, please refer to the contact information provided with your purchase or on the manufacturer's official website.