

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beetel](#) /
- › [Beetel X73 Cordless Phone User Manual](#)

Beetel X73_Blue

Beetel X73 Cordless 2.4Ghz Landline Phone User Manual

Your comprehensive guide to setup, operation, and maintenance.

INTRODUCTION

Thank you for purchasing the Beetel X73 Cordless 2.4Ghz Landline Phone. This device is designed to provide reliable and convenient communication for your home or office. Please read this manual carefully before using the phone to ensure proper operation and to maximize its features.

For optimal performance and future reference, please keep this manual handy.



Image: The Beetel X73 Cordless Phone, showing the handset docked in its charging base.

IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Use only the power adapter and batteries supplied with this product.
- Do not expose the phone to water or moisture.

- Avoid placing the phone near heat sources or direct sunlight.
- Do not attempt to disassemble the unit. Refer all servicing to qualified personnel.
- Keep the phone away from medical devices, as it may cause interference.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Beetel X73 Cordless Handset
- Beetel X73 Base Unit
- Power Adapter
- Telephone Line Cord
- 2 x AAA Rechargeable Batteries (included)
- User Manual (this document)

PRODUCT OVERVIEW

Handset Features

- **LCD Display with Backlight:** Displays calling party phone number/name, battery capacity, and signal strength.
- **Illuminated Keypad:** For easy dialing in low light conditions.
- **2-Way Speaker Phone:** With adjustable receive volume for hands-free conversations.
- **Phone Book:** Storage capacity for up to 50 numbers with names.
- **Caller ID:** Displays caller information (requires subscription from your service provider).
- **Incoming Call Memory:** Stores up to 20 incoming calls with missed call indication.
- **Alarm Function:** Programmable alarm.
- **Rechargeable Battery:** Provides cordless operation.
- **Out of Range Warning Tone:** Alerts when the handset is too far from the base unit.
- **Adjustable Ringer Volume:** Customize ringer loudness.
- **Key Tone ON/OFF:** Option to enable or disable keypad tones.
- **Polyphonic Ring Tones:** Variety of ringtone options.
- **Handset Locator:** Button on base to find misplaced handset.



BEETEL

LCD DISPLAY WITH BACKLIGHT

Displays Calling Party
Phone Number/Name,
Battery Capacity,
Signal Strength



X73

Image: Close-up of the Beetel X73's LCD display, showing backlight and information.



BEETEL

ILLUMINATED KEYPAD



X73

Image: The illuminated keypad of the Beetel X73 handset.


b

BEETEL

2-WAY

SPEAKER PHONE

WITH ADJUSTABLE RECEIVE VOLUME

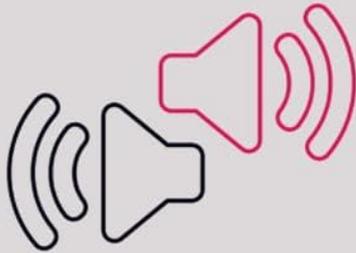

X73

Image: Illustration highlighting the 2-way speaker phone feature of the Beetel X73.



BEETEL

**50 NOS WITH NAME
PHONE BOOK
STORAGE CAPACITY**

X73

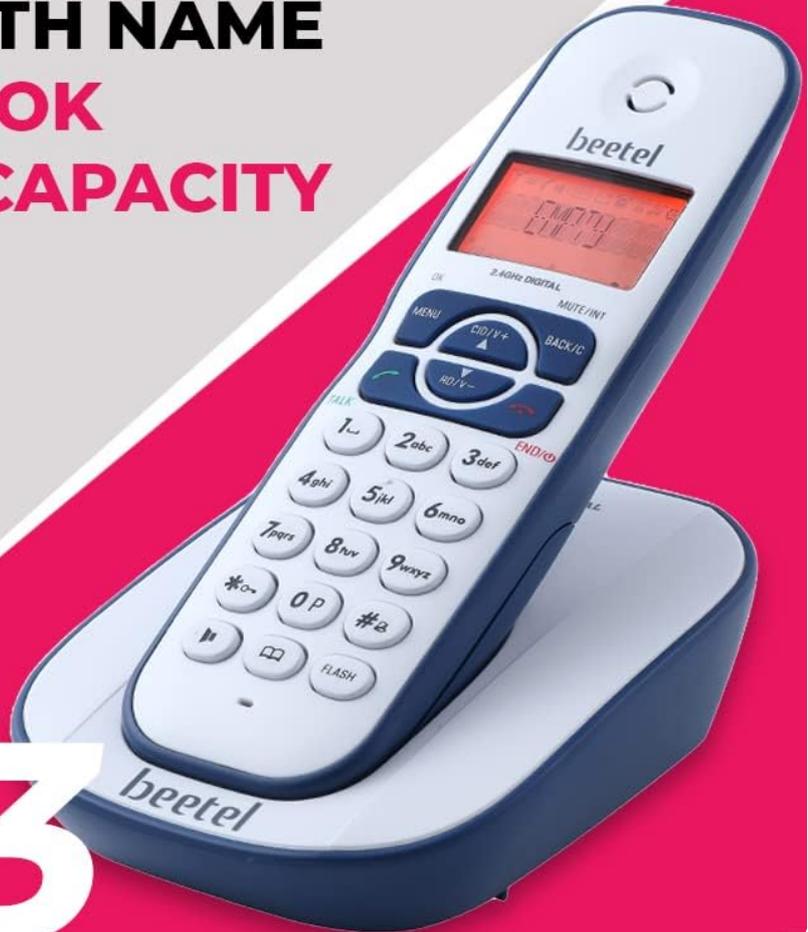


Image: Visual representation of the Beetel X73's 50-number phone book storage capacity.



OUT OF RANGE WARNING TONE



Image: Diagram showing the out-of-range warning tone feature of the Beetel X73.



BEETEL

RECHARGEABLE BATTERY



X73

Image: Illustration indicating the rechargeable battery feature of the Beetel X73.



BEETEL

20 NOS INCOMING CALLS MEMORY WITH MISSED CALL INDICATION

X73



Image: Visual showing the 20 incoming calls memory with missed call indication on the Beetel X73.



Image: A comprehensive diagram illustrating various features of the Beetel X73, including battery charging indicator, caller ID, alarm, handset locator, adjustable ringer volume, key tone control, and polyphonic ringtones.

SETUP GUIDE

1. Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the two AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover.

2. Base Unit Connection

1. Connect one end of the telephone line cord to the **LINE** jack on the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Connect the small end of the power adapter to the **DC IN 6V** jack on the base unit.
4. Plug the large end of the power adapter into a standard electrical outlet.

3. Initial Charging

Place the handset on the base unit. The display will show a charging indicator. For optimal battery performance, charge the handset for at least 12-15 hours before initial use, even if the display indicates a full charge.

OPERATING INSTRUCTIONS

Making a Call

1. Press the **TALK** button.
2. Dial the desired phone number.
3. To end the call, press the **END/C** button or place the handset back on the base unit.

Answering a Call

When the phone rings, press the **TALK** button to answer the call.

Using the Speaker Phone

During a call, press the **SPEAKER** button (or the button with the speaker icon) to activate the speakerphone. Press it again to switch back to the handset earpiece.

Adjusting Volume

During a call, use the **CID/V+** and **RD/V-** buttons to adjust the earpiece or speakerphone volume.

Phone Book Operations

1. **Storing a Number:** Press **MENU**, navigate to "PHONEBOOK", select "ADD NEW", enter the name and number, then save.
2. **Dialing from Phone Book:** Press the **PHONEBOOK** button (or navigate via **MENU**), scroll to the desired entry, then press **TALK**.

Caller ID and Call Log

When a call comes in, the caller's number and name (if available and stored in your phone book) will be displayed. To review past calls, press the **CID/V+** or **RD/V-** buttons in standby mode to scroll through the call log.

Setting the Alarm

Navigate to the "ALARM" option in the menu. Set the desired time and enable the alarm. Refer to the on-screen prompts for detailed steps.

MAINTENANCE

Cleaning

Wipe the phone and base unit with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the phone is unplugged before cleaning.

Battery Care

- Always use the supplied rechargeable AAA batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Replace batteries when their performance significantly degrades.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------|--|--|
| No dial tone. | Telephone line cord is not connected properly. Power adapter is not connected. | Ensure all cords are securely plugged in. Check your telephone service. |
| Handset display is blank. | Batteries are low or not installed correctly. | Place handset on base to charge. Check battery polarity. |
| Poor sound quality / Static. | Handset is too far from the base. Interference from other electronic devices. | Move closer to the base unit. Relocate the base unit away from other electronics. |
| Caller ID not working. | Caller ID service not subscribed. | Contact your telephone service provider to subscribe to Caller ID service. |
| Battery dies quickly. | Batteries are old or not fully charged. | Ensure initial 12-15 hour charge. Replace old batteries with new rechargeable AAA batteries. |

SPECIFICATIONS

- **Model:** Beetel X73 (X73_Blue)
- **Frequency:** 2.4 GHz Digital
- **Dimensions (L x W x H):** 3.15 x 4.72 x 6.3 inches (Handset and Base)
- **Item Weight:** 12.3 ounces (350 Grams)
- **Batteries:** 2 x AAA rechargeable batteries (included)
- **Phone Standby Time:** Up to 180 minutes (approximate)
- **Conference Call Capability:** 2-way
- **Caller Identification:** Yes
- **Manufacturer:** Beetel Teletech Limited

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Beetel website. Keep your purchase receipt as proof of purchase.

Beetel Official Website: www.beetel.in