

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer WCP119 15W Magnetic Wireless Charger User Manual

Energizer WCP119

Energizer WCP119 15W Magnetic Wireless Charger User Manual

Model: WCP119

1. INTRODUCTION

Thank you for choosing the Energizer WCP119 15W Magnetic Wireless Charger. This device is designed to provide convenient and efficient wireless charging for your compatible smartphones and other Qi-enabled devices. Its strong magnetic alignment ensures optimal charging performance, especially for iPhone 12 series and newer models with MagSafe compatibility.

Please read this manual thoroughly before using the product to ensure safe and proper operation. Keep this manual for future reference.

2. SAFETY INFORMATION

To prevent injury or damage to your device, please observe the following safety precautions:

- Do not expose the charger to liquids, moisture, or extreme temperatures.
- Do not disassemble, repair, or modify the charger. This will void the warranty and may cause damage or injury.
- Keep the charger away from strong magnetic fields, as this may interfere with its function.
- Ensure proper ventilation around the charger during use.
- Do not place metal objects or foreign materials on the charging surface.
- Disconnect the charger from the power source when not in use or during electrical storms.
- This charger features PowerSafe Management, which guarantees protection against short circuit, overcharge, and over-discharge for your wireless charger and devices.

PowerSafe Management

Guarantees against short circuit, overcharge and over-discharge for your wireless charger and devices.



Image: The Energizer WCP119 charger highlighting its PowerSafe Management features, including temperature protection, overcharging protection, prevention of short circuits, and over-discharge protection. This ensures safe and reliable charging for your devices.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Energizer WCP119 15W Magnetic Wireless Charger (with integrated Type-C cable)
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

The Energizer WCP119 is a compact and powerful magnetic wireless charger. Its sleek design and integrated cable make it highly portable and easy to use. The charger features a strong magnetic ring for precise alignment with compatible devices, ensuring efficient power transfer.



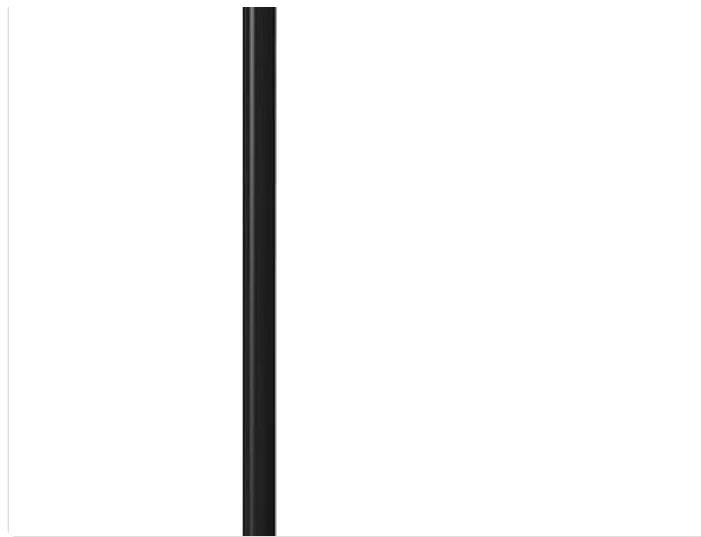


Image: The Energizer WCP119 magnetic wireless charger, black and circular, shown attached to the back of a white smartphone, demonstrating its magnetic connection and compact form factor.





Image: A direct top-down view of the Energizer WCP119 magnetic wireless charger, showcasing its circular design and the Energizer logo prominently displayed on its surface.





Image: A side profile view of the Energizer WCP119 magnetic wireless charger, illustrating its slim design and the integrated cable extending from its base.

The internal structure of the charger is engineered for optimal performance and safety, featuring multiple layers including a copper coil for efficient power transfer and circuit boards for intelligent power management.



Image: An exploded diagram showing the internal components of the Energizer WCP119 charger, revealing the charging coil, circuit board, and magnetic elements that contribute to its functionality.

5. SETUP

1. **Connect to Power:** Plug the USB Type-C connector of the Energizer WCP119 charger into a compatible USB power adapter (not included). For optimal charging speed, use a power adapter that supports Power Delivery (PD) or Quick Charge (QC) with an output of at least 9V/2A or 12V/1.5A.
2. **Power On:** Once connected to a power source, the charger is ready for use. There are no buttons or switches to activate.

6. OPERATING INSTRUCTIONS

Using the Energizer WCP119 is straightforward:

1. **Place Your Device:** Position your Qi-enabled smartphone or device onto the charging surface of the Energizer WCP119.
2. **Magnetic Alignment:** For iPhone 12 series and newer models, or devices with MagSafe compatible cases, the

charger will magnetically snap into perfect alignment, ensuring efficient and stable charging.

3. **Charging Confirmation:** Your device's screen should indicate that charging has begun. The charger supports fast charging: up to 7.5W for iPhones and up to 15W for other compatible Qi devices.
4. **Remove Device:** Once charging is complete, simply lift your device from the charger.





Image: A smartphone displaying a "100% Charged" notification, positioned next to the Energizer WCP119 magnetic wireless charger, indicating successful wireless charging.

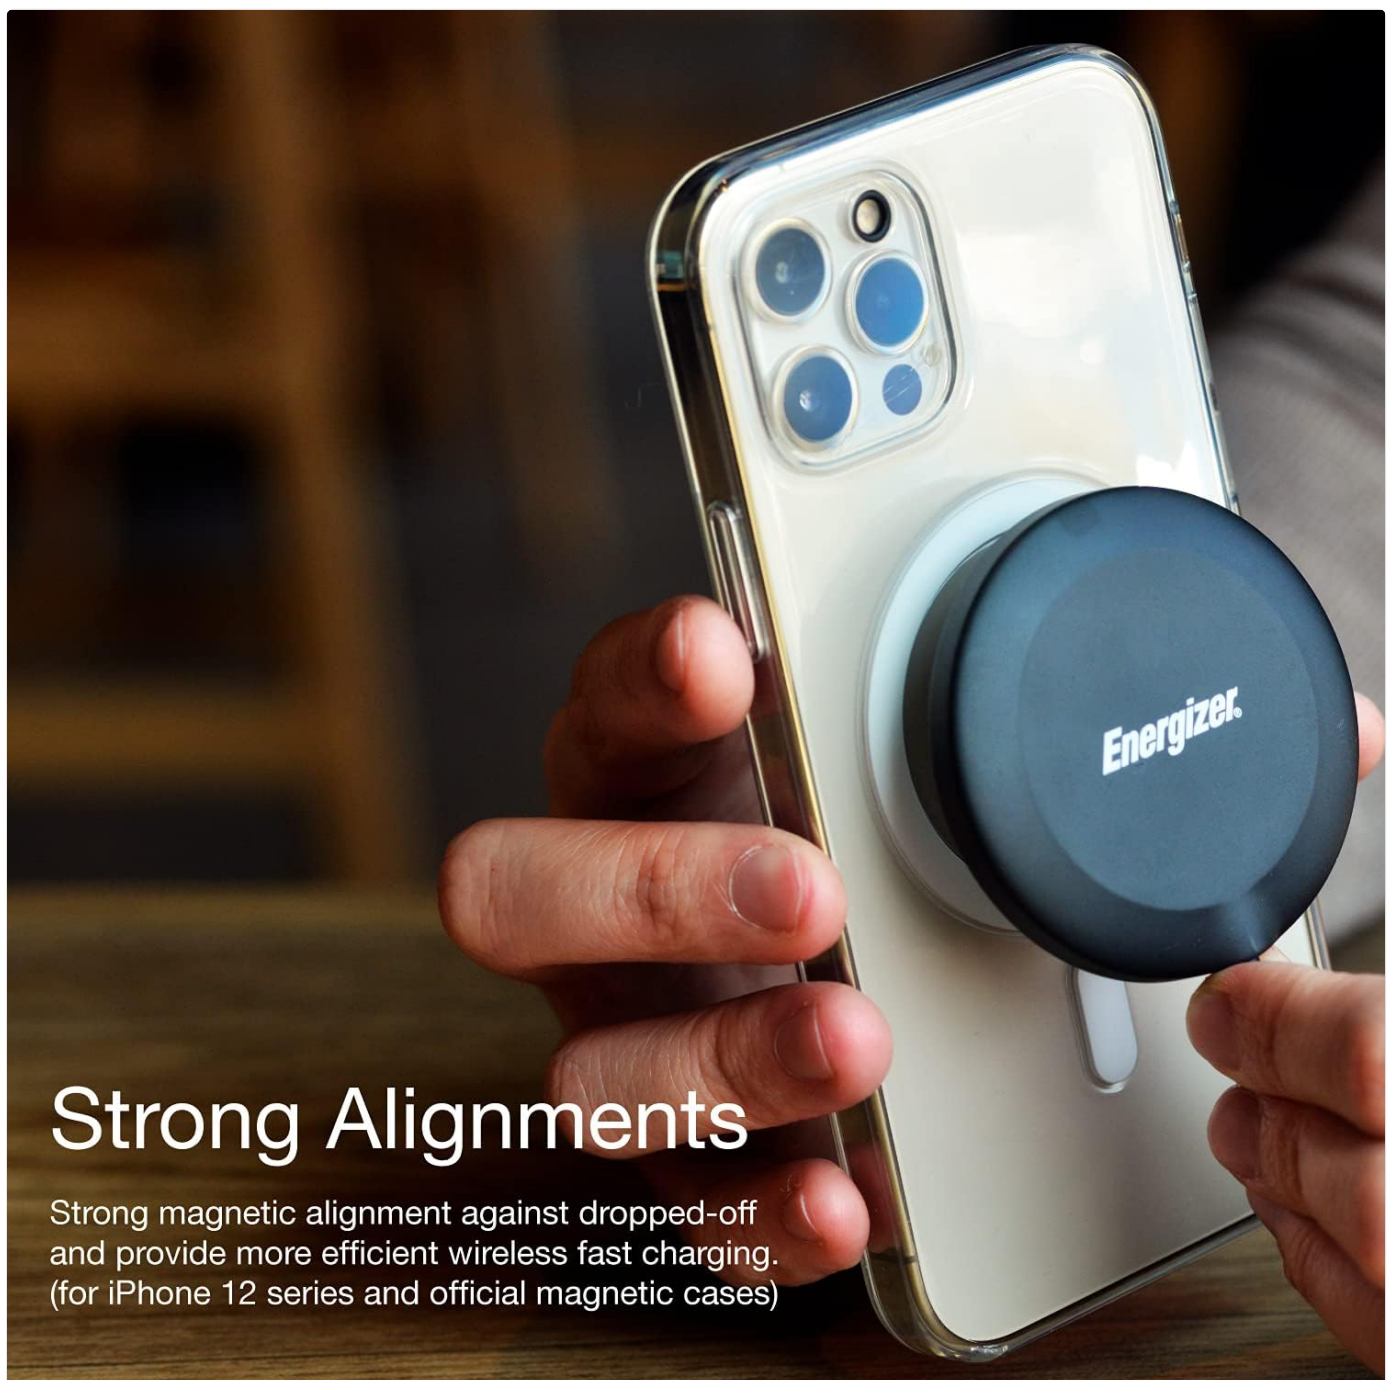


Image: A hand holding a smartphone with the Energizer WCP119 charger magnetically attached to its back, illustrating the strong magnetic

alignment feature that prevents accidental disconnections and ensures efficient wireless fast charging.

7. MAINTENANCE

To ensure the longevity and optimal performance of your Energizer WCP119 charger:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the charger. Do not use abrasive cleaners or solvents.
- **Storage:** Store the charger in a cool, dry place when not in use.
- **Cable Care:** Avoid bending or crimping the integrated Type-C cable excessively.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging.	Charger not connected to power.	Ensure the Type-C cable is securely plugged into a working power adapter and outlet.
	Device not properly aligned.	Reposition the device on the charger, ensuring it is centered. For magnetic devices, ensure proper snap.
	Device not Qi-enabled or has a thick case.	Verify your device supports wireless charging. Remove any thick or metallic cases.
	Foreign object on charging surface.	Remove any metal objects, credit cards, or other foreign materials from the charging pad.
Slow charging.	Power adapter insufficient.	Use a power adapter with at least 9V/2A or 12V/1.5A output, preferably PD or QC compatible.
	Device not optimally aligned.	Ensure the device is perfectly centered on the charging pad.
	Background apps on device.	Close unnecessary background applications on your device.
Charger or device gets hot.	Normal during wireless charging.	Slight warmth is normal. If excessively hot, remove the device and charger from power.
	Poor alignment or foreign object.	Ensure proper alignment and remove any foreign objects.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	WCP119
Brand	Energizer
Input Voltage	9 Volts
Amperage	2 A
Power Output	15 Watts (Max)
Special Features	Fast Charging, Magnetic Alignment
Compatible Devices	Mobile phones (Qi-enabled)
Connectivity Technology	USB Type-C
Components Included	Type-C Cable (integrated)

10. WARRANTY AND SUPPORT

Information regarding specific warranty details or availability of spare parts for the Energizer WCP119 is not provided in the product specifications. For any support inquiries, warranty claims, or technical assistance, please contact the seller or the official Energizer customer support channel through their website or contact information provided at the point of purchase.

Always retain your proof of purchase for any warranty-related claims.

© 2024 Energizer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09CNSWYLK>

More documents and user manuals: <https://manuals.plus/>