

ZdalaMit AK59-00061J

ZdalaMit AK59-00061J Remote Control User Manual

FOR SAMSUNG DVD VCR COMBO MODELS

1. INTRODUCTION

This manual provides instructions for the ZdalaMit AK59-00061J replacement remote control. This remote is designed to operate various Samsung DVD VCR Combo models without requiring any programming. Simply install batteries, and the remote is ready for use.

Compatible Samsung DVD VCR Combo Models:

- DVD-V9800
- DVD-V9700
- DVD-V9800M
- DVD-V9800/XAA
- DVD-V9700/XAA

2. PACKAGE CONTENTS

- 1 x ZdalaMit AK59-00061J Remote Control

Note: Batteries and additional instructions are not included in the package.

3. PRODUCT OVERVIEW

The ZdalaMit AK59-00061J remote control features a standard layout for easy operation of your Samsung DVD VCR Combo unit. Below is an image illustrating the remote's design and button placement.



Figure 3.1: Front view of the ZdalaMit AK59-00061J Remote Control.

Button Functions:

- **POWER:** Turns the connected device (TV, DVD, VCR) on or off.
- **SELECT (TV, DVD, VCR):** Toggles between TV, DVD, and VCR operating modes.
- **INPUT SEL:** Selects the input source on the TV.
- **OPEN/CLOSE:** Opens or closes the DVD/VCR disc tray.
- **F.ADV/SKIP:** Fast forwards through content or skips to the next track/chapter.
- **Numeric Keypad (0-9, TV 100+):** Used for direct channel selection or entering numerical values.
- **REC:** Initiates recording on the VCR.
- **SPEED:** Adjusts playback speed.
- **ZOOM:** Zooms in on the picture during playback.
- **Playback Controls (Rewind, Play, Fast Forward, Stop, Pause):** Standard media playback functions.
- **TV VOL (+/-):** Adjusts the television volume.
- **TV MUTE:** Mutes the television audio.
- **TRK/TV CH (+/-):** Changes television channels or adjusts VCR tracking.
- **AUDIO:** Selects audio tracks or modes.

- **MENU:** Accesses the main menu of the DVD player or VCR.
- **RETURN:** Returns to the previous menu or screen.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used for menu navigation and confirming selections.
- **DISC MENU/EZ VIEW:** Accesses the DVD disc menu or EZ View feature.
- **INFO:** Displays information about the current program or disc.
- **CLEAR:** Clears input or cancels a function.
- **SUBTITLE:** Selects subtitle options for DVDs.
- **MODE:** Changes operating modes or settings.
- **ANGLE:** Changes camera angles on compatible DVDs.
- **REPEAT:** Repeats playback of a track, chapter, or disc.
- **TIMER:** Sets timer functions for recording.
- **SEARCH:** Initiates a search function.

4. SETUP

4.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Ensure batteries are inserted correctly to prevent damage to the remote control. Do not mix old and new batteries or different types of batteries.

4.2 Initial Use

No programming or pairing is required for this replacement remote control. Once batteries are installed, the remote is ready for immediate use with compatible Samsung DVD VCR Combo models.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. **Power On/Off:** Press the **POWER** button to turn your Samsung DVD VCR Combo unit on or off.
2. **Select Mode:** Use the **SELECT (TV, DVD, VCR)** buttons to switch between controlling your TV, DVD player, or VCR.
3. **Input Selection:** Press **INPUT SEL** to change the input source on your television.
4. **Volume Control:** Use **TV VOL +** or **TV VOL -** to adjust the television volume. Press **TV MUTE** to mute the sound.
5. **Channel Change:** Use **TRK/TV CH +** or **TRK/TV CH -** to change television channels.

5.2 DVD/VCR Playback

1. **Insert Disc/Tape:** Ensure a DVD disc or VCR tape is properly inserted into the unit.
2. **Play:** Press the **PLAY** button to begin playback.
3. **Pause:** Press the **PAUSE** button to temporarily stop playback. Press again to resume.
4. **Stop:** Press the **STOP** button to end playback.

5. **Fast Forward/Rewind:** Use the **FAST FORWARD** or **REWIND** buttons to quickly scan through content.
6. **Skip/Track:** Use **F.ADV/SKIP** to skip chapters/tracks forward.
7. **Menu Navigation:** Use the **MENU** button and the navigation arrows (**Up, Down, Left, Right**) with **ENTER** to navigate disc or VCR menus.

6. TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> • Check if batteries are inserted correctly with correct polarity. • Replace old batteries with new 1.5V AAA alkaline batteries. • Ensure there are no obstructions between the remote and the device's infrared sensor. • Verify that the remote is pointed directly at the device.
Specific functions are not working.	<ul style="list-style-type: none"> • Ensure the remote is in the correct operating mode (TV, DVD, or VCR) using the SELECT buttons. • Some functions may be specific to the original device and might not be fully supported by a replacement remote, though this model is designed for direct compatibility.
Remote works intermittently.	<ul style="list-style-type: none"> • Batteries may be low; replace them. • Clean the remote's infrared emitter and the device's sensor with a soft, dry cloth.

7. SPECIFICATIONS

Feature	Detail
Model Name	AK59-00061J
Brand	ZdalaMit
Compatible Devices	Samsung DVD VCR Combo (DVD-V9800, DVD-V9700, DVD-V9800M, DVD-V9800/XAA, DVD-V9700/XAA)
Connectivity Technology	Infrared (IR)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Special Feature	Pre-programmed, no setup required
Color	Black
Button Quantity	18
Maximum Range	33 Feet (approx. 10 meters)

Feature	Detail
Item Weight	40 Grams
Item Dimensions (L x W x H)	7.94" x 1.99" x 0.55" (approx. 20.17 cm x 5.05 cm x 1.40 cm)

8. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

9. WARRANTY INFORMATION

This ZdalaMit remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

Please retain your proof of purchase for warranty claims.

10. SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the seller or manufacturer through your purchase platform. Provide your model number (AK59-00061J) and a detailed description of the problem for efficient support.