

[Manuals.plus](#) /

› [DOBBOR](#) /

› DOBBOR 1500W Stand Mixer User Manual

DOBBOR SM-1553

DOBBOR 1500W Stand Mixer User Manual

Model: SM-1553

1. INTRODUCTION

Thank you for choosing the DOBBOR 1500W Stand Mixer. This powerful and versatile kitchen appliance is designed to simplify your baking and cooking tasks, offering efficient mixing, kneading, and whipping capabilities. With its robust motor, large capacity bowl, and multiple speed settings, it is an essential tool for any kitchen. Please read this manual carefully before first use to ensure safe and optimal operation.



Image: The DOBBOR 1500W Stand Mixer in silver, showcasing its main components including the whisk attachment and large stainless steel bowl.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the mixer.
- To protect against risk of electrical shock, do not put the mixer base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from attachments during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always ensure the mixer head is locked down before operation.
- The mixer features an automatic power cut-off when the head is tilted up during operation, preventing accidental injury.

3. PACKAGE CONTENTS

Your DOBBOR Stand Mixer package includes the following items:

- DOBBOR Stand Mixer Base Unit
- 9.5 Litre Stainless Steel Mixing Bowl with Handle
- Dough Hook Attachment
- Beater Attachment
- Whisk Attachment
- Splash Guard

4. SETUP

4.1 Placement

Place the mixer on a clean, dry, and stable surface. The mixer is equipped with 5 silicone suction cups on its base to ensure stability during operation. Press down gently to secure the mixer to the countertop.



Image: The underside of the mixer base, highlighting the strong silicone suction cups for secure placement.

4.2 Attaching the Mixing Bowl

1. Ensure the mixer head is in the raised position.
2. Place the stainless steel mixing bowl onto the base, aligning the bowl's tabs with the slots on the mixer base.
3. Rotate the bowl clockwise until it locks securely into place. You will hear a click.

4.3 Attaching Accessories (Dough Hook, Beater, Whisk)

1. With the mixer head raised, push the desired attachment (dough hook, beater, or whisk) upwards onto the attachment shaft.
2. Rotate the attachment counter-clockwise until it locks into place.
3. To remove, reverse the process: push up and rotate clockwise.

4.4 Tilting the Mixer Head

The mixer features a convenient tilt-head design for easy access to the bowl and attachments. To tilt the head:

1. Press the tilt-head release button located on the side of the mixer.
2. Gently lift the mixer head upwards until it locks into the tilted position.
3. To lower, press the release button again and gently push the head down until it clicks into the locked operating position.



Image: A detailed view of the mixer's double rod tilt head adjustment mechanism, indicating how it lifts smoothly.

5. OPERATING INSTRUCTIONS

5.1 Power and Speed Control

The DOBBOR Stand Mixer features a powerful 1500W motor and a 7-speed rotary dial with an additional Pulse function. To operate:

1. Ensure the mixer is properly assembled and plugged into a suitable power outlet (220V AC).
2. Turn the rotary dial to the desired speed setting.
3. For a quick burst of power or to incorporate ingredients rapidly, turn the dial to the 'P' (Pulse) setting and hold. Release to stop.



6 Speed Options & Pulse Function



1-2 Dough Hook
(e.g bread or short pastry)



3-4 Beater
(e.g crepes or sponge mixture)



5-6 Whisk
(Salad, Cookie Dough, Mashed Potatoes)



! Pulse
(when require a quick burst of power or for quick incorporations)

Image: The mixer's speed control dial, illustrating the 6-speed options and Pulse function, with recommended attachment pairings.

5.2 Recommended Speed Settings and Attachments

Attachment	Recommended Speed	Usage / Best For
Dough Hook	Speed 1-3	Kneading heavy mixtures like bread dough, pizza dough, and short pastry.
Beater	Speed 3-4	Mixing medium-heavy mixtures such as cake batter, cookie dough, mashed potatoes, and salads.
Whisk	Speed 5-6	Whipping light mixtures like cream, egg whites, and sauces.
Pulse (P)	Momentary	Quick mixing, incorporating ingredients, or achieving specific textures.



9.5L

Grande Capacité

				
Farine	Oeuf	Crème	Le Beurre	Salade
✓	✓	✓	✓	✓
2,5 kg	25pcs	2.5L	2.5L	1200g

Image: Visual guide to the three main attachments (dough hook, beater, whisk) and their ideal applications for various food preparations.

5.3 Large Capacity Bowl

The 9.5-liter stainless steel mixing bowl is designed to accommodate large batches, suitable for family use or preparing meals for up to 10 people. Its integrated handle makes it easy to carry and pour.

Fast and Convenient



Image: The spacious 9.5-liter stainless steel mixing bowl, highlighting its capacity and convenient handle.

5.4 Low Noise Operation

The DOBBOR Stand Mixer operates with a low noise level, typically below 40dB, ensuring a quieter kitchen environment even during intensive mixing tasks. Note that noise may increase slightly at higher speeds.

Working Noise low to whisper

Kneading about
25-40 dB



Noise may raise up with higher working speed

Image: The stand mixer in operation, demonstrating its low noise level with a cat sleeping peacefully nearby, indicating quiet performance.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Bowl and Attachments

The stainless steel mixing bowl, dough hook, beater, and whisk attachments are all dishwasher safe for convenient cleaning. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive cloth.



Image: A visual representation of the mixer's easy cleaning process, with water droplets on the surface and a hand wiping it with a cloth.

6.2 Cleaning the Main Unit

To clean the main mixer unit, wipe it with a damp cloth. Do not immerse the main unit in water or any other liquid. Do not use abrasive cleaners or scouring pads, as these may damage the surface.

6.3 Overheat Protection

The DOBBOR Stand Mixer is equipped with an intelligent heat dissipation system and overheat protection. If the motor becomes too hot during prolonged use, the mixer may automatically shut off to prevent damage. Allow the unit to cool down for at least 20-30 minutes before resuming operation.



Image: An internal diagram illustrating the intelligent heat dissipation system within the mixer, showing airflow for cooling.

7. TROUBLESHOOTING

If you encounter any issues with your DOBBOR Stand Mixer, please refer to the following common problems and solutions:

- **Mixer does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the mixer head is fully locked down.
- **Mixer stops during operation:** The overheat protection may have activated. Unplug the mixer and let it cool down for 20-30 minutes before restarting. Reduce the load or mixing time for very thick mixtures.
- **Attachments are difficult to install/remove:** Ensure the mixer head is fully raised and locked. Apply a small amount of food-grade lubricant to the shaft if necessary.
- **Ingredients are not mixing evenly:** Ensure the correct attachment is being used for the type of mixture. For very small quantities, the planetary mixing action may not reach the very bottom; use a spatula to scrape down the sides of the bowl as needed.
- **Excessive noise or vibration:** Ensure the mixer is placed on a stable, flat surface and the suction cups are engaged. Check that the bowl and attachment are securely locked in place.

If the problem persists after trying these solutions, please contact customer support.


8. SPECIFICATIONS

Feature	Specification
Brand	DOBBOR
Model Number	SM-1553
Color	Silver
Dimensions (L x W x H)	14.1 x 16.5 x 10.6 cm (5.55 x 6.5 x 4.17 inches)
Weight	6 Kilograms (13.2 lbs)
Capacity	9.5 Litres
Power	1500 Watts
Voltage	220 Volts (AC)
Material	Silicone (base), Stainless Steel (bowl, attachments)
Number of Speeds	7 + Pulse Function
Noise Level	40 dB
Special Features	Removable Bowl, Tilt-Head Design, Overheat Protection, Suction Cup Base

20% Performance Improvement



1500W High Power

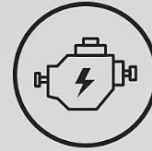

Pure copper motor



Efficient Mixing

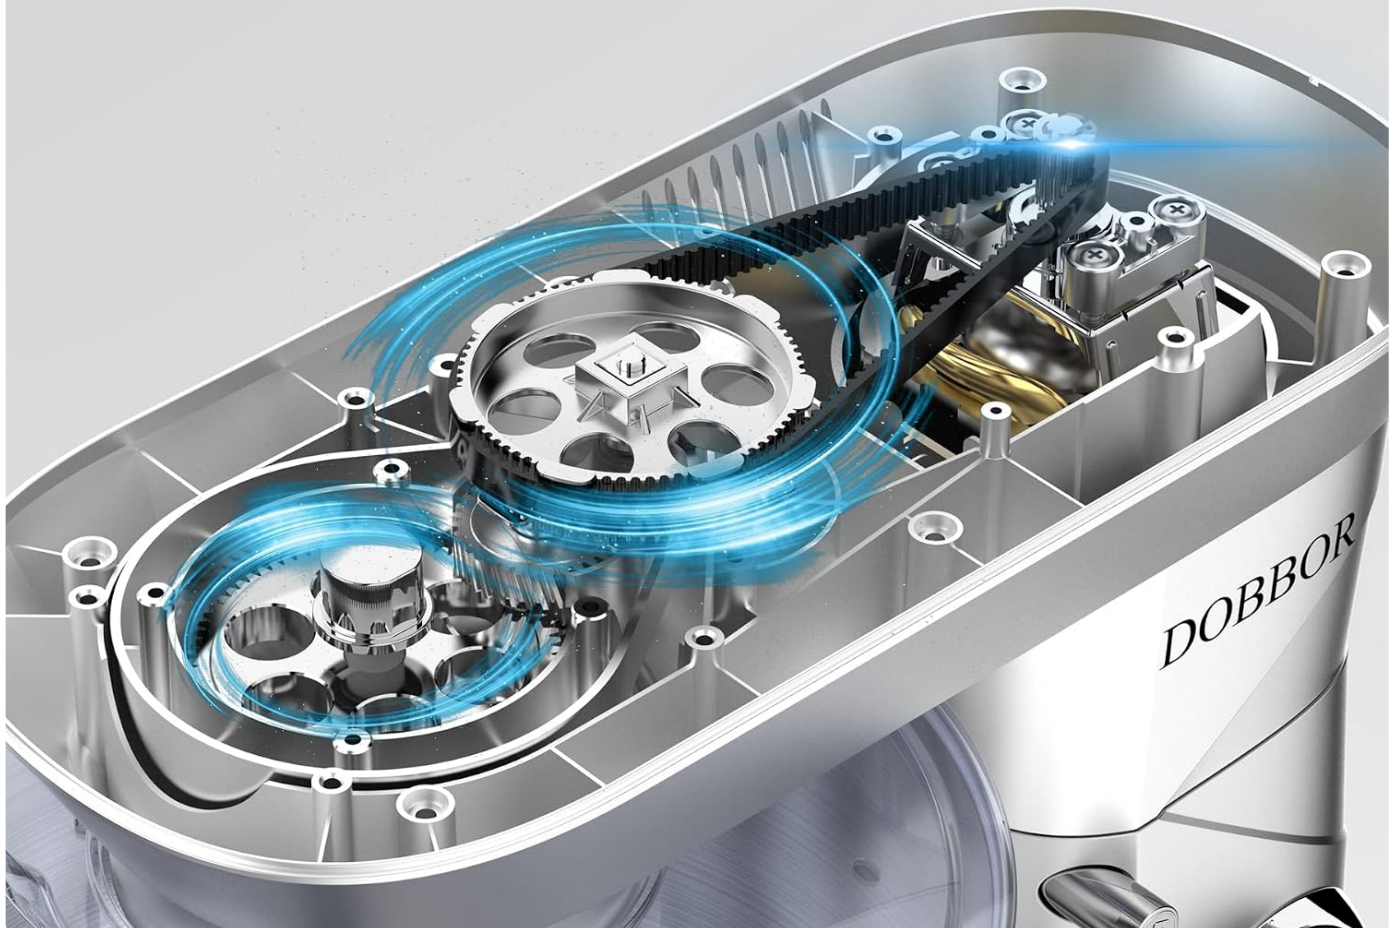


Image: An internal diagram illustrating the 1500W high-power motor and efficient mixing gears of the DOBBOR Stand Mixer.

9. WARRANTY AND SUPPORT

Your DOBBOR Stand Mixer comes with a **5-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable performance under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact DOBBOR customer service. Please have your model number (SM-1553) and proof of purchase ready when contacting support.

We are committed to providing excellent customer service and will respond to your inquiries within 24 hours.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09CPMX35X>

More documents and user manuals: <https://manuals.plus/>