

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [findtime](#) /

› findtime Military Tactical Sport LED Digital Watch FTSADSHL739 Instruction Manual

findtime FTSADSHL739Black

findtime Military Tactical Sport LED Digital Watch FTSADSHL739 Instruction Manual

Model: FTSADSHL739Black

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the findtime Military Tactical Sport LED Digital Watch. This watch is designed for durability and functionality, suitable for various indoor and outdoor activities. It combines analog and digital displays with multiple features to assist you in daily life and sports. Please read this manual carefully to understand the watch's operation and ensure proper use.



Image: Close-up of the findtime Military Tactical Sport Digital Watch, highlighting its black casing and detailed dial.

2. KEY FEATURES

- **Dual Display:** Analog and Digital time display.
- **Multifunctionality:** Stopwatch, Backlight, Alarm, 12/24 Hour format, Calendar (Week/Date/Month).
- **Water Resistance:** 30 meters (3ATM) for daily use.
- **Durability:** Shockproof design.
- **Comfort:** Durable black silicone strap.

MULTIFUNCTION MILITARY WATCH



Image: The watch face with icons illustrating its various functions including LED backlight, water resistance, alarm, calendar, stopwatch, dual time display, hourly chime, and shockproof capabilities.

3. WATCH COMPONENTS

Familiarize yourself with the buttons and their functions:

- **LIGHT Button (Top Left):** Activates the LED backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch, Date).
- **START Button (Top Right):** Used to start/stop functions in stopwatch mode or adjust settings.
- **RESET Button (Bottom Right):** Used to reset functions or select settings.
- **Crown (Right Side):** Used for setting analog time.



Image: The findtime Military Tactical Sport Digital Watch worn on a wrist, displaying its black finish and button layout.

4. SETUP AND OPERATING INSTRUCTIONS

4.1 Setting Analog Time

1. Pull out the crown on the right side of the watch.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back in to start the analog timekeeping.

4.2 Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display flashes, indicating setting mode.
2. Use the **START** button to adjust the flashing value (e.g., seconds, minutes, hours).
3. Press the **RESET** button to move to the next setting item (e.g., hour, minute, month, date, day).
4. Repeat steps 2 and 3 until all desired settings (time, date, 12/24 hour format) are configured.
5. Press the **MODE** button once more to exit the setting mode.

4.3 Using the Alarm

1. Press the **MODE** button until you reach the Alarm mode (usually indicated by 'AL' or a bell icon).
2. Press the **START** button to toggle the alarm ON/OFF.
3. To set the alarm time, press and hold the **RESET** button until the alarm hour flashes.
4. Use the **START** button to adjust the hour. Press **RESET** to move to minutes, then use **START** to adjust minutes.
5. Press **MODE** to exit alarm setting.

4.4 Using the Stopwatch

1. Press the **MODE** button until you reach the Stopwatch mode (usually indicated by 'ST' or 'STOP').
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

4.5 Activating the Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for better visibility in low-light conditions. The backlight will remain on for a few seconds.



Image: Two findtime watches, one demonstrating the green LED backlight illuminating the digital display.

5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dirt and moisture. For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- **Avoid Chemicals:** Do not expose the watch to strong chemicals, solvents, or detergents, as these can damage the case, strap, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme hot or cold temperatures, as this can affect battery life and accuracy.
- **Impact:** While shockproof, avoid unnecessary impacts or drops to prevent damage.
- **Battery Replacement:** When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have this done by a professional watch repair service to ensure water resistance is maintained.

6. WATER RESISTANCE GUIDELINES

This watch is water resistant to 30 meters (3ATM). This means it is suitable for daily use and can withstand splashes of water or brief immersion, such as during rain or hand washing.

- **DO NOT** press any buttons while the watch is submerged in water.
- **NOT** suitable for showering, bathing, swimming, or diving.
- Avoid using the watch in extreme hot or cold water, as temperature changes can affect the water-resistant seals.



Image: The watch partially submerged in water, demonstrating its water resistance for daily activities.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands do not move.	Crown is not pushed in completely, or battery is low/depleted.	Ensure the crown is fully pushed in. If the issue persists, the battery may need replacement.
Digital display is dim or blank.	Low battery.	Replace the battery.
Time is inaccurate.	Incorrect time setting or low battery.	Re-set the time according to section 4.1 and 4.2. If inaccuracy continues, replace the battery.

Problem	Possible Cause	Solution
Water inside the watch.	Buttons pressed underwater, crown not fully pushed in, or exceeding water resistance limits.	Immediately take the watch to a professional for inspection and repair to prevent further damage. Avoid pressing buttons underwater and ensure the crown is always fully pushed in.

8. SPECIFICATIONS

- **Model Number:** FTSADSHL739Black
- **Case Diameter:** 53.07mm (2.09 inches)
- **Case Thickness:** 16.33mm (0.64 inches)
- **Band Width:** 22mm (0.87 inches)
- **Band Length:** 255mm (10.04 inches)
- **Water Resistance:** 30M (3ATM)
- **Battery:** 1 x Unknown battery (included)
- **Manufacturer:** findtime

9. WARRANTY AND SUPPORT

Your findtime watch comes with a commitment to quality. If you have any questions or encounter issues with your product, please do not hesitate to contact our customer support. We are dedicated to ensuring customer satisfaction and will assist you with any concerns.

For support, please refer to the contact information provided with your purchase or visit the official findtime website.