#### Manuals+

Q & A | Deep Search | Upload

#### **MAXCOM FW-BL**

# **MAXCOM Portable Electric Space Heater User Manual**

Model: FW-BL

#### 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the MAXCOM Portable Electric Space Heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Automatic Shut-off: For your safety, the heater is equipped with a triple safety protection system. It will automatically shut off if tilted by more than 45 degrees or after 3 hours of continuous operation.
- Material Safety: The surface is made of waterproof and skin-friendly fabric, safe for bare feet, children, and pets.
- Stability: The bottom features non-slip silicone particles to prevent wobbling during use.
- **Electrical Safety:** Ensure the heater is plugged into a 110V power outlet. Do not overload circuits. Do not use with extension cords unless absolutely necessary and rated for the heater's power.
- **Placement:** Do not cover the heater. Keep it away from water or damp environments. Ensure adequate ventilation around the unit.



Figure 1.1: The heater automatically turns off if tilted beyond 45 degrees for enhanced safety.

#### 2. PRODUCT OVERVIEW

The MAXCOM Portable Electric Space Heater is designed to provide personal warmth for your legs, ankles, and feet. Its foldable design makes it highly portable and suitable for various environments.

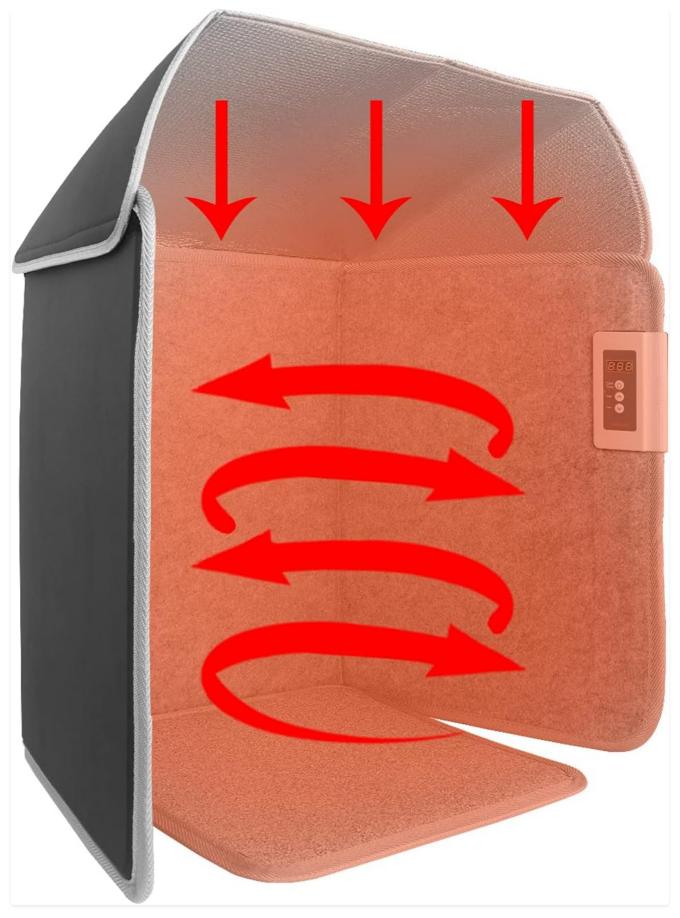


Figure 2.1: MAXCOM Portable Electric Space Heater in its fully unfolded state.

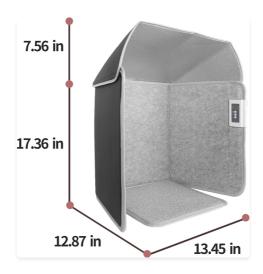


Figure 2.2: Product dimensions for proper placement.

# 3. SETUP AND ASSEMBLY

The MAXCOM Portable Electric Space Heater requires no tools for assembly and is ready for use in minutes.

- 1. **Unfold the Heater:** Gently unfold the three panels of the heater until it forms an open box-like structure. The top panel can be used to enclose the heat or folded back if preferred.
- 2. **Positioning:** Place the heater on a flat, stable surface, such as under a desk or in your desired personal heating area. Ensure the non-slip silicone particles on the bottom are making full contact with the surface.
- 3. Connect Power: Plug the power cord into a standard 110V electrical outlet.



Figure 3.1: The heater unfolds from a compact cube for easy setup.



Figure 3.2: The top cover can be used to enhance heat retention.

#### 4. OPERATING INSTRUCTIONS

The control panel allows for easy adjustment of temperature and timer settings.

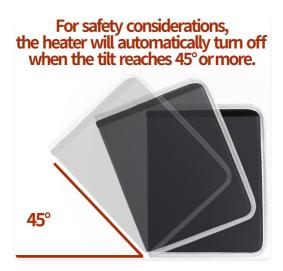


Figure 4.1: Control panel for temperature and timer settings.

## 4.1 Power On/Off

- To Turn On: Long press the power button () for 2 seconds. The digital display will illuminate.
- To Turn Off: Long press the power button () for 2 seconds. The display will turn off.

## **4.2 Temperature Control**

The heater offers 7 temperature levels, ranging from 85°F to 145°F.

- Press the 'High' button (^) to increase the temperature setting.
- Press the 'Low' button (v) to decrease the temperature setting.
- The current temperature setting will be displayed on the digital screen.

#### **4.3 Timer Function**

Set the heater to operate for a specific duration from 1 to 12 hours.

- Press the 'Power/Timing' button () briefly to cycle through the available timer settings (e.g., 01h, 02h, ..., 12h).
- Once the desired time is selected, the heater will operate for that duration and then automatically shut off.



Figure 4.2: The heater provides warmth to alleviate discomfort from prolonged sitting.

### 5. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your heater.

- Cleaning: Always unplug the heater and allow it to cool completely before cleaning. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Storage:** When not in use, fold the heater into its compact cube shape. Store it in a cool, dry place away from direct sunlight and moisture.
- **Inspection:** Periodically inspect the power cord and plug for any signs of damage. If damaged, discontinue use and contact customer support.

## 6. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power outlet issue; power button not long-pressed.	Ensure power cord is securely plugged into a working 110V outlet. Long press the power button for 2 seconds.
Heater turns off unexpectedly.	Tilted more than 45 degrees; 3-hour continuous operation limit reached; timer setting expired.	Ensure heater is upright and stable. If tilted, reposition it. If 3 hours have passed or timer expired, restart the unit if continued operation is desired.
Insufficient heat output.	Low temperature setting; large room size; external drafts.	Increase temperature setting using the 'High' button. Ensure the top cover is utilized for better heat retention. Note this is a personal space heater, not for heating entire rooms.

# 7. SPECIFICATIONS

Feature	Specification
Brand	MAXCOM
Model Number	FW-BL
Special Feature	Portable, Noiseless, Foldable
Color	Black
Form Factor	Mat
Indoor/Outdoor Usage	Indoor
Product Dimensions (D x W x H)	12.87" x 13.45" x 17.36"
Recommended Uses	Kitchen, Office, Home, Under Desk
Mounting Type	Floor Mount
Room Type	Bedroom, Home Office, Study Room
Burner Type	Radiant
Heat Output	85°F to 145°F
Fuel Type	Electric
Number of Speeds	7 (Temperature Levels)
Voltage	110 Volts
Item Weight	4.61 pounds

## 8. WARRANTY AND SUPPORT

MAXCOM stands behind the quality of its products.

- **Return/Refund Policy:** This product is covered by a 60-day free return/refund policy from the date of purchase.
- **Customer Support:** For any questions, concerns, or assistance with your MAXCOM Portable Electric Space Heater, please contact our customer support team.

Contact Information:

Email: support@maxcom.com

Phone: 1-XXX-XXX-XXXX (Placeholder)

© 2025 MAXCOM. All rights reserved.