

JOYOUNG SK-T1 SALLY

Joyoung x Line Friends 2-in-1 Sandwich and Waffle Maker, Sally - Instruction Manual

Model: SK-T1 SALLY

[Overview](#) [Safety](#) [Components](#) [Setup](#) [Operation & Support](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warra](#)

1. PRODUCT OVERVIEW

The Joyoung x Line Friends 2-in-1 Sandwich and Waffle Maker, Sally edition, is a versatile kitchen appliance designed for preparing both sandwiches and waffles. It features a compact, handbag-like design and is equipped with interchangeable plates for different cooking needs. The appliance heats evenly on both sides and includes self-controlled temperature for ease of use.

Key features include:

- Safety-mark registered with a 3-pin adapter plug for secure operation.
- Multi-functional design with included sandwich and waffle grill plates.
- 600W fast heating capability, allowing sandwiches to be grilled in approximately 3 minutes.
- Intelligent automatic heat and timing control for consistent results.
- Compact design for convenient storage.



Figure 1.1: The Joyoung x Line Friends 2-in-1 Sandwich and Waffle Maker in its closed position, showcasing the yellow Sally design.

SMALL AND BEAUTIFUL SHOWING ITS FEATURES WHEREVER YOU PLACE IT

Handbag-like shape, small and cute
Kitchen utensils should also be good
inside out



Figure 1.2: The compact and portable design of the Joyoung Sandwich and Waffle Maker, resembling a handbag.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance has a 3-pin adapter plug for safety.

3. PRODUCT COMPONENTS

The Joyoung x Line Friends 2-in-1 Sandwich and Waffle Maker package includes the following items:

- 1 x Joyoung Sandwich and Waffle Maker Unit (Sally edition)
- 1 x Set of Sandwich Grill Plates (pre-installed or separate)
- 1 x Set of Waffle Grill Plates
- User Manual (this document)

Joyoung

LINE FRIENDS



- ✓ Easy to clean
- ✓ 2 Different toaster trays
- ✓ Anti-slip



Figure 3.1: The main unit with its two different types of toaster trays (sandwich and waffle plates) and highlighting its anti-slip feature.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain the packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. The grill plates should be removed and washed with warm, soapy water, then rinsed and thoroughly dried. Ensure all parts are completely dry before reassembling.
3. **Installing Grill Plates:**
 - Open the appliance.
 - Identify the desired grill plates (sandwich or waffle).
 - Align the plates with the slots in the appliance and gently press them into place until they click securely. The one-piece disassembly and replacement design makes this process straightforward.
4. **Placement:** Place the appliance on a stable, heat-resistant, and flat surface. Ensure there is adequate ventilation around the unit. The non-slip foot pads provide stability.
5. **Power Connection:** Plug the 3-pin adapter plug into a suitable 220V power outlet. The appliance is now ready for use.

5. OPERATING INSTRUCTIONS

The Joyoung 2-in-1 Sandwich and Waffle Maker features self-controlled temperature and no button operation, simplifying the cooking process.

1. **Preheating:**
 - Ensure the desired grill plates are securely installed.
 - Close the lid of the appliance.
 - Plug the appliance into the power outlet. The indicator light will illuminate, signifying that the unit is preheating.
 - Allow the appliance to preheat for approximately 3 minutes. The 600W rapid heating ensures quick readiness. The indicator light may turn off or change color once the optimal temperature is reached, depending on the model.
2. **Cooking Sandwiches:**
 - Once preheated, carefully open the lid.
 - Place your prepared sandwich ingredients onto the bottom sandwich grill plate. Do not overfill.
 - Gently close the lid. The intelligent auto heat and timing control will manage the cooking process.
 - Cook for approximately 3-5 minutes, or until the sandwich is golden brown and crispy to your preference. Cooking time may vary based on ingredients and desired crispness.
 - Carefully open the lid and remove the cooked sandwich using a heat-resistant plastic or wooden utensil. Avoid metal utensils to prevent scratching the non-stick coating.
3. **Cooking Waffles:**
 - Ensure the waffle grill plates are installed and the unit is preheated.
 - Pour the waffle batter evenly onto the center of the bottom waffle plate. Do not overfill, as the batter will expand.
 - Close the lid.
 - Cook for approximately 4-7 minutes, or until the waffles are golden brown and cooked through. Cooking time depends on batter consistency and desired crispness.
 - Carefully open the lid and remove the cooked waffle using a heat-resistant plastic or wooden utensil.
4. **After Use:** Unplug the appliance from the power outlet and allow it to cool completely before cleaning or storing.



Figure 5.1: A user demonstrating the preparation of a sandwich using the appliance.

CLOUD WAVE SPEED HEATING TOASTING TRAY 3 MINUTES SANDWICH MAKING IS COMPLETED

600W rapid temperature increase
Crispy at the outside tender
on the inside

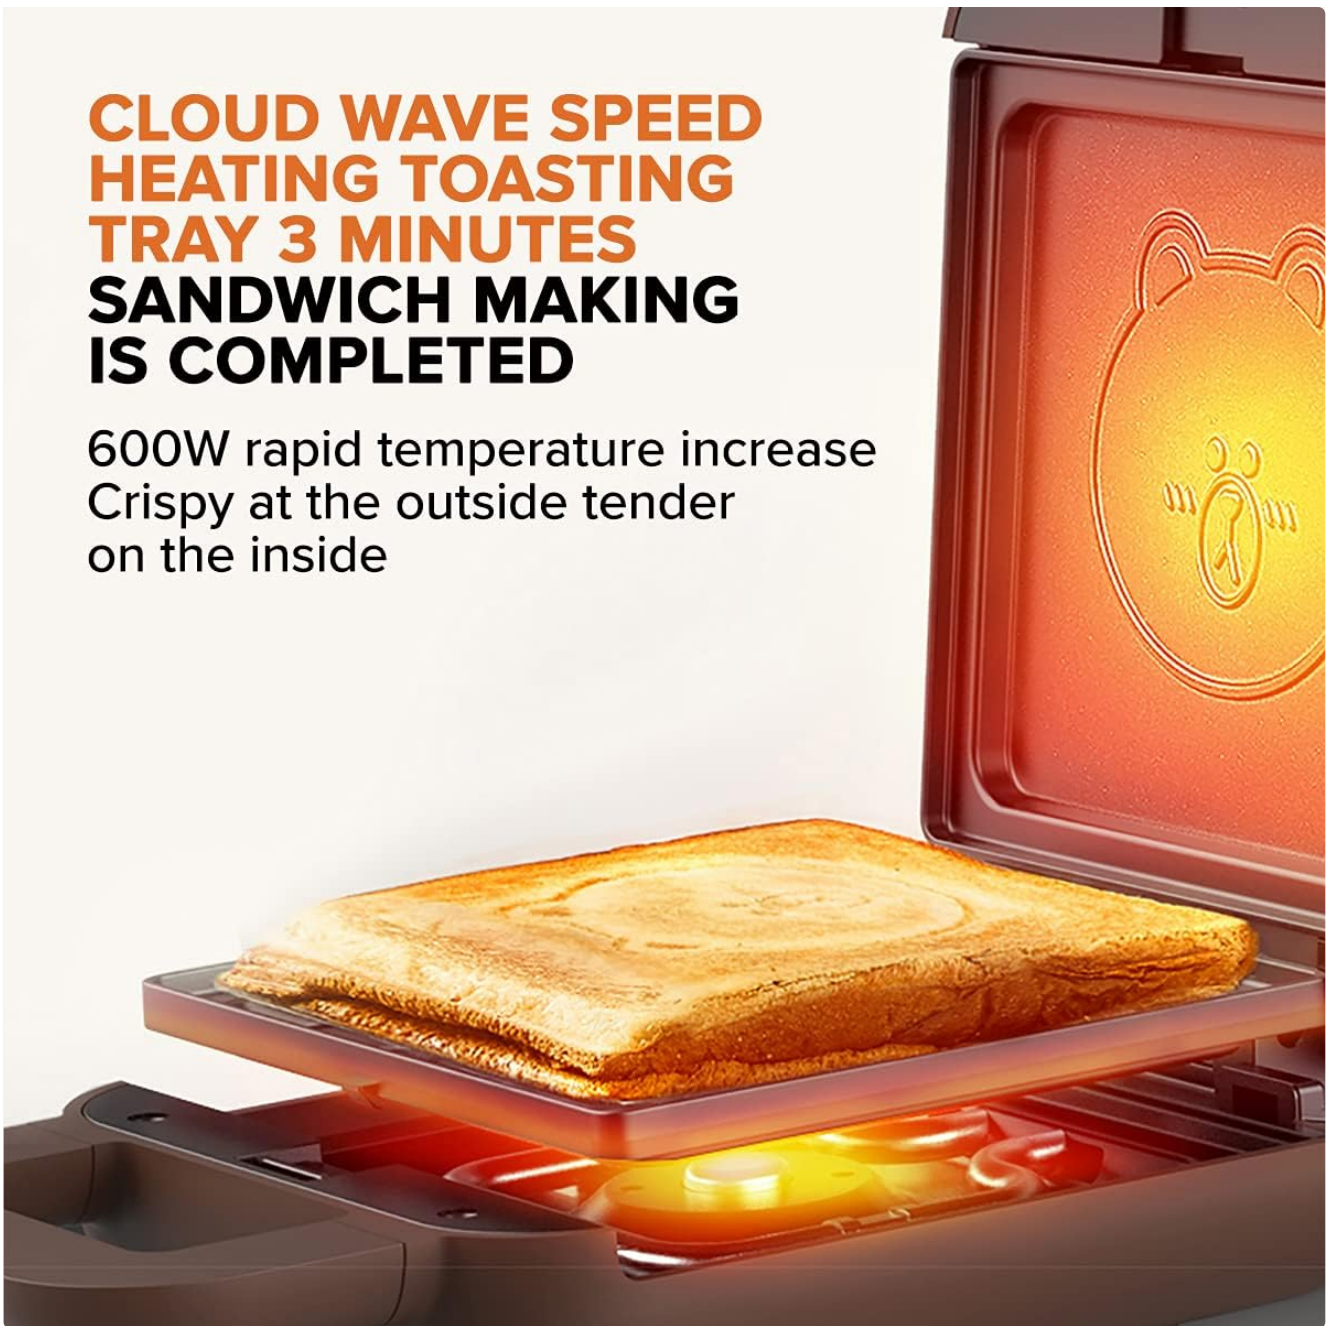


Figure 5.2: Illustration of the cloud wave speed heating technology, showing a sandwich being cooked to a crispy exterior and tender interior.

6. CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your Joyoung Sandwich and Waffle Maker.

1. Cleaning the Grill Plates:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Remove the grill plates by pressing the release buttons (if applicable) or gently pulling them out.
- Wash the non-stick grill plates with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners or scouring pads, as these can damage the non-stick coating.
- For stubborn residue, soak the plates in warm, soapy water for a few minutes before cleaning.
- Rinse thoroughly and dry completely before reattaching or storing. The plates are designed for easy cleaning.

2. Cleaning the Exterior:

- Wipe the exterior of the appliance with a damp cloth.
- Do not immerse the main unit in water or any other liquid.
- Ensure the exterior is dry before plugging in or storing.

3. **Storage:** Store the appliance in a clean, dry place. The compact design reduces storage space.

7. TROUBLESHOOTING

If you encounter issues with your Joyoung Sandwich and Waffle Maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; internal fault.	Ensure the appliance is securely plugged into a working power outlet. Test the outlet with another device. If the issue persists, contact customer support.
Food sticks to the plates.	Plates not properly cleaned; insufficient preheating; damaged non-stick coating.	Ensure plates are clean and dry before use. Allow sufficient preheating time (approx. 3 minutes). Do not use metal utensils. If coating is damaged, plates may need replacement.
Sandwiches/waffles are not cooked evenly.	Uneven distribution of ingredients/batter; insufficient preheating.	Ensure ingredients/batter are spread evenly. Allow the appliance to fully preheat before adding food.
Smoke or unusual odor during first use.	Protective coating burning off; food residue.	A small amount of smoke or odor is normal during the first few uses as manufacturing oils burn off. Ensure the appliance is clean. If excessive or persistent, unplug and contact support.

If the problem persists after trying these solutions, please contact Joyoung customer support for further assistance.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	JOYOUNG
Model	SK-T1 SALLY
Rated Voltage	220 Volts
Rated Power	600 Watts
Product Dimensions (L x W x H)	28 x 17.5 x 14.5 cm
Item Weight	1.5 kg (1500 Grams)
Material Type	Cast Iron, Plastic
Heating Method	Double Chassis Heating
Control Method	Mechanical (Self-controlled temperature)
Special Features	Non-slip foot pads, Interchangeable plates

9. WARRANTY AND CUSTOMER SUPPORT

For information regarding the warranty period and terms for your Joyoung x Line Friends 2-in-1 Sandwich and Waffle Maker, please refer to the warranty card included with your purchase or contact the retailer from whom you purchased the product.

Warranty details can vary by region and retailer.

If you require technical assistance, have questions about product operation, or need to report a defect, please contact Joyoung customer support. Contact information can typically be found on the manufacturer's official website or on the product packaging.

Please have your product model number (SK-T1 SALLY) and purchase date available when contacting support.

