

Manuals.plus /

› Tefal /

› Tefal Easy Fry 3-in-1 XXL Digital Air Fryer, Grill and Steamer FW201827 User Manual

Tefal FW201827

Tefal Easy Fry 3-in-1 XXL Digital Air Fryer, Grill and Steamer FW201827 User Manual

Model: FW201827

1. INTRODUCTION

Welcome to the world of versatile cooking with your new Tefal Easy Fry 3-in-1 XXL Digital Air Fryer, Grill and Steamer. This innovative appliance combines three essential cooking methods into one compact unit, allowing you to air fry for crispy results with less oil, grill for perfectly seared dishes, and steam to preserve nutrients and moisture. With a generous 6.2L capacity, it is designed to cater to families and larger meals. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The Tefal Easy Fry 3-in-1 XXL Digital Air Fryer, a black appliance with a digital display and a silver handle.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Do not block any ventilation openings.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your Tefal Easy Fry 3-in-1 appliance:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Digital Control Panel:** Touchscreen interface for selecting programs, adjusting temperature, and setting time.
- **Cooking Drawer/Basket:** Removable drawer for air frying and grilling.
- **Grill Plate:** Insert for grilling, designed to provide authentic grill marks.
- **Water Tank:** Located at the top for steaming function.
- **Steam Technology Lid:** Covers the water tank.



Image: The Tefal Easy Fry 3-in-1 XXL with its cooking drawer pulled out, revealing the grill plate inside.

4. BEFORE FIRST USE

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean Components:** Wash the cooking drawer, grill plate, and any other removable accessories with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. The main unit can be wiped with a damp cloth.
3. **Initial Run (Optional):** For the first use, you may notice a slight odor. This is normal and will dissipate. It is recommended to run the appliance empty for about 10-15 minutes at 180°C (350°F) in Air Fry mode to burn off any manufacturing residues. Ensure good ventilation during this process.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Place the appliance on a stable, heat-resistant surface.
2. Plug the power cord into a grounded wall outlet.
3. The digital display will illuminate.
4. Select your desired cooking mode (Air Fry, Grill, Steam) or a pre-set program using the touch controls.
5. Adjust temperature and time as needed.
6. Press the Start/Pause button to begin cooking.



Image: A hand interacting with the digital touch control panel of the Tefal Easy Fry 3-in-1, showing various program icons.

5.2 Air Frying

Air frying uses hot air circulation to cook food, resulting in a crispy exterior with significantly less oil.

- Place food directly into the cooking drawer/basket. Do not overfill.
- Select the Air Fry mode.
- Adjust temperature (typically 160-200°C) and time according to your recipe.
- Shake the basket halfway through cooking for even crisping, if necessary.



Image: A perfectly roasted whole chicken inside the air fryer basket, with a side of golden fries.

5.3 Grilling

The grill function provides direct heat for searing and achieving grill marks on meats and vegetables.

- Insert the grill plate into the cooking drawer.
- Place food directly onto the grill plate.
- Select the Grill mode.
- Preheat the grill plate for a few minutes before adding food for best results.



Image: A perfectly grilled steak, sliced to show its tender interior, served alongside crispy fries, prepared using the appliance.

5.4 Steaming

Steam cooking gently cooks food, preserving nutrients, vitamins, and natural flavors.

- Fill the water tank located at the top of the appliance with distilled or filtered water. Do not exceed the MAX fill line.
- Place food suitable for steaming (e.g., vegetables, fish) into the cooking drawer.
- Select the Steam mode.
- Ensure the water tank lid is securely closed.



Image: Salmon fillets and broccoli florets being steamed inside the appliance, with visible steam rising.

5.5 Combination Programs (Steam + Air Fry)

For dishes requiring both tenderness and crispiness, the appliance offers combination programs.

- Fill the water tank as described for steaming.
- Place food in the cooking drawer.
- Select a pre-set combination program (e.g., Steam + Air Fry for fish or poultry).
- The appliance will automatically switch between steaming and air frying phases.

5.6 Pre-set Programs

The Tefal Easy Fry 3-in-1 features 7 automatic programs for common dishes:

- Fries
- Chicken
- Meat
- Cake
- Fish
- Vegetables
- Dehydrator

Simply select the desired program from the digital control panel. The appliance will automatically set the optimal temperature and time. You can manually adjust these settings if preferred.

5.7 Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the various cooking functions (air fry, grill, steam) and features of the Tefal Easy Fry 3-in-1 XXL Digital Air Fryer, Grill and Steamer.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your appliance.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Removable Parts:** The cooking drawer and grill plate are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
3. **Main Unit:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Water Tank:** Empty any remaining water from the tank after each steaming session. Clean the tank regularly to prevent mineral buildup.
5. **Interior:** Clean the interior of the appliance with a damp cloth and mild detergent if necessary.
6. **Storage:** Store the appliance in a dry place once all parts are clean and dry.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not assembled correctly.	Ensure plug is securely in outlet; check power outlet with another appliance; ensure cooking drawer is fully inserted.
Food is not cooked evenly.	Basket overloaded; food not shaken/turned.	Cook in smaller batches; shake or turn food halfway through cooking.
White smoke coming from appliance.	Greasy food; oil residue from previous use.	Clean the cooking drawer and grill plate thoroughly; remove excess fat from food.
Steam function not working.	Water tank empty; water tank not properly seated.	Fill water tank; ensure water tank is correctly inserted and lid is closed.

8. TECHNICAL SPECIFICATIONS

- **Brand:** Tefal
- **Model Number:** FW201827
- **Colour:** Black
- **Product Dimensions:** 40 x 32 x 40 cm
- **Capacity:** 6.2 litres
- **Power / Wattage:** 1700 watts
- **Voltage:** 240 Volts
- **Material:** Aluminium, Plastic
- **Item Weight:** 7.9 kg
- **Special Features:** 3-in-1 air fryer with grill and steam, intuitive touchscreen

9. WARRANTY AND SUPPORT

Tefal products are designed for durability and ease of repair. For warranty information, technical support, or to order spare parts, please refer to the official Tefal website or contact their customer service. Tefal provides technical spare parts at a fair price for almost all its products for 15 years after purchase to ensure repairs are economical and sustainable.

For additional recipes and cooking inspiration, download the official Tefal app or scan the QR code below for the digital recipe book:

DIGITAL RECIPE BOOK

Scan the QR code to access the digital recipe book for endless inspiration.

The image shows a QR code on the right and a preview of the Tefal app interface on the left. The app interface displays a recipe for 'SEASON STEAK WITH SHIMMERS SAUCE' and includes a 'MAIN COURSES' section. The background features a blurred image of a plate of food.

Digital Recipe Book

TEFAL APP*
ONE TEFAL. ONE APP.

Your pocket sous-chef for mealtime inspiration & more

- Infinite new recipe **inspiration**
- **Step by step** recipes
- Library of **cooking guidance**
- Create and **share** your own recipes
- Access to exclusive **App-only offers**

The advertisement features a hand holding a smartphone displaying the Tefal app interface. The app shows a search bar, a grid of recipe cards (e.g., 'Chicken tikka masala', 'Chilli con carne', 'Bacon and leek risotto'), and a 'Create them!' button. Below the phone are the 'Download on the App Store' and 'GET IT ON Google Play' logos. A QR code is located in the bottom right corner of the red promotional box.

Tefal App

