

[Manuals.plus](#) /

› [Rowenta](#) /

› Rowenta Pro Master Steam Iron User Manual

Rowenta DW8360

Rowenta Pro Master Steam Iron User Manual

Model: DW8360

INTRODUCTION

The Rowenta Pro Master X-cel Steam Iron is designed to provide professional-grade ironing results with powerful steam distribution. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your iron.



Figure 1: Rowenta Pro Master Steam Iron (Model DW8360)

Key Features:

- **Powerful Performance:** 1775 watts of power and 430 steam holes for optimal steam distribution.
- **Integrated Anti-Calc System:** Prevents mineral deposits and ensures durable steam performance.
- **Precision Tip:** Designed for hard-to-reach areas and tackling stubborn wrinkles.
- **Safety and Convenience:** Features auto-off, a large transparent water tank, and an eco-setting.
- **Versatile Fabric Compatibility:** Suitable for Cotton, Wool, Poly, Silk, Linen, and Nylon.

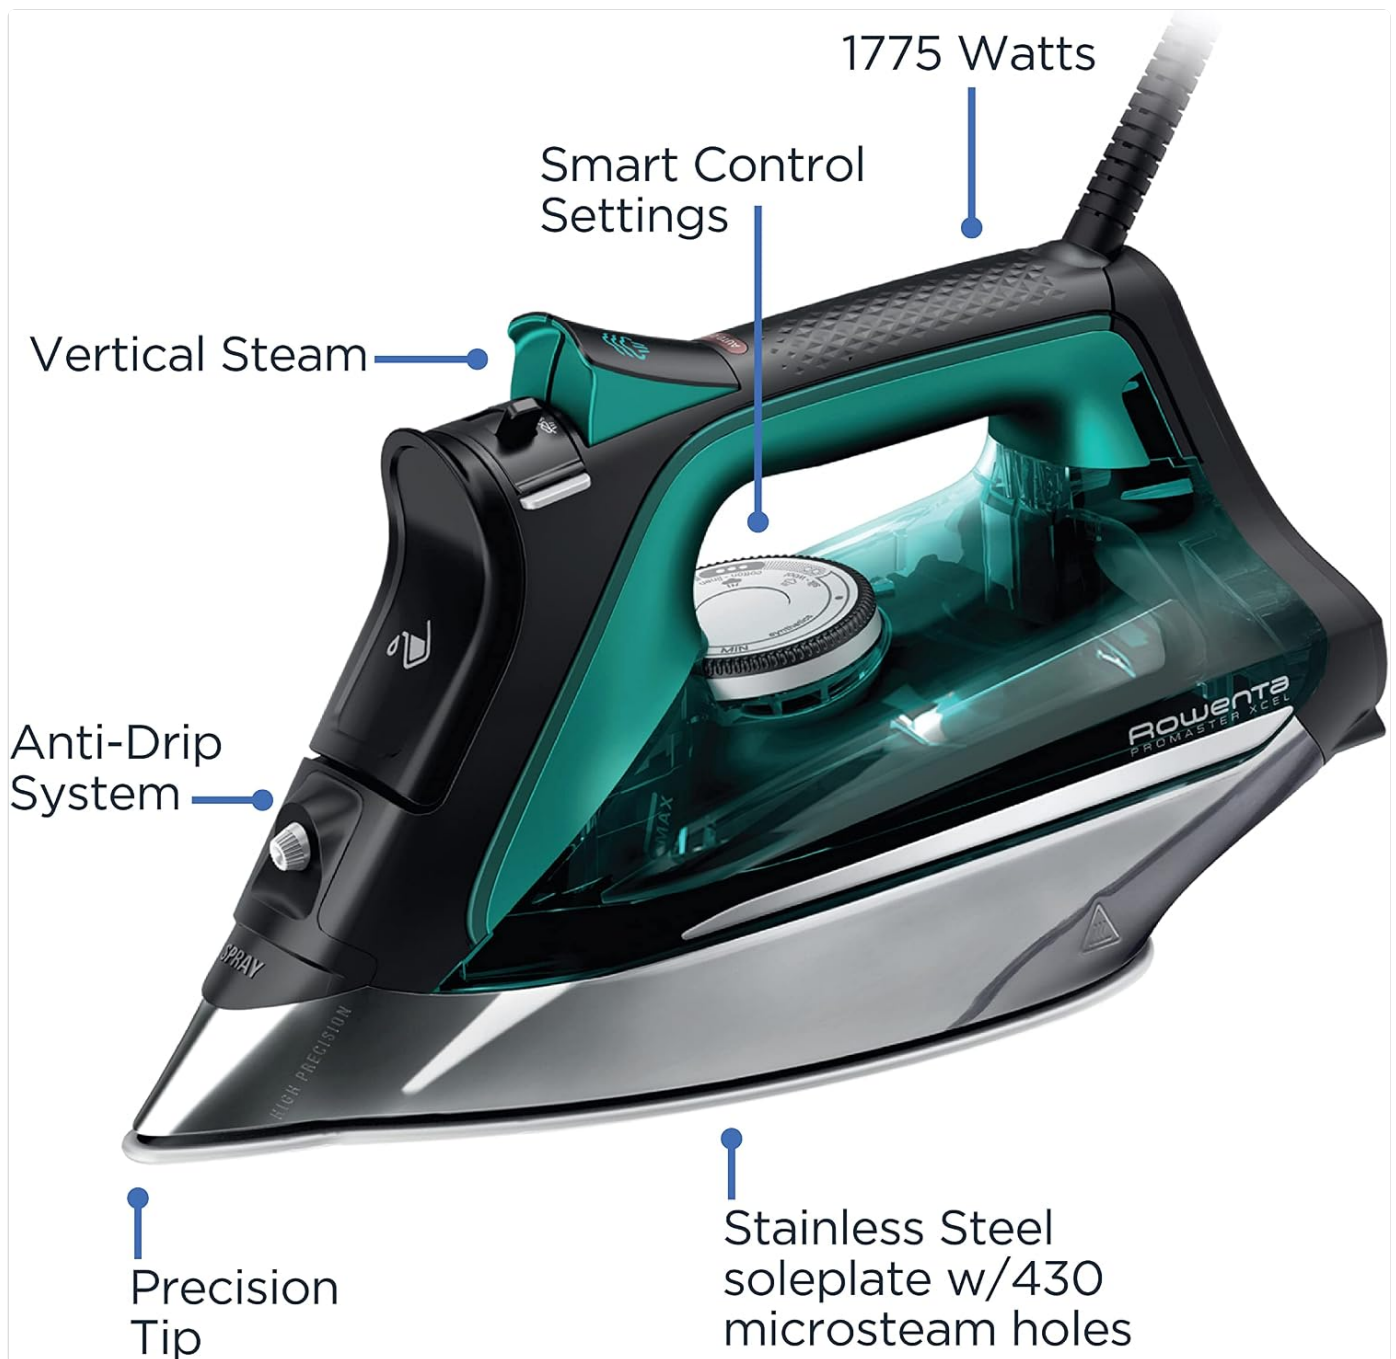


Figure 2: Key features of the Rowenta Pro Master Steam Iron, including precision tip, anti-drip system, vertical steam, smart control settings, 1775 watts, and stainless steel soleplate with 430 microsteam holes.

SETUP

1. **Unpacking:** Carefully remove the iron and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Inspection:** Check the iron for any signs of damage. Note that it is normal to find condensation inside the water tank, as all irons are pre-tested at the factory.

100% OF IRONS ARE PRE-TESTED



It is possible to find condensation inside the watertank as all irons are pre-tested with water

Figure 3: Condensation may be present in the water tank due to factory pre-testing.

3. **Filling the Water Tank:** Ensure the iron is unplugged. Open the water tank inlet and fill with tap water up to the MAX line. For optimal performance and to prevent mineral buildup, distilled water is recommended, especially in areas with hard water.

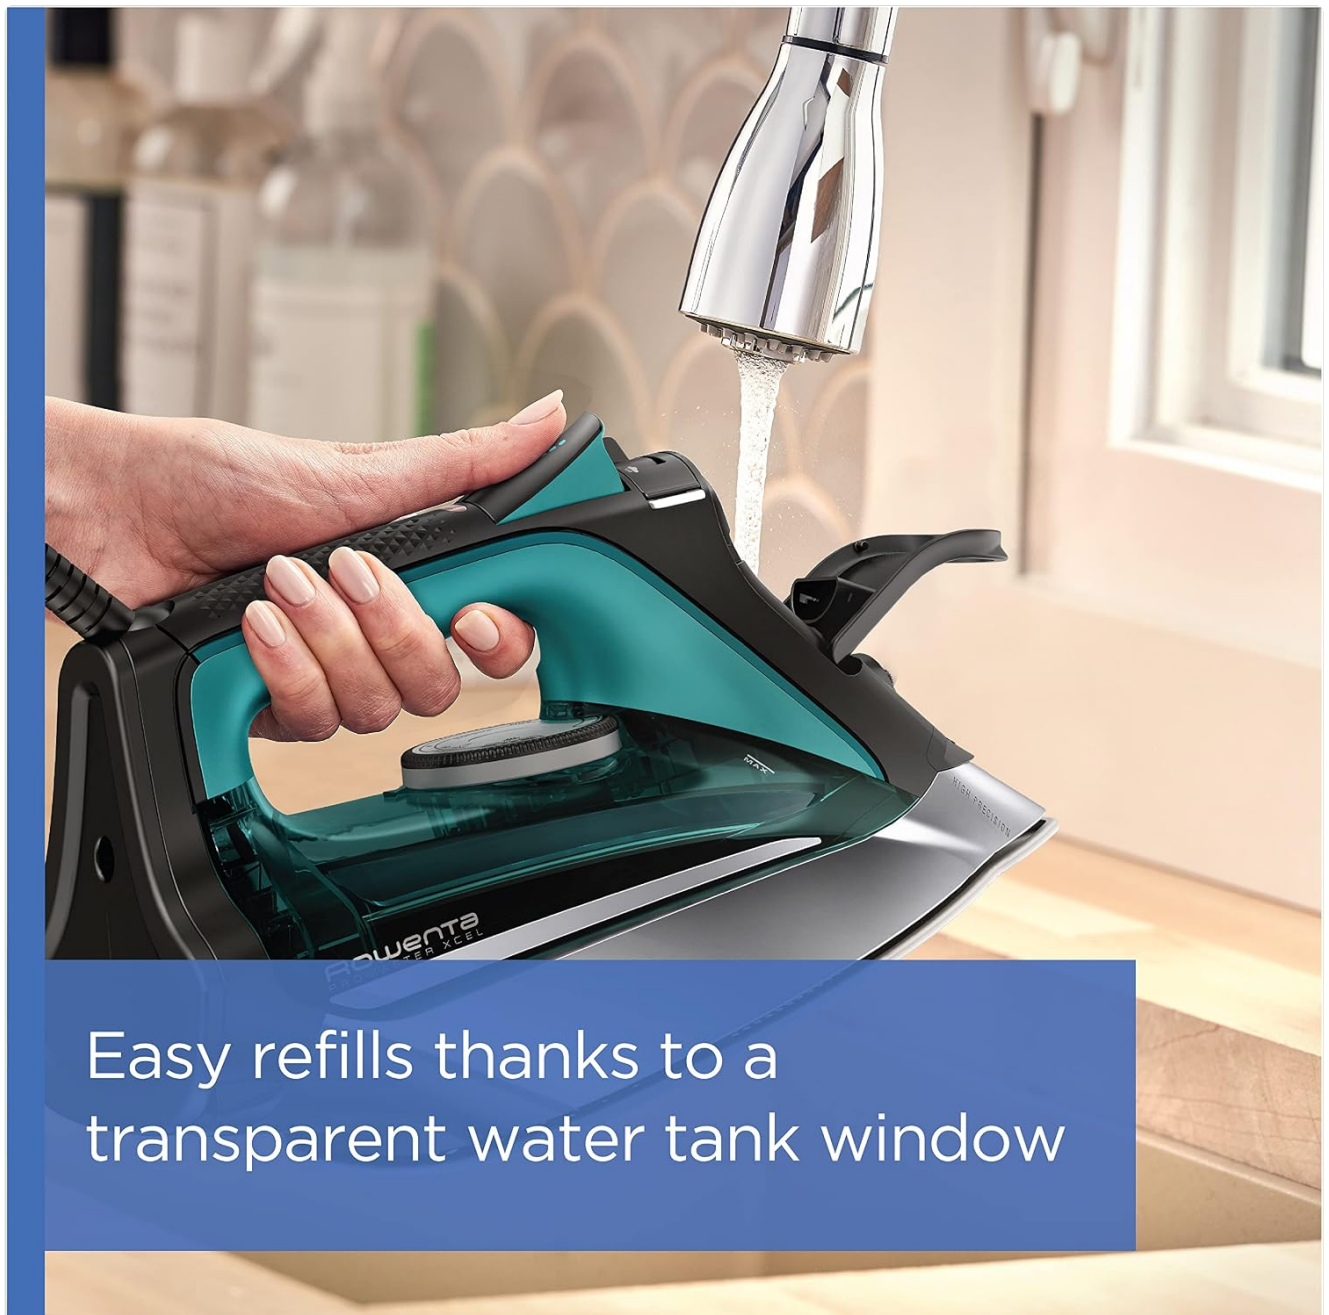


Figure 4: Easy refills are possible thanks to the transparent water tank window and large opening.

4. **Plugging In:** Plug the iron into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. **Temperature Selection:** Turn the temperature dial to select the appropriate setting for your fabric type (e.g., Cotton, Wool, Poly, Silk, Linen, Nylon). The iron will automatically adjust to the correct temperature.
2. **Heating Up:** The indicator light will illuminate while the iron is heating. It will turn off when the desired temperature is reached.
3. **Ironing:** Glide the iron smoothly over the fabric. The stainless steel soleplate with 430 microsteam holes ensures even steam distribution for efficient wrinkle removal.

Rowenta Pro Master Xcel DW8360U1

For perfect and professional
ironing results



Figure 5: The iron in use, providing perfect and professional ironing results.

4. **Steam Function:** Press the steam button for a powerful burst of steam to tackle stubborn creases.
5. **Vertical Steaming:** For delicate garments or drapes, hold the iron vertically and press the steam button.

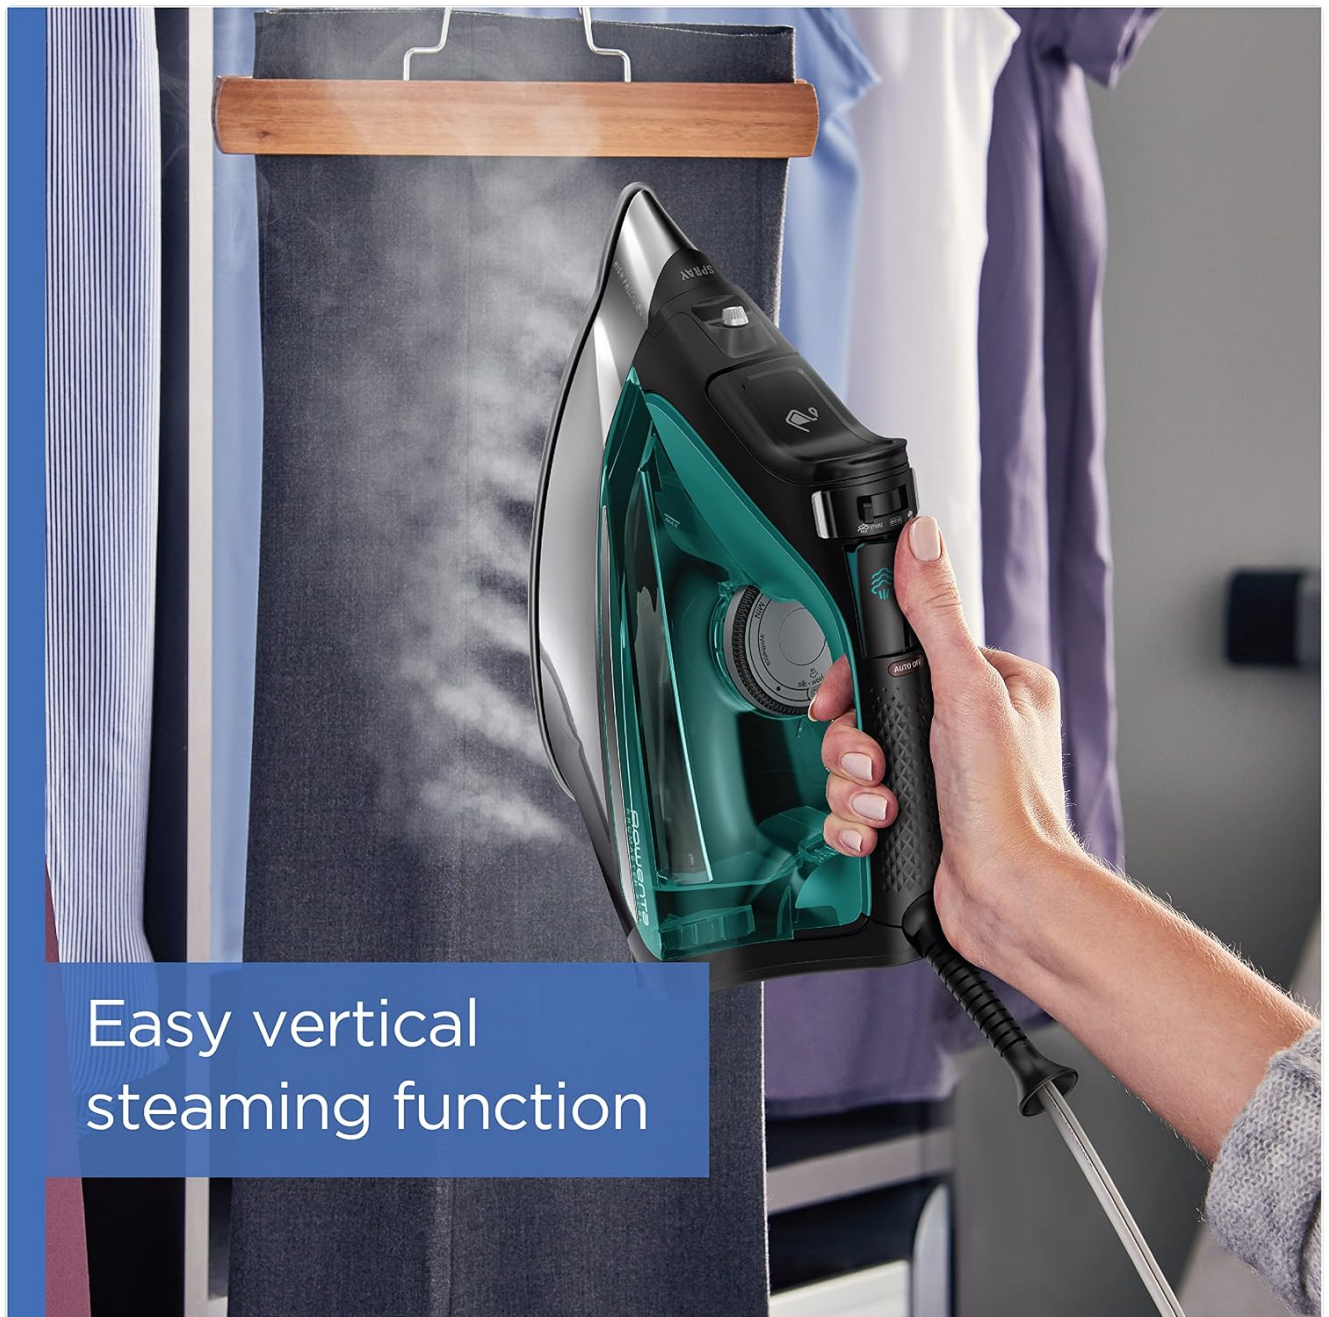


Figure 6: The easy vertical steaming function allows for quick touch-ups on hanging garments.

6. **High-Precision Spray:** Use the spray function to moisten fabric for easier ironing, especially on dry or heavily wrinkled areas.

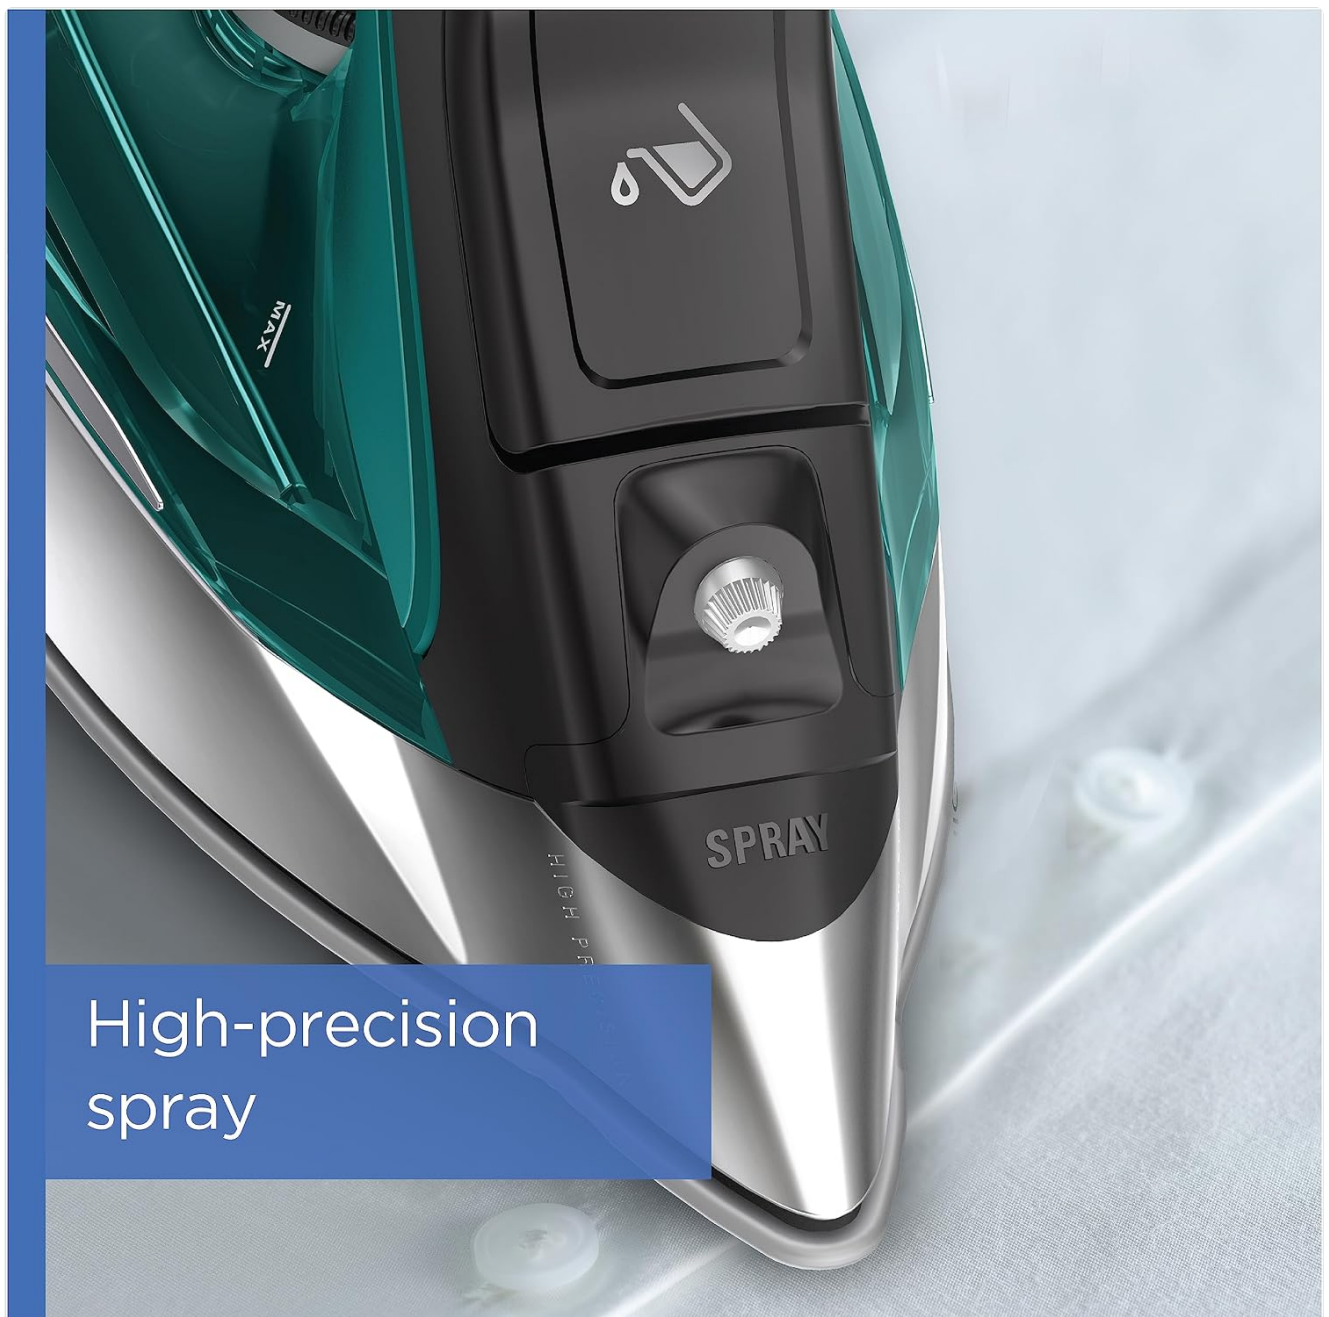


Figure 7: The high-precision spray helps to accurately target and remove difficult creases.

7. **Eco Setting:** Activate the eco setting to reduce energy consumption during ironing sessions.
8. **Auto-Off Feature:** For safety, the iron will automatically turn off if left unattended for a period of time (e.g., 30 seconds horizontally, 8 minutes vertically).

MAINTENANCE

- **Emptying the Water Tank:** After each use, unplug the iron and allow it to cool. Empty any remaining water from the tank to prevent mineral buildup.
- **Cleaning the Soleplate:** If the soleplate becomes dirty, clean it with a damp cloth and a non-abrasive cleaner. Do not use metallic scouring pads or abrasive powders.
- **Anti-Calc System:** The integrated anti-calc system helps to maintain steam performance. Refer to the full user manual for specific instructions on descaling if necessary.
- **Storage:** Store the iron upright on its heel rest in a safe, dry place once it has completely cooled.

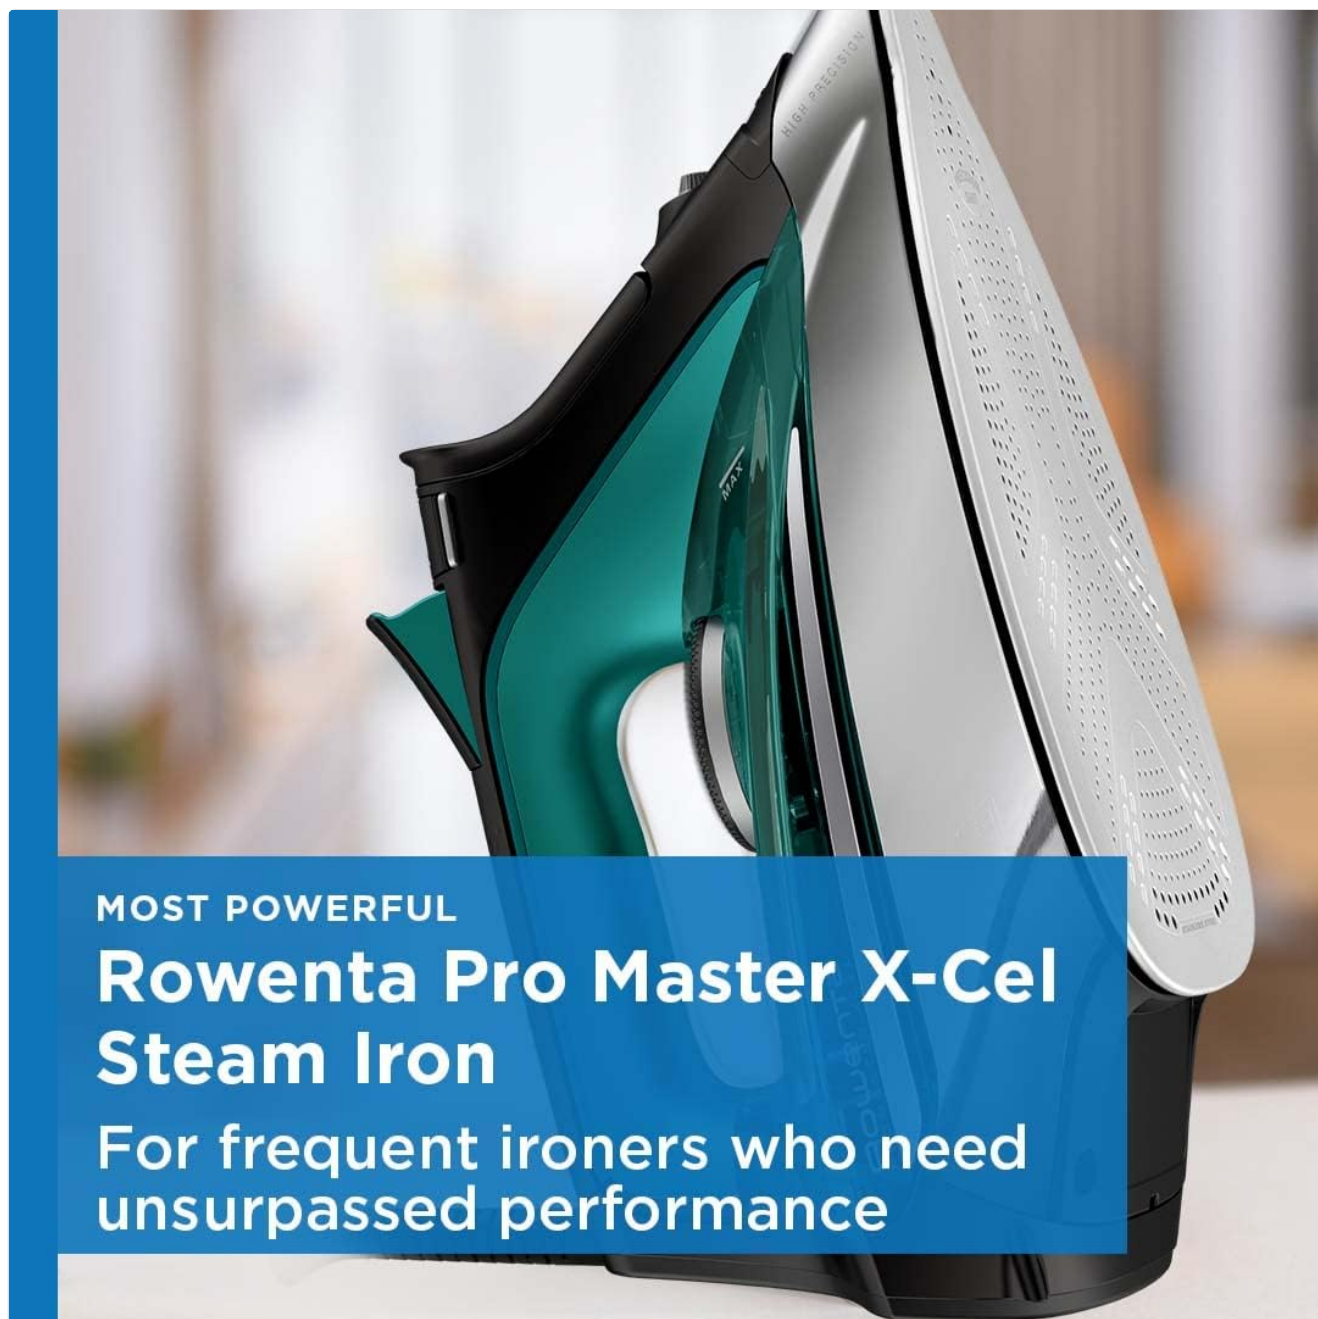


Figure 8: The iron can be safely stored upright on its heel rest.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in, power outage, auto-off activated.	Check power connection. Move the iron to reactivate if auto-off engaged.
No steam or insufficient steam.	Water tank empty, temperature too low, steam holes clogged.	Refill water tank. Increase temperature setting. Clean soleplate steam holes.
Water leaks from soleplate.	Temperature too low for steam, overfilled water tank.	Allow iron to reach full temperature before using steam. Do not overfill water tank.
White flakes or brown stains on clothes.	Mineral deposits from hard water.	Use distilled water. Perform descaling procedure as per full manual.

For more detailed troubleshooting, please refer to the complete user manual available online.

SPECIFICATIONS

Brand: Rowenta

Model Name: Pro Master

Item Model Number: 01450116

Power: 1775 Watts

Soleplate Material: Stainless Steel with 430 Microsteam Holes

Special Feature: Auto Shutoff

Color: White

Product Dimensions: 11.56"L x 6.2"W



Figure 9: Approximate dimensions of the iron.

Item Weight: 3.32 pounds

Water Tank Capacity: 12.7-oz (as per product title variant)

UPC: 014501165885

WARRANTY & SUPPORT

Your Rowenta Pro Master Steam Iron comes with a **1 Year Limited Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For detailed warranty information, service, or additional support, please refer to the official user manual or contact Rowenta customer service.

Official User Manual (PDF): [Download Here](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question