

Swan ST14620GRYN

Swan Nordic 4-Slice Toaster Instruction Manual

Model: ST14620GRYN | Brand: Swan

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster before removing any stuck food.

PRODUCT OVERVIEW

The Swan Nordic 4-Slice Toaster combines stylish minimalist design with practical functionality. Its sleek brushed stainless steel finish and soft-touch matte exterior, complemented by wooden accents, bring a touch of Scandinavian elegance to your kitchen.

This toaster is designed for convenience, featuring extra-wide slots suitable for various bread types, including bagels, waffles, and thicker slices. With independent controls for each pair of slots, you can customize browning levels for different preferences simultaneously.



Front-angled view of the Swan Nordic 4-Slice Toaster in Slate Grey, showcasing its sleek design and controls.

Key Features:

Stylish Minimalist Design: Features brushed stainless steel and a soft-touch matte finish with wooden accents, inspired by Nordic aesthetics.

6 Levels of Browning: Offers precise control over toast shade, ensuring perfect results every time. Independent controls allow for different settings on each side.

Extra Wide Slots: Accommodates various bread types, including bagels, waffles, and thicker slices, with a self-centering guide for even toasting.

Removable Crumb Tray: Simplifies cleaning by collecting crumbs, preventing mess on your countertop.



The Swan Nordic Toaster in a modern kitchen, with four slices of bread toasting, highlighting its functional integration into a home environment.

SETUP AND FIRST USE

Unpacking:

- Carefully remove the toaster from its packaging.
- Remove all packaging materials, including any protective films or inserts from the toasting slots.
- Inspect the toaster for any signs of damage. Do not use if damaged.

Placement:

- Place the toaster on a stable, flat, heat-resistant surface.
- Ensure there is adequate clearance (at least 4 inches) around the toaster, especially above, to allow for proper ventilation and prevent fire hazards. Avoid placing it directly under cabinets.
- Keep the toaster away from curtains, drapes, and other flammable materials.

Initial Burn-Off:

Before toasting food for the first time, operate the toaster without bread to burn off any manufacturing residues. This may produce a slight odor and some smoke, which is normal.

1. Plug the toaster into a 120V AC electrical outlet.
2. Set the browning control to the highest setting (6).
3. Press down the toast levers until they latch.
4. Allow the toaster to complete a full cycle.

5. Repeat this process 2-3 times in a well-ventilated area.
6. Unplug the toaster and allow it to cool completely before use.

OPERATING INSTRUCTIONS

The Swan Nordic 4-Slice Toaster features independent controls for each pair of slots, allowing for versatile toasting options.



A detailed view of the toaster's control panel, showing the browning dial and function buttons for Bagel, Reheat, Defrost, and Cancel.

Toasting Bread:

1. Insert up to four slices of bread into the toasting slots. Ensure bread is not too thick or too large to fit without force.
2. Select your desired browning level using the browning control dial (settings 1-6). A lower number results in lighter toast, a higher number in darker toast.
3. Press down the toast lever until it latches into place. The indicator light for the selected side will illuminate.
4. When the toasting cycle is complete, the toast will automatically pop up.
5. Unplug the toaster when finished.

Function Buttons:

Bagel Function: Press the **Bagel** button after lowering the toast lever. This function toasts the cut side of the bagel while gently warming the outer side. The indicator light will illuminate.

Reheat Function: Press the **Reheat** button after lowering the toast lever. This warms already toasted bread without further browning. The indicator light will illuminate.

Defrost Function: Press the **Defrost** button after lowering the toast lever. This function thaws and toasts frozen bread in one cycle. The indicator light will illuminate.

Cancel Function: Press the **Cancel** button at any time to stop the toasting cycle and eject the toast. The indicator light will turn off.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster. Always ensure the toaster is unplugged and completely cool before cleaning.

Crumb Tray Cleaning:

The removable crumb tray collects crumbs and should be emptied regularly to prevent buildup and potential fire hazards.

1. Locate the crumb tray at the bottom of the toaster.
2. Pull the tray out completely.
3. Discard crumbs. Wipe the tray with a damp cloth if necessary, then dry thoroughly.
4. Slide the crumb tray back into place until it clicks securely.



A hand demonstrating the removal of the crumb tray from the toaster for easy cleaning, showing collected crumbs.

Exterior Cleaning:

- Wipe the exterior of the toaster with a soft, damp cloth.
- For stubborn marks, a mild detergent can be used, but ensure no liquid enters the toasting slots or controls.
- Do not use abrasive cleaners, scouring pads, or metal polish, as these can damage the finish.
- Dry thoroughly with a soft, dry cloth.

Storage:

When not in use, store the toaster in a clean, dry place. Ensure the power cord is neatly wrapped and not kinked.

TROUBLESHOOTING

If you encounter issues with your Swan Nordic Toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; toast lever not fully depressed.	Ensure toaster is securely plugged in. Test the outlet with another appliance. Press the toast lever down firmly until it latches.
Bread is stuck in the toaster.	Oversized bread; foreign object in slot.	Unplug the toaster. Carefully remove the bread using non-metallic tongs. Do not use metal utensils.
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Smoke coming from toaster.	Crumbs in crumb tray; food stuck in slots; first use burn-off.	Unplug immediately. Empty crumb tray. If food is stuck, remove carefully after cooling. Initial smoke is normal for first use.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Swan
Model Number	ST14620GRYN
Color	Slate Grey
Material	Stainless Steel
Product Dimensions (D x W x H)	7.9"D x 11.4"W x 13"H
Wattage	1500 watts
Voltage	120V
Number of Slices	4

Feature	Detail
Browning Settings	6
Special Features	Removable Crumb Tray, Bagel Function, Reheat Function, Defrost Function, Cancel Button
Item Weight	4.8 Pounds



Diagram showing the dimensions of the Swan Nordic 4-Slice Toaster: 7.9 inches deep, 11.4 inches wide, and 13 inches high.

WARRANTY AND SUPPORT

This Swan Nordic 4-Slice Toaster comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or questions regarding your product, please contact Swan customer service. Contact information can typically be found on the manufacturer's website or in the product documentation.

Always retain your proof of purchase for warranty claims.

© 2024 Swan. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09CQFRY8T>

More documents and user manuals: <https://manuals.plus/>