

YesParts YP-WP307458

YesParts WP307458 Durable Range Knob Surface Instruction Manual

Model: YP-WP307458

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your YesParts WP307458 Durable Range Knob Surface. This replacement knob is designed for compatibility with various range models, ensuring a precise fit and reliable performance. Please read these instructions carefully before proceeding with installation or use.

The YesParts WP307458 knob is a high-quality replacement part, engineered to meet or exceed OEM specifications. It is compatible with original part numbers 307458, 2940, 3-7460, and 307460.

SAFETY INFORMATION

Always prioritize safety when working with appliances. Failure to follow these safety guidelines may result in injury or damage.

- **Disconnect Power:** Before attempting any installation or maintenance, ensure the range or appliance is completely disconnected from its power source. Turn off the circuit breaker or unplug the appliance.
- **Wear Protective Gear:** If necessary, wear gloves to protect your hands during installation.
- **Handle with Care:** While durable, handle the knob carefully to avoid damage.
- **Professional Assistance:** If you are unsure about any step, consult a qualified technician.

SETUP AND INSTALLATION

This section outlines the steps for replacing an existing range knob with the YesParts WP307458.

1. **Prepare the Appliance:** Ensure the range is cool and completely disconnected from its power supply.
2. **Remove Old Knob:** Gently pull the old knob directly off the control shaft. Do not twist or force it, as this may damage the shaft.
3. **Inspect Shaft:** Examine the control shaft for any damage or debris. Clean the shaft if necessary.
4. **Install New Knob:** Align the new YesParts WP307458 knob with the control shaft. Push the knob firmly onto the shaft until it is securely seated. Ensure it is fully engaged and does not wobble.

5. **Test Functionality:** Once installed, reconnect power to the appliance. Carefully turn the knob to ensure it rotates smoothly and engages with the control mechanism correctly.



Image 1: Top-down view of the YesParts WP307458 range knob. This image shows the knob's circular shape, black finish, and the prominent white indicator line used for setting adjustments.



Image 2: Angled view of the YesParts WP307458 range knob. This perspective illustrates the knob's profile and the opening designed to fit onto the appliance's control shaft.

OPERATING INSTRUCTIONS

The YesParts WP307458 range knob functions identically to the original equipment manufacturer (OEM) part it replaces. To operate, simply grasp the knob and rotate it to the desired setting on your range's control panel. The white indicator line on the knob will align with the corresponding temperature, burner, or function setting.

- Ensure the knob is fully seated on the control shaft before turning.
- Turn the knob smoothly and avoid excessive force.
- Always refer to your appliance's main user manual for specific operating procedures related to your range model.

MAINTENANCE

Proper maintenance will extend the life of your range knob and ensure continued functionality.

- **Cleaning:** To clean the knob, wipe it with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish. Ensure the knob is dry before re-engaging power to the appliance.
- **Inspection:** Periodically check the knob for any signs of wear, cracks, or looseness. If the knob becomes loose, remove it and re-seat it firmly onto the shaft.
- **Storage:** If removing the knob for extended periods, store it in a clean, dry place away from direct sunlight or extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your YesParts WP307458 range knob, consider the following common solutions:

Problem	Possible Cause	Solution
Knob feels loose or wobbly.	Knob not fully seated on the shaft.	Remove the knob and firmly push it back onto the control shaft until it clicks into place.
Knob does not turn smoothly.	Debris on the shaft or internal mechanism.	Remove the knob and clean the control shaft and the knob's internal opening. Ensure no obstructions.
Knob does not engage with appliance settings.	Incorrect knob for the model or damaged control shaft.	Verify the knob's compatibility with your specific range model. Inspect the control shaft for damage. If the shaft is damaged, professional repair may be required.

If troubleshooting steps do not resolve the issue, please refer to the "Warranty and Support" section for further assistance.

SPECIFICATIONS

- **Part Number:** WP307458 (replaces 307458, 2940, 3-7460, 307460, 866097, AH335778, EA335778, PS335778)
- **Model Number:** YP-WP307458
- **Brand:** YesParts
- **Compatibility:** Compatible with various range models including, but not limited to: RF302EXPW0, RF305EXPW0, RF316EXPW0, RF335EXPW0, RF336EXPW0, RF360EXPW0, RF365EXPW0, RF365EXPW1, RFE3000W1, RHM2820P, RJE3000W0, RJE3000W1, RJE3000W9, RJE3020W1, RJE3021W1, RJE302BW0, RJE302BW1, RJE310PW0, RJE313PP, RJE313PP1, RJE3165W0, RJE3165W1, RJE320BW1, RJE330PW0, RJE333PP1, RJE3365W0, RJE345PW0, RJE363PP1, RJE363PP2, RJE365BW0, RJE3750W0, RJE3750W1, RJE3750W2, RJE385PW0, RJE385PW1.
- **Material:** Durable composite material

WARRANTY AND SUPPORT

YesParts stands behind the quality of its products. For information regarding returns or replacements, please refer to the retailer's return policy where the product was purchased. Typically, a 30-day return/replacement policy is offered.

For technical assistance, compatibility questions, or any other inquiries regarding your YesParts WP307458 range knob, please contact YesParts customer support through the platform or retailer from which you made your purchase. Provide your model number (YP-WP307458) and a detailed description of your issue for prompt assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question