

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Midea](#) /

› Midea MFD60S200X.1-IT Dishwasher Instruction Manual

Midea MFD60S200X.1-IT

Midea MFD60S200X.1-IT Dishwasher Instruction Manual

Model: MFD60S200X.1-IT

1. PRODUCT OVERVIEW

The Midea MFD60S200X.1-IT is a freestanding dishwasher designed for efficient and thorough cleaning of your dishes. It features a spacious interior with a capacity for 14 place settings, offering flexibility for various load sizes. Equipped with an intuitive LED display and multiple wash programs, this appliance simplifies your daily dishwashing routine.



Front view of the Midea MFD60S200X.1-IT Freestanding Dishwasher, showcasing its stainless steel finish and control panel.

2. INSTALLATION

Proper installation is crucial for the safe and efficient operation of your dishwasher. This model is designed for freestanding installation, allowing flexibility in placement within your kitchen.

2.1 Dimensions and Placement

Ensure adequate space for the dishwasher, considering its dimensions. The appliance measures approximately 60 cm (width) x 59.8 cm (depth) x 84.5 cm (height). Allow sufficient clearance for water inlet, drain hoses, and electrical connections.



Detailed diagram illustrating the installation dimensions and required cabinet space for the dishwasher.

The dishwasher requires a standard 220V electrical connection. Ensure the water inlet and drain pipes are securely connected to the appropriate plumbing. The included components are the machine body, inlet pipe, drain pipe, screws, and a salt funnel.

2.2 Initial Setup

Before first use, it is recommended to add dishwasher salt and rinse aid according to the instructions in the full user manual to optimize washing and drying performance. Run an empty cycle to clean the interior before loading dishes.

3. OPERATING INSTRUCTIONS

The Midea MFD60S200X.1-IT dishwasher offers a range of programs and functions to suit various cleaning needs.

3.1 Control Panel and Programs

The dishwasher features an intuitive LED display and push-button controls for easy program selection and function activation. There are 8 wash programs available:



The control panel with LED display and icons representing the 8 available wash programs.

- **Hygiene:** Cleans and sanitizes heavily soiled dishes and kitchen utensils effectively with high-temperature water (approx. 70 °C).

- **Intensive:** For heavily soiled items like pots, pans, and dishes with dried-on food.
- **ECO:** An energy-efficient program for normally soiled daily loads.
- **Universal:** A standard program for everyday mixed loads.
- **Glass:** Gentle program for delicate glassware.
- **Silence:** Operates at a lower noise level for quiet environments.
- **1 Hour:** A quick program for lightly soiled dishes.
- **Rapid:** The fastest program for very lightly soiled items.

3.2 Special Functions

- **Auto Door Open:** This function automatically opens the dishwasher door at the end of the cycle to optimize drying performance and reduce odors. It can be deactivated if preferred.



The automatic door opening feature enhances drying efficiency and reduces residual odors.

- **Delay Start:** Allows you to set a timer to delay the start of the wash cycle from 1 to 24 hours, enabling you to run the dishwasher at off-peak hours or when convenient.
- **Child Lock:** This function protects children from unexpected accidents, such as scalding from steam during

unintended openings.

- **Half-Load Function:** Optimizes water and energy consumption when washing smaller loads, ensuring efficient cleaning without wasting resources.
- **Extra Drying:** Provides additional drying time for dishes, ensuring more complete and spotless results.

3.3 Loading the Dishwasher

Proper loading ensures optimal cleaning results. The dishwasher features an adjustable upper basket and a lower basket designed for various dish sizes.

Dimensioni dell'installazione e riserva delle dimensioni dell'armadio

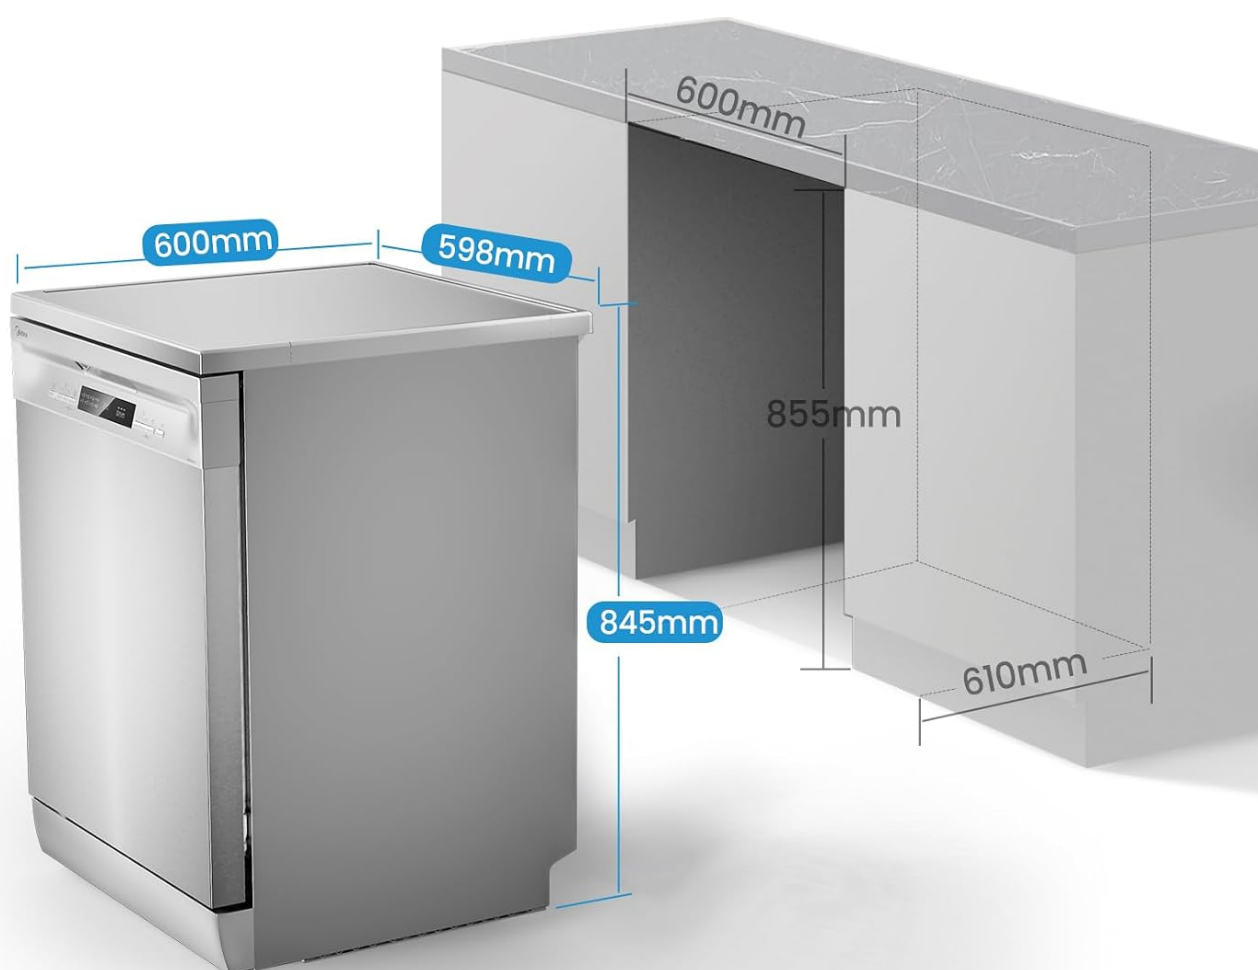


Diagram illustrating the adjustable upper basket, which can be raised by 50mm, and the capacity for 14 place settings, including various dishware and cutlery.

The upper basket can be adjusted to accommodate taller items in the lower basket. The lower basket is suitable for larger items like plates and pots, with space for cutlery up to 300mm.

Scheda informativa del prodotto (EN60436)

Nome o marchio del fornitore: MIDEA

Indirizzo del fornitore (b): Midea Italia S.r.l. a socio unico
viale Luigi Bodio 29/37
20158 Milano, Italia

Identificatore del modello: MFD60S200X.1-IT

Parametri generali del prodotto:

Parametro	Valore	Parametro	Valore
Capacità nominale (a) (ps)	14	Dimensioni in cm	Altezza 85
			Larghezza 45
			Profondità 60
EEl (a)	49,9	Classe di efficienza energetica (a)	D (c)
Indice delle prestazioni di pulizia (a)	1,125	Indice di prestazione di essiccazione (a)	1,065
Consumo di energia in kWh [per ciclo], basato sul programma eco che utilizza il riempimento dell'acqua fredda. Il consumo effettivo di energia dipenderà dal modo in cui viene utilizzato l'apparecchio.	0,849	Consumo di acqua in litri [per ciclo], basato sul programma eco. Il consumo effettivo di acqua dipenderà dal modo in cui viene utilizzato l'apparecchio e dalla durezza dell'acqua.	11,0
Durata del programma (a) (h:min)	3:18	Tipo	Indipendente
Emissioni sonore acustiche trasportate dall'aria (a) (dB(A) re 1 pW)	49	Classe di emissione acustica (a)	C (c)
Modalità disattivata (W)	0,49	Modalità standby (W)	N/D
Partenza ritardata (W) (se applicabile)	1,00	Standby in rete (W) (se applicabile)	N/D

Durata minima della garanzia offerta dal fornitore (b): 24months

Ulteriori informazioni:

Collegamento web al sito web del fornitore, in cui si trovano le informazioni di cui all'allegato II, punto 6, del regolamento (UE) 2019/2022 della Commissione (1) (b): <https://www.midea.com/it/>

(a) per il programma eco.

(b) le modifiche apportate a tali voci non sono considerate pertinenti ai fini dell'articolo 4, paragrafo 4, del regolamento (UE) 2017/1369.

(c) se la base di dati del prodotto genera automaticamente il contenuto definitivo di questa cella, il fornitore non inserisce tali dati.

(1) Regolamento (UE) 2019/2022 della Commissione, del 1o ottobre 2019, che stabilisce i requisiti di progettazione eco per le lavastoviglie domestiche ai sensi della direttiva 2009/125/CE del 1275/2008 della Commissione e che abroga il regolamento (UE) n. 1016/2010 della Commissione (cfr. pag. 267 della presente Gazzetta ufficiale).

An open view of the dishwasher interior, showing the upper and lower racks, and the cutlery basket.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Midea dishwasher.

4.1 Cleaning the Filter

The dishwasher is equipped with an ABT (Antibacterial) filter, which prevents the accumulation of microorganisms and bacteria inside the tub, ensuring a high level of health protection. Regularly clean the filter system to prevent blockages and ensure efficient washing.

4.2 Adding Salt and Rinse Aid

Monitor the indicator lights for dishwasher salt and rinse aid. Refill as necessary to ensure proper water softening and streak-free drying results.

5. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following general troubleshooting tips. For detailed solutions, consult the comprehensive user manual or contact customer support.

- **Dishwasher not starting:** Check power supply, ensure the door is fully closed, and verify that a program has been selected.
- **Poor cleaning results:** Ensure dishes are loaded correctly, spray arms are not blocked, and detergent dispenser is not obstructed. Check salt and rinse aid levels.
- **Water not draining:** Inspect the drain hose for kinks or blockages, and clean the filter system.
- **Unusual noises:** Check for foreign objects in the pump area or spray arms.

6. SPECIFICATIONS

Key technical specifications for the Midea MFD60S200X.1-IT Dishwasher:

Feature	Specification
Model Name	MFD60S200X.1-IT
Form Factor	Freestanding
Place Settings	14
Number of Programs	8
Energy Efficiency Class	D
Noise Level	49 dB
Dimensions (W x D x H)	60 x 59.8 x 84.5 cm
Item Weight	40.8 kg
Water Consumption (ECO program)	11.0 L
Energy Consumption (ECO program, 100 cycles)	85 kWh

Feature	Specification
ECO Program Duration	3:18
Material	Stainless Steel
Components Included	Machine Body, Inlet Pipe, Drain Pipe, Screws, Salt Funnel



The energy label for the Midea MFD60S200X.1-IT dishwasher, indicating its D energy efficiency class, 14 place settings, 11.0 L water consumption, 85 kWh/100 cycles, 49 dB noise level, and 3:18 ECO program duration. More details can be found at eprel.ec.europa.eu/q/497924.

7. WARRANTY AND SUPPORT

Midea provides a warranty for this product. For specific details regarding warranty coverage, returns, and repairs, please refer to the terms and conditions provided at the time of purchase or visit the official Midea website.

For customer support, technical assistance, or to inquire about service, please contact Midea customer service. You can also find more information and support resources on the official Midea website: www.midea.com/it/.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09CTT4TRG>

More documents and user manuals: <https://manuals.plus/>