Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- 4lite /
- 4lite 4L2/1100 LED Security Floodlight User Manual

4lite 4L2/1100

4lite 4L2/1100 LED Security Floodlight User Manual

Model: 4L2/1100

1. Introduction

Thank you for purchasing the 4lite Die-Cast Aluminium LED Security Floodlight. This manual provides essential information for the safe installation, operation, and maintenance of your floodlight. Please read these instructions carefully before installation and retain them for future reference.

2. SAFETY INFORMATION

WARNING: Electrical installation should only be performed by a qualified electrician.

- Ensure the power supply is disconnected before installation or maintenance.
- This product is designed for outdoor use and must be installed in accordance with local wiring regulations.
- Do not look directly into the LED light source when illuminated.
- · Keep packaging materials away from children.
- Do not attempt to modify or repair the unit yourself. Contact qualified personnel for service.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x 4lite LED Security Floodlight (Model 4L2/1100)
- Mounting hardware (screws, wall plugs)
- Instruction Manual

4. PRODUCT OVERVIEW

The 4lite 4L2/1100 LED Security Floodlight features a durable die-cast aluminium design with two adjustable LED heads and an integrated Passive Infrared (PIR) motion sensor. It provides powerful illumination for outdoor areas.



Figure 4.1: Front view of the 4lite LED Security Floodlight, showing the two adjustable light heads and the motion sensor located below.


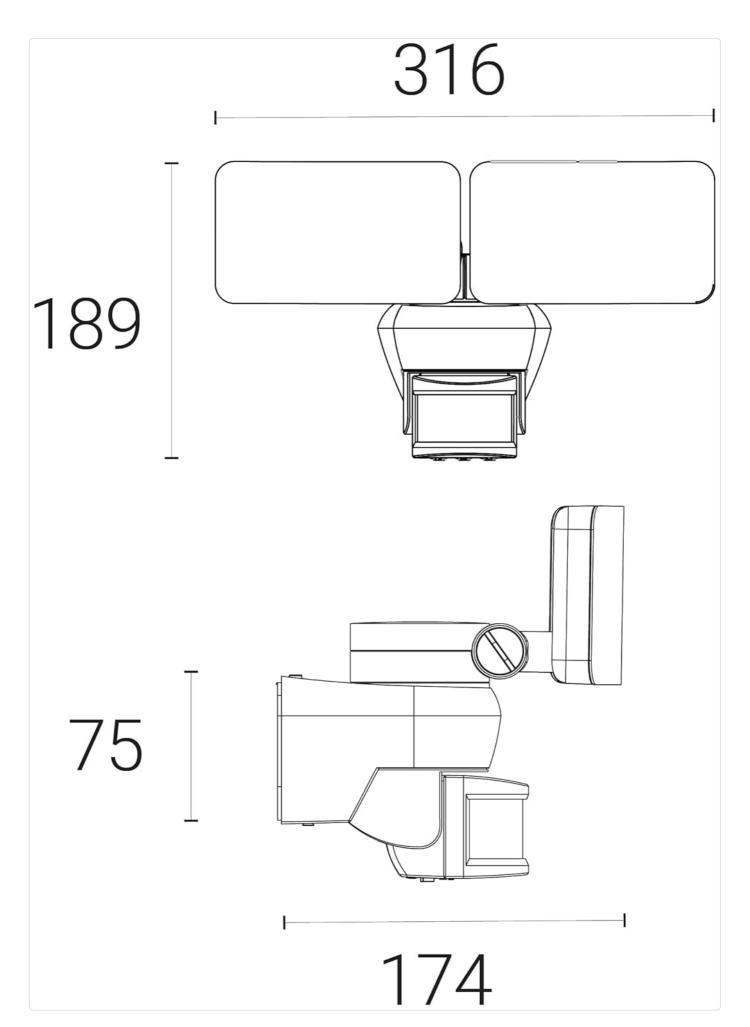


Figure 4.2: Technical drawing illustrating the dimensions of the floodlight in millimeters. The width is 316mm, height 189mm, and depth 174mm.

5. INSTALLATION AND SETUP

Tools Required: Drill, screwdriver, wire strippers, electrical tape, safety glasses.

- 1. **Power Disconnection:** Before starting any electrical work, ensure the main power supply to the installation area is switched off at the circuit breaker.
- 2. **Mounting Location:** Choose a suitable outdoor location for the floodlight, ensuring it is securely mounted to a solid surface (e.g., wall). Consider the desired coverage area for both light and motion detection.
- 3. **Mounting the Bracket:** Use the provided mounting hardware to securely attach the floodlight's base to the chosen surface.
- 4. **Wiring:** Connect the floodlight to your electrical supply. Ensure correct polarity: Live (L), Neutral (N), and Earth (E). All connections must be secure and insulated.
- 5. **Adjusting Light Heads:** Loosen the adjustment screws on the side of each LED head and position them to illuminate the desired areas. Tighten the screws once adjusted.
- 6. **PIR Sensor Adjustment:** The PIR sensor can be adjusted for direction. Gently pivot the sensor housing to cover the desired detection zone.
- 7. **Power Reconnection:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

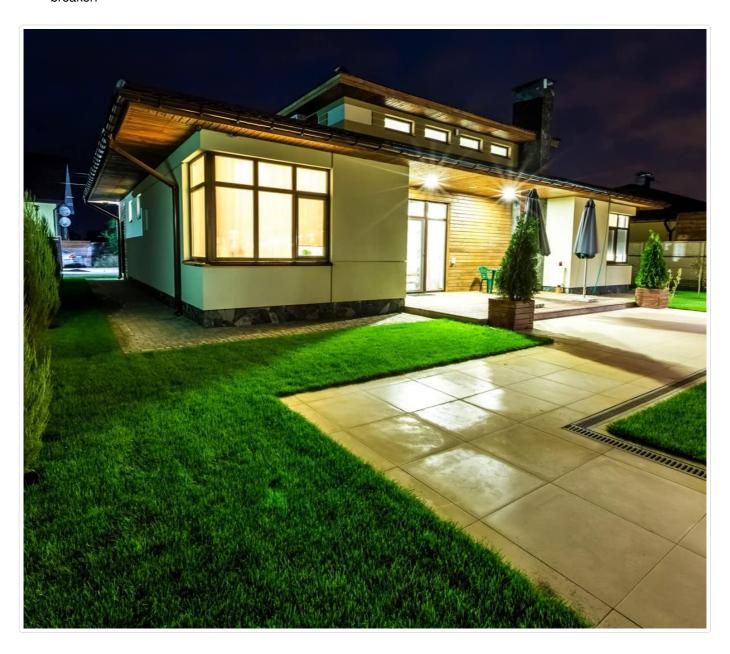

6. OPERATING INSTRUCTIONS

The 4lite 4L2/1100 floodlight operates automatically based on its integrated PIR motion sensor and ambient light detection.

6.1. Sensor Settings

The PIR sensor typically has adjustable settings for LUX (ambient light level), TIME (duration of illumination), and SENSITIVITY (detection range). These controls are usually located on the underside or side of the PIR sensor unit. Refer to the markings on your specific unit for exact dial functions.

- LUX (Light Sensitivity): Adjusts the ambient light level at which the sensor becomes active. Turn towards the 'sun' icon for daytime operation (always on when motion detected) or towards the 'moon' icon for nighttime operation only.
- **TIME (Illumination Duration):** Sets how long the light remains on after motion is detected. Typically adjustable from a few seconds to several minutes.
- **SENS (Sensitivity/Detection Range):** Controls the range and sensitivity of the motion detection. Adjust to prevent unwanted activations (e.g., from passing traffic or small animals).

6.2. Test Mode

To test the floodlight's functionality and sensor settings, some units feature a test mode. A common method to activate test mode is to cycle the power switch ON-OFF-ON rapidly (e.g., 3 times). In test mode, the light may stay on for a short period (e.g., 5-10 seconds) regardless of the TIME setting, and the LUX setting will be overridden, allowing testing in daylight. Consult the specific markings on your unit for test mode activation and behavior.

7. Maintenance

- Cleaning: Periodically clean the floodlight's surface and the PIR sensor lens with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Inspection: Regularly inspect the wiring and mounting for any signs of damage or wear. Ensure all connections remain secure.
- LEDs: The LED light source is designed for long life and is not user-replaceable.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; LUX setting too high (daylight); faulty wiring; sensor obstruction.	Check circuit breaker; adjust LUX setting; verify wiring connections; clear sensor path.
Light stays on continuously.	Constant motion detected; TIME setting too long; faulty sensor.	Adjust SENSITIVITY; reduce TIME setting; check for constant heat sources; contact support if sensor is faulty.
Light flashes or flickers.	Unstable power supply; loose wiring connection; faulty LED driver.	Check power supply stability; inspect and secure wiring; contact support.
Motion sensor range is poor.	PIR sensor obstructed; SENSITIVITY setting too low; incorrect sensor angle.	Clear obstructions; increase SENSITIVITY; adjust PIR sensor direction.

If troubleshooting steps do not resolve the issue, please contact customer support.

9. SPECIFICATIONS

Model Number	4L2/1100
Brand	4lite
Power Input	220-270V AC
Wattage	46W
Luminous Flux	3719 Lumens
Light Source	Integrated LED
Material	Die-Cast Aluminium
Color	Black
Dimensions (L x W x H)	31.6 x 17.4 x 18.9 cm
Weight	630 g
Operating Temperature	-20°C to 40°C
Special Features	Adjustable PIR Motion Sensor, Adjustable Light Heads
Installation Method	Wall Mount

10. WARRANTY INFORMATION

Specific warranty details for the 4lite 4L2/1100 LED Security Floodlight are typically provided at the point of purchase or on the manufacturer's official website. Please retain your proof of purchase for warranty claims. The warranty generally covers defects in materials and workmanship under normal use.

11. CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact 4lite customer support through their official website or the retailer from whom the product was purchased.

Website: www.4lite.co.uk (Example, actual link may vary)

 
© 2023 4lite. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - 4L2/1100



4lite LED Floodlight with PIR Sensor Installation Guide

Comprehensive installation instructions for the 4lite LED Floodlight with PIR sensor, including warranty information, specifications, and step-by-step guidance.



4lite Arundel Outdoor LED Solar Wall Light with PIR Sensor Installation Instructions

Detailed installation instructions for the 4lite Arundel Outdoor LED Solar Wall Light with PIR Sensor (Product Code: 4L2/6018). Includes steps, diagrams, and feature explanations.



 
4lite Marinus Outdoor IP44 Wall Light Installation Instructions

Comprehensive installation guide for the 4lite Marinus Outdoor IP44 wall light (models 4L2/2307 & 2309), including warranty information, safety precautions, and step-by-step visual instructions translated into English.




4Lite [4L1/4010] LED Panel Installation Guide

Step-by-step installation instructions for the 4Lite [4L1/4010] LED Panel, covering preparation, electrical connections, mounting, and final checks. Includes product information and contact details.



4lite LED ECO Non-Corrosive Batten Installation Guide

 Official installation guide for 4lite LED ECO Non-Corrosive Battens (Product Codes 4L3/1120 to 4L3/1126). Detailed steps for wiring, mounting, and electrical connection. Features include IP65 rating and energy efficiency class E.



4lite Square LED Panel Installation Guide

Step-by-step installation instructions for the 4lite Square LED Panel (Product Code: 4L1/4012), including product details, safety precautions, and manufacturer information.



[pdf] Guide

Trade Lighting Guide 4Lite 50 60Hz LED dimmable fire rated downlight Supplied with matt white bezel as standard Integral driver push fit loop in out terminals for trade lighting guide 4liteuk |||

Trade Lighting Guide 2022 lighting excellence Quality, Design Innovation to Believe in INTRODUCT ... detection distance, time delay and ambient light levels. LED lifetime L70 15,000 hours. SKU Code **4L2/1100** EAN 5056144220953 Description LED Security Light Wattage 46W Lumens 3719 CCT 4000K In...

lang:en score:37 filesize: 9.54 M page count: 136 document date: 2022-07-19



[pdf] Datasheet Warranty Borchure

4lite 4L2 1100 floodlight Product Brochure Datasheet 0 7 MB mmo 117880985 1728284472 7244 4124043 objects icecat biz |||

Security light Security Light Code: **4L2/1100** Lighting excellence 4liteuk 4liteuk 4liteuk 4liteuk Application Commercial, Garden, Industrial Product Features Compact high brightness LED security light Individually adjustable heads to illuminate desired location PIR settings that can adj...

lang:en score:36 filesize: 726.04 K page_count: 1 document date: 2024-10-07



[pdf] User Manual Instructions

Installation PaulDavidson 4lite 4L2 1100 floodlight user manual 0 2 MB mmo 117880985 1728284485 6656 4169653 objects icecat biz |||

Description LED Security Light Installation Instructions Luminaire Code s **4L2/1100** General Installation Instructions These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to th...

lang:en score:34 filesize: 224.29 K page_count: 2 document date: 2021-12-09



[pdf] Catalog

Simple Beautiful Bright LIGHTING CATALOGUE catalogue 4liteuk Lighting Catalogue Welcome 4Lite specialise in the design manufacture and distribution of high quality energy saving luminaries for a variety solutions A division Ansell is built upon 25 years 9 apr 2021 — This product achieves full IP65 ingress protection rating LED strip light extensions kits are 2 metres length can be joined together up to a ||| LIGHTING CATALOGUE Simple. Beautiful. Bright WiZ Home Outdoor Professional Welcome 4Lite speci ... etection distance, time delay and ambient light levels. LED lifetime L70 15,000 hours. SKU Code **4L2/1100** Description Security Light LED Wattage 46W Lumens Delivered CCT 3719 4000K 316 189 75...

lang:en score:16 filesize: 37.95 M page_count: 155 document date: 2021-03-08