

Bomann TSG 5701

Bomann TSG 5701 Table Dishwasher User Manual

Model: TSG 5701

Brand: Bomann

1. INTRODUCTION

Thank you for choosing the Bomann TSG 5701 Table Dishwasher. This compact and efficient appliance is designed to provide convenience and flexibility for small households, offices, camping, or tiny homes. Featuring a 5-liter integrated water tank, it can be used without a permanent water connection, offering unparalleled versatility. This manual provides essential information for safe operation, installation, maintenance, and troubleshooting to ensure optimal performance and longevity of your dishwasher.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance to prevent damage or injury.

- **Electrical Safety:** Ensure the power supply matches the appliance's rating. Do not operate with a damaged power cord or plug. Always unplug before cleaning or maintenance.
- **Water Safety:** Do not immerse the appliance in water. Ensure proper drainage to prevent water leakage.
- **Child Safety:** Keep children away from the appliance during operation. Store detergents and rinse aids out of reach of children.
- **Appliance Handling:** Do not open the door during operation. Use only dishwasher-safe detergents. Do not place flammable or corrosive materials inside.
- **Maintenance:** Only perform maintenance as described in this manual. For repairs, contact authorized service personnel.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Bomann TSG 5701 dishwasher.



Figure 3.1: Front view of the dishwasher, showing the transparent door and control panel.

Ideal für Wohnwagen & Camping oder für kleine Küchen



Figure 3.2: Interior view, highlighting the dish rack and spray arm.

Main Components:

- **Control Panel:** Located at the front, with LED display and touch controls for programs, delay start, and power.
- **Dish Rack:** Removable rack for loading dishes, cups, and cutlery.
- **Cutlery Basket:** For organizing forks, spoons, and knives.
- **Detergent Dispenser:** Compartment for dishwasher detergent.
- **Water Tank (5L):** Integrated tank for manual water filling.
- **Spray Arms:** Located at the top and bottom, responsible for water distribution.
- **Filter System:** Collects food particles to prevent clogging.

4. SETUP

4.1 Unpacking and Placement

Carefully remove all packaging materials. Place the dishwasher on a stable, level surface. Ensure there is enough space around the appliance for proper ventilation and access to connections.

4.2 Water Connection Options

Your Bomann TSG 5701 offers two convenient water connection methods:

1. **Mode 1: Using the Integrated 5L Water Tank (No Permanent Water Connection Required)**

This mode is ideal for portability and locations without a direct water supply. Simply open the water inlet cap on top of the dishwasher and pour in approximately 5 liters of fresh water. The dishwasher will signal when the tank is full.



Figure 4.1: Manual water filling into the 5-liter tank (top) and optional faucet connection (bottom).

2. **Mode 2: Connecting to a Water Faucet (Permanent Connection)**

For continuous use, you can connect the dishwasher directly to a water faucet using the provided inlet hose. Follow the instructions in the detailed manual for secure hose attachment to both the appliance and your water supply.

4.3 Drainage Connection

Connect the drain hose to a suitable drain point, such as a sink or a bucket. Ensure the hose is securely fastened and positioned to allow for proper water drainage without kinks or blockages.

4.4 Filling Dishwasher Salt

For optimal cleaning results and to prevent limescale buildup, especially in areas with hard water, fill the dishwasher salt dispenser. Use the included funnel to easily add dishwasher salt into the designated compartment. The appliance has an indicator to notify you when salt needs refilling.



Figure 4.2: Illustration of the salt funnel and other key features.

5. OPERATING INSTRUCTIONS

5.1 Loading Dishes

Load dishes efficiently to ensure proper water circulation and cleaning. Scrape off large food particles before loading. Place larger items at the back and sides, and ensure dishes do not block the spray arms.

5.2 Adding Detergent

Add the appropriate amount of dishwasher detergent (powder, liquid, or tablet) into the detergent dispenser. Refer to the detergent manufacturer's instructions for dosage.

5.3 Selecting a Program

The Bomann TSG 5701 offers 5 versatile programs to suit different cleaning needs:



Figure 5.1: Overview of available wash programs.

- **ECO (P1)**: Standard program for normally soiled dishes, optimizing water and energy consumption.
- **Normal (P2)**: 60-minute program for lightly soiled dishes.
- **Quick (P3)**: 30-minute wash cycle for lightly soiled dishes without drying.
- **Glass**: For delicate glassware and fine porcelain with light, fresh food residues.
- **Self-cleaning**: For effective self-cleaning of the appliance interior.

5.4 Start Delay Function

You can set a delay for the start of the wash cycle from 1 to 24 hours, allowing you to run the dishwasher at a more convenient time or during off-peak electricity hours.



Figure 5.2: Dishwasher in use, highlighting cleaning temperature range (45°C-72°C) and 1-24h start delay.

5.5 Starting a Cycle

After loading dishes, adding detergent, and selecting your desired program (and delay if applicable), press the 'Start' button to begin the wash cycle.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

- **Cleaning Filters:** Regularly check and clean the filter system at the bottom of the dishwasher. Remove any trapped food particles under running water.
- **Cleaning Spray Arms:** Inspect the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin wire.
- **Cleaning Interior:** Wipe the interior surfaces with a damp cloth after each use. Run the 'Self-cleaning' program periodically to remove grease and limescale buildup.
- **Cleaning Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Descaling:** If you notice white residue on dishes or the interior, it may indicate limescale buildup.

Use a dishwasher descaler or run a cycle with citric acid. Ensure dishwasher salt is always adequately filled.

7. TROUBLESHOOTING

Before contacting customer service, try these common troubleshooting steps:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press start.
Dishes are not clean	Improper loading; insufficient detergent; clogged spray arms/filters; wrong program.	Reload dishes correctly; add more detergent; clean spray arms and filters; select a more intensive program.
Water not draining	Drain hose kinked or blocked; filter clogged; drain pump issue.	Check drain hose for kinks/blockages; clean filters; contact service if pump is faulty.
Error Code E4 displayed	Water leakage detected.	Turn off the appliance and unplug it. Check for visible leaks. Contact customer service for assistance.
Excessive noise during operation	Dishes rattling; foreign object in pump; appliance not level.	Rearrange dishes; check for foreign objects; ensure appliance is level.

8. SPECIFICATIONS

Key technical specifications for the Bomann TSG 5701 Table Dishwasher:

- **Model:** TSG 5701 (757010)
- **Dimensions (D x W x H):** 43.5 cm x 42 cm x 43.5 cm
- **Weight:** 14 kg
- **Water Tank Capacity:** 5 Liters
- **Rated Voltage:** 230 Volts
- **Rated Power:** 860 Watts
- **Operating Frequency:** 50 Hz
- **Noise Level:** 58 dB
- **Number of Programs:** 5 (ECO, Normal, Quick, Glass, Self-cleaning)
- **Annual Energy Consumption:** 40 kWh per 100 cycles
- **Cleaning Temperature Range:** 45°C - 72°C
- **Special Features:** Interior lighting, 1-24h start delay, overflow protection, 2 spray levels.

Ideal für unterwegs

Integrierter 5 Liter Wassertank

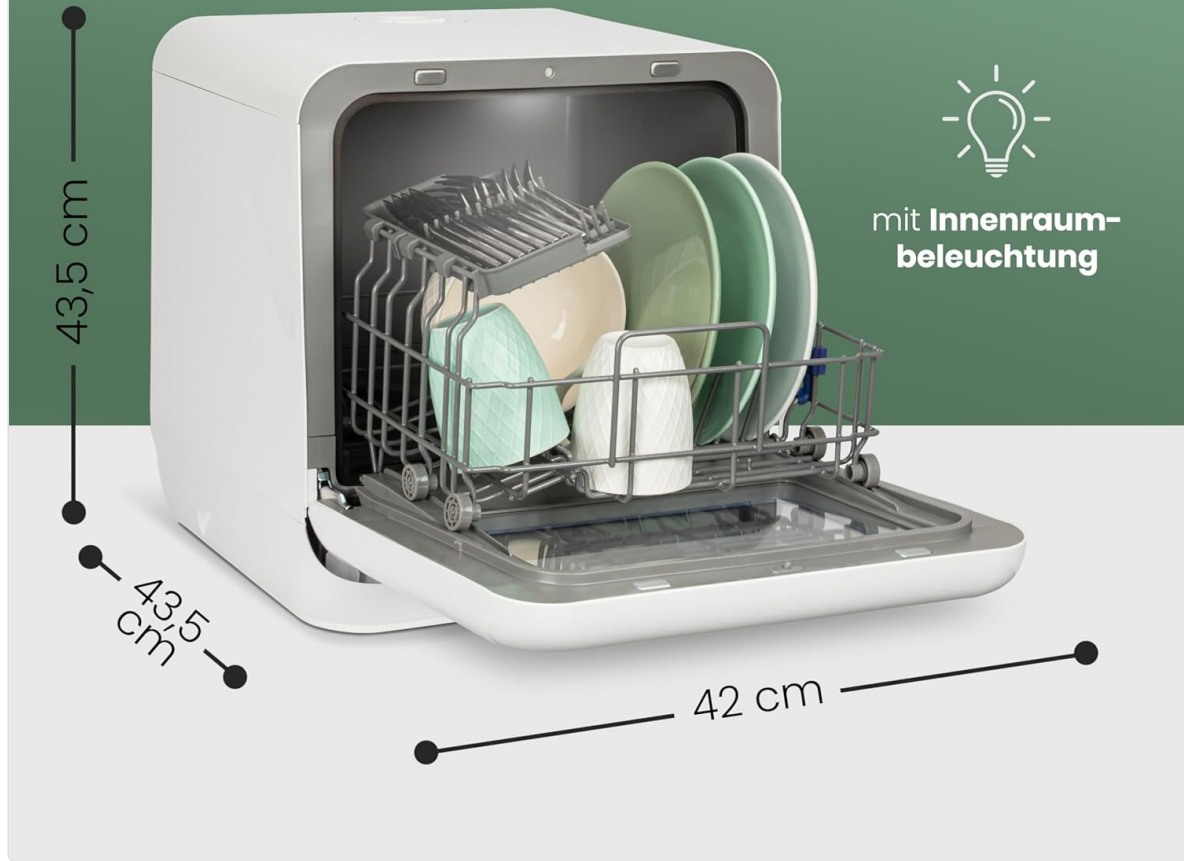


Figure 8.1: Product dimensions for placement planning.

9. WARRANTY AND SUPPORT

Your Bomann TSG 5701 Table Dishwasher comes with a standard manufacturer's warranty. For EU customers, spare parts availability is guaranteed for 2 years.

If you encounter any issues not covered in the troubleshooting section or require technical assistance, please contact Bomann customer support. Have your model number (TSG 5701 or 757010) and purchase information ready when contacting support.

For further information and support, please visit the official Bomann website or refer to your purchase documentation.