

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Crosley](#) /

› [Crosley CR8005F-MT Cruiser Plus Turntable User Manual](#)

## Crosley CR8005F-MT

# Crosley CR8005F-MT Cruiser Plus Turntable User Manual

Vintage 3-Speed Bluetooth In/Out Suitcase Vinyl Record Player

## 1. SAFETY INFORMATION

---

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power adapter matches your local power supply. Unplug the unit during lightning storms or when unused for long periods.
- **Water and Moisture:** Do not expose the unit to rain, moisture, dripping, or splashing. Do not place objects filled with liquids on the apparatus.
- **Ventilation:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Clean only with a dry cloth.
- **Attachments:** Use only attachments/accessories specified by the manufacturer.
- **Servicing:** Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

## 2. WHAT'S IN THE BOX

---

Your Crosley Cruiser Plus Turntable package includes the following items:

- CR8005F Cruiser Plus Turntable
- AC Adapter
- User Manual
- 45 RPM Adapter

### 3. PRODUCT OVERVIEW

---

The Crosley Cruiser Plus Turntable combines classic design with modern functionality. It features a three-speed belt-drive turntable, Bluetooth input and output, dynamic full-range stereo speakers, and various connectivity options, all housed in a portable suitcase design.

- **Three-Speed Belt-Drive Turntable:** Plays 33 1/3, 45, and 78 RPM records. Includes a cueing lever and adjustable pitch control.
- **Bluetooth Connectivity:** Allows playback of your vinyl records through wireless external speakers or streaming digital music to the turntable's built-in speakers.
- **Upgraded Sound & Connection:** Features dynamic full-range stereo speakers, an auxiliary input, RCA output for external stereo systems, and a headphone jack for private listening.
- **Convenience and Portability:** Easy setup and a portable suitcase design with a carry handle for transport.



Figure 1: Crosley Cruiser Plus Turntable (Mint)

### 4. SETUP

---

1. **Unpack the Unit:** Carefully remove the turntable from its packaging and retain all packing materials for future transport or storage.
2. **Power Connection:** Connect the AC adapter to the DC IN jack on the back of the turntable and plug the other end into a wall outlet.
3. **Placement:** Place the turntable on a flat, stable surface away from direct sunlight, heat sources, or excessive vibration.
4. **Remove Stylus Protector:** Gently remove the white plastic stylus protector from the needle assembly.



Figure 2: Rear panel with RCA and Aux-In ports

## 5. OPERATING INSTRUCTIONS

### 5.1 Playing Records

1. **Open the Lid:** Unclasp the front latches and lift the lid of the turntable.
2. **Power On:** Turn the VOLUME knob clockwise to power on the unit. The power indicator light will

illuminate.

3. **Select Speed:** Set the speed switch (33 1/3, 45, or 78 RPM) to match the record you are playing. Use the 45 RPM adapter for records with larger center holes.
4. **Place Record:** Place a record on the turntable platter.
5. **Release Tonearm:** Release the tonearm clip.
6. **Lift Tonearm:** Use the cueing lever to gently lift the tonearm.
7. **Position Tonearm:** Move the tonearm over the desired track of the record. The platter will begin to spin automatically.
8. **Lower Tonearm:** Slowly lower the tonearm using the cueing lever. The stylus will make contact with the record and playback will begin.
9. **Adjust Volume:** Adjust the volume using the VOLUME knob.
10. **Adjust Pitch:** Use the PITCH knob to fine-tune the playback speed if needed.
11. **Auto-Stop:** If the AUTO STOP switch is ON, the turntable will stop spinning automatically when the record finishes. If OFF, it will continue to spin.


# START YOUR VINYL ADVENTURE



Plays 3 Speeds  
(33 1/3, 45 & 78 RPM)



Compact and  
Portable

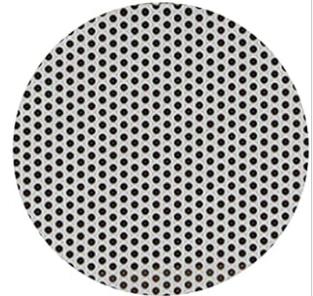


Built-in Stereo  
Speakers

Figure 3: Turntable in operation with a vinyl record



## Stream Vinyl Through External Bluetooth Speakers

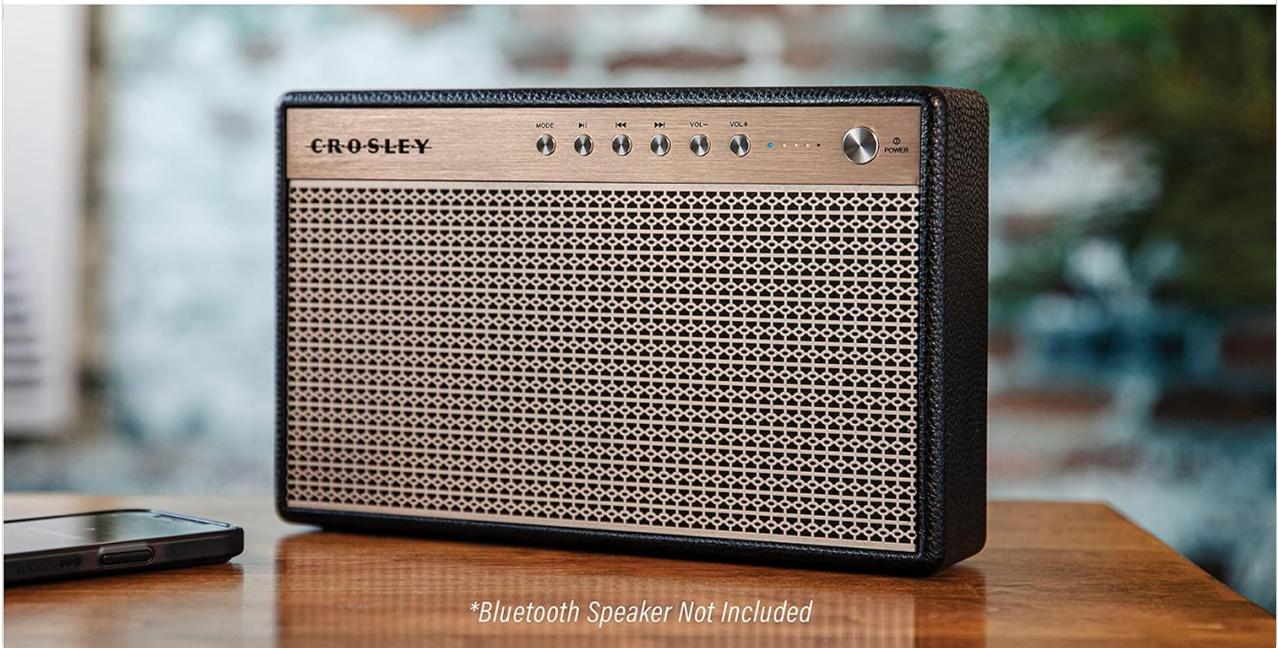

*\*Bluetooth Speaker Not Included*

Figure 4: Speed selection switch

## 5.2 Bluetooth Connectivity

The Cruiser Plus offers both Bluetooth input (to play audio from your device through the turntable's speakers) and Bluetooth output (to play records through external Bluetooth speakers).

### 5.2.1 Bluetooth Input (Streaming to Turntable)

1. **Select Bluetooth Mode:** Slide the PHONO/BT switch to the BT position. The Bluetooth indicator light will flash.
2. **Pair Device:** On your Bluetooth-enabled device (smartphone, tablet, etc.), search for "Crosley Cruiser Plus" in the Bluetooth settings and pair.
3. **Play Audio:** Once paired, the indicator light will be solid. You can now play audio from your device through the turntable's built-in speakers.



Figure 5: Streaming digital music to built-in speakers

### 5.2.2 Bluetooth Output (Streaming from Turntable)

1. **Select Phono Mode:** Ensure the PHONO/BT switch is in the PHONO position.
2. **Activate Bluetooth Output:** Press and hold the Bluetooth button (usually near the PHONO/BT switch) until the indicator light flashes rapidly.
3. **Pair External Speaker:** Put your external Bluetooth speaker into pairing mode. The turntable will automatically search for and connect to the nearest Bluetooth speaker.
4. **Play Record:** Once paired, the indicator light will be solid. Play a record as described in section 5.1. The audio will now stream to your external speaker.



Figure 6: Streaming vinyl to external Bluetooth speakers

### 5.3 Other Connections

- **Auxiliary Input:** Connect an external audio device (e.g., MP3 player) to the AUX IN jack on the back of the unit using a 3.5mm audio cable.
- **RCA Output:** Connect the RCA output jacks on the back of the turntable to an external stereo system or powered speakers using RCA cables.
- **Headphone Jack:** For private listening, plug headphones into the headphone jack on the front panel.



Figure 7: Headphone jack for private listening

## 6. MAINTENANCE

- **Stylus Care:** The stylus is delicate. Handle it carefully. Clean the stylus periodically with a soft brush, brushing from back to front.
- **Cleaning the Unit:** Wipe the turntable's exterior with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Record Care:** Keep records clean and free of dust. Store them vertically in their sleeves to prevent warping.

- **Storage:** When not in use, ensure the tonearm is secured with its clip and the lid is closed to protect the unit from dust and damage.

## 7. TROUBLESHOOTING

If you experience issues with your Crosley Cruiser Plus, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	AC adapter not connected or faulty outlet.	Ensure AC adapter is securely connected and plugged into a working outlet. Try a different outlet.
No sound from speakers	Volume too low; PHONO/BT switch in wrong position; external speakers not connected/powering.	Increase volume. Ensure PHONO/BT switch is in PHONO for records or BT for Bluetooth input. Check external speaker connections and power.
Record skipping	Dirty or damaged record; dirty or worn stylus; turntable not level.	Clean record. Clean or replace stylus. Ensure turntable is on a flat, stable surface.
Bluetooth pairing issues	Device too far; turntable not in pairing mode; interference.	Ensure devices are within range. Confirm turntable is in correct Bluetooth pairing mode (flashing light). Reduce interference from other devices.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Cruiser Plus
Item Model Number	CR8005F-MT
Dimensions (L x W x H)	13.78 x 10.24 x 4.72 inches
Item Weight	5.5 pounds
Material	Plastic
Power Source	Corded Electric (5 Volts)
Rotational Speeds	33 1/3, 45, 78 RPM
Special Features	Built-In Speaker, Built-In Bluetooth Receiver, Pitch Control, RCA Output, Volume Control
Compatible Devices	Laptop, MP3 Player, Personal Computer, Smartphone, Speaker



Figure 8: Product Dimensions

## 9. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Crosley website.

For technical assistance or customer support, please contact Crosley customer service. Contact information can typically be found on the product packaging or the official Crosley website.