

- Manuals.plus /
- › Shadowhawk /
 - › Shadowhawk LED Flashlight S1476 User Manual

Shadowhawk S1476

Shadowhawk LED Flashlight S1476 User Manual

Model: S1476

Introduction	What's in the Box	Setup	Operating Instructions	Maintenance	Troubleshooting
	Specifications	Safety Information		Warranty & Support	

1. INTRODUCTION

Thank you for choosing the Shadowhawk S1476 LED Flashlight. This high-performance, rechargeable flashlight is designed for various applications, offering exceptional brightness, adjustable focus, and multiple lighting modes. Its robust aluminum construction and IP67 waterproof rating ensure durability and reliability in diverse environments. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to help you get the most out of your device.



Image 1: Shadowhawk S1476 LED Flashlight and included accessories.

2. WHAT'S IN THE BOX

Upon unboxing, please verify that all the following components are present:

- Shadowhawk S1476 LED Flashlight
- High-Capacity Rechargeable Lithium-Ion Battery (5000mAh)
- USB-C Charging Cable
- AAA Battery Holder (for 3 AAA batteries)
- 3 x AAA Batteries
- Lanyard
- Protective Storage Case
- Belt Holster

- Mini LED Keychain Light



Image 2: All components included in the Shadowhawk S1476 package.

3. SETUP

3.1 Battery Installation

The Shadowhawk S1476 flashlight can be powered by the included rechargeable Lithium-Ion battery or by three AAA batteries using the provided battery holder.

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.
2. **For Rechargeable Lithium-Ion Battery:** Insert the 5000mAh Lithium-Ion battery with the positive (+) end facing towards the flashlight head.
3. **For AAA Batteries:** Place three AAA batteries into the AAA battery holder, ensuring correct polarity. Insert the

battery holder into the flashlight with the positive (+) end of the holder facing towards the flashlight head.

4. Screw the tail cap back on clockwise until it is securely tightened.

3.2 Charging the Flashlight

The Shadowhawk S1476 features a convenient USB-C charging port. The flashlight can also function as a power bank to charge other devices via its USB-A output port.

1. Locate the USB-C charging port on the side of the flashlight, usually protected by a rubber cover.
2. Open the rubber cover and insert the provided USB-C charging cable into the port.
3. Connect the other end of the USB-C cable to a USB power source (e.g., wall adapter, power bank, computer USB port, car charger).
4. The blue indicator lights on the flashlight will illuminate to show the charging progress (25%, 50%, 75%, 100%).
5. A full charge typically takes approximately 4 to 6 hours.
6. Once fully charged, disconnect the cable and securely close the rubber cover to maintain IP67 waterproof integrity.

Power Bank Function: To use the flashlight as a power bank, connect your device's charging cable to the USB-A output port on the flashlight.

Étanchéité IP67

Joint en Caoutchouc Robuste Résistant Aux Intempéries Comme la Pluie et la Neige



**Capuchon de Protection
en Caoutchouc**



**Joint d'étanchéité de
3mm**

Image 3: USB-C charging of the Shadowhawk S1476 flashlight.

5 Modes D'éclairage

Pour Répondre à vos Différents Besoins Dans Différentes Situations

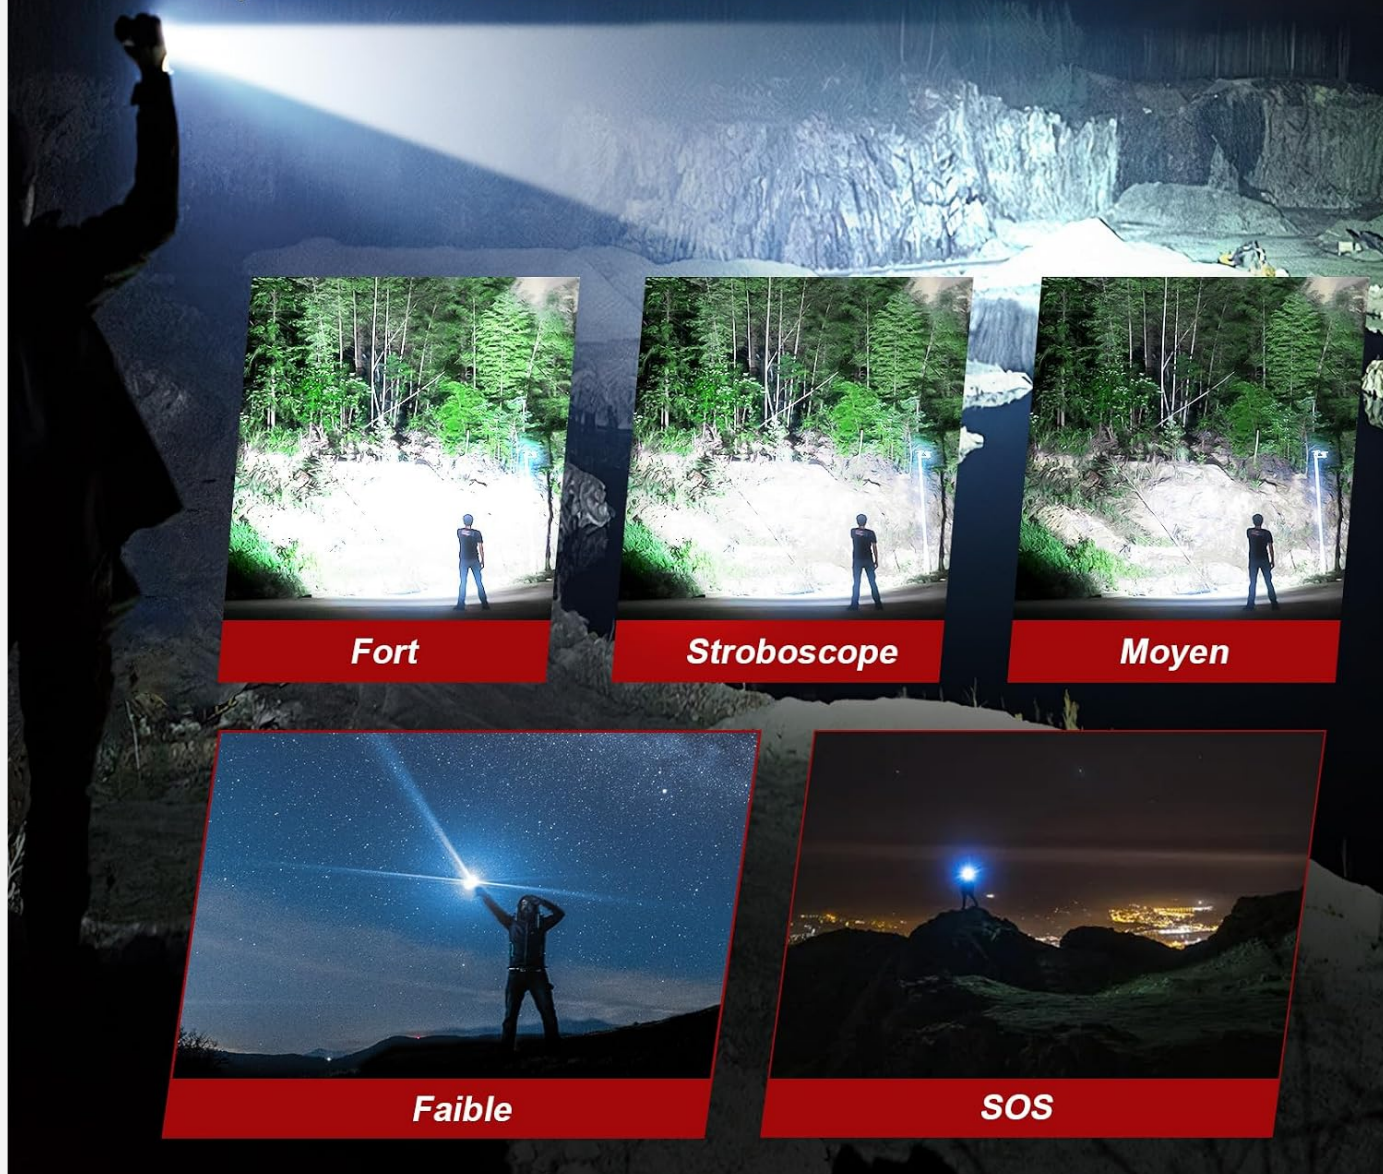


Image 4: The flashlight's power bank function, charging a mobile phone.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Turn On:** Press the power button once.
- **To Turn Off:** Press and hold the power button for approximately 3 seconds. This allows you to turn off the flashlight directly without cycling through all modes.

4.2 Switching Lighting Modes

The Shadowhawk S1476 features 5 distinct lighting modes to suit various situations:

- **Strong:** Maximum brightness for powerful illumination.
- **Medium:** Balanced brightness for general use.
- **Low:** Reduced brightness for extended battery life or close-range tasks.

- **Strobe:** Flashing light for signaling or disorienting.
- **SOS:** International Morse code signal for emergencies.

To Cycle Modes: With the flashlight on, press the power button repeatedly to cycle through the modes in the order: Strong → Strobe → Medium → Low → SOS.



Image 5: The five available lighting modes for various needs.

4.3 Adjustable Focus (Zoom Function)

The flashlight features an adjustable focus mechanism, allowing you to switch between a wide floodlight and a concentrated spotlight beam.

- **To Adjust Focus:** Gently slide the head of the flashlight forward or backward. There is no rotation required.
- Sliding the head forward will narrow the beam into a focused spotlight, ideal for long-distance illumination (up to 500m).
- Sliding the head backward will widen the beam into a broad floodlight, suitable for illuminating a larger area.

Mise au Point Réglable

Faites Glisser la Tête Pour Régler la Mise au Point - Pas de Rotation

ZOOM AVANT



ZOOM ARRIÈRE

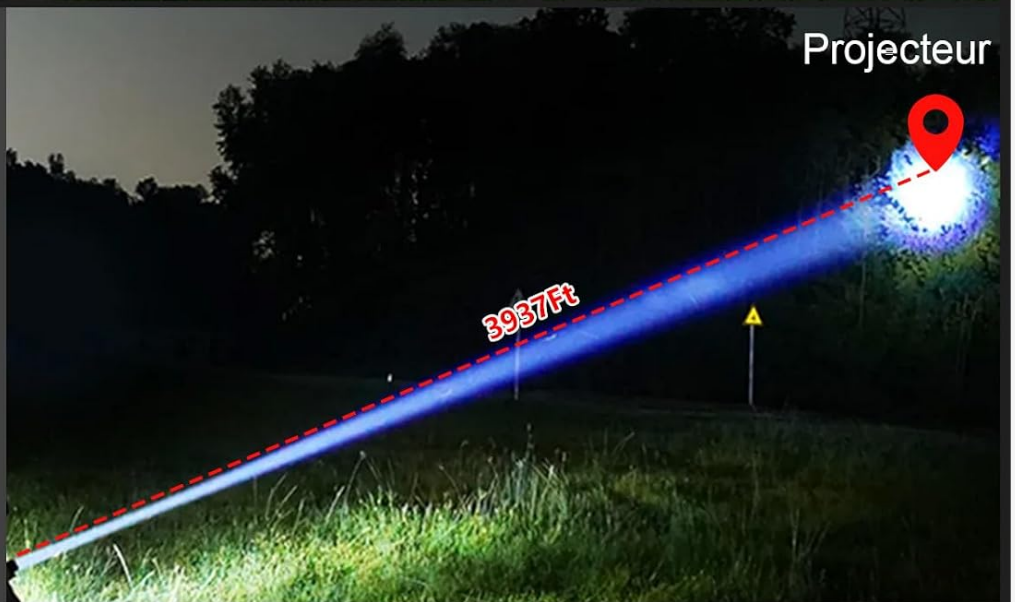


Image 6: Adjusting the focus by sliding the flashlight head.

Faisceau Ultra-Lumineux et Large

Portée Maximale : Jusqu'à 500m

30W



Puce LED XHP70.2
Améliorée

Appuyez longuement
pendant **3s** pour éteindre
directement, sans avoir à
changer de mode !



Image 7: The flashlight's ultra-bright and wide beam capability.

5. MAINTENANCE

- **Cleaning:** Wipe the flashlight body with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** For optimal battery life, recharge the Lithium-Ion battery regularly, even if not in frequent use. Avoid fully discharging the battery.
- **Storage:** Store the flashlight in a cool, dry place, away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries.
- **O-rings:** Periodically inspect the O-rings for wear and tear. A thin layer of silicone grease can be applied to maintain their integrity and the flashlight's waterproof rating.

Lampe Torche Rechargeable de Camping

Chargement USB-C, Peut être Rechargée Sur Une Source D'alimentation Portable en Extérieur.



Image 8: The IP67 waterproof design with robust rubber sealing.

6. TROUBLESHOOTING

If you encounter issues with your Shadowhawk S1476 flashlight, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Flashlight does not turn on.	Battery is dead or low. Battery inserted incorrectly. Tail cap is loose.	Recharge the battery. Check battery polarity. Tighten the tail cap securely.
Light is dim or flickers.	Low battery charge. Loose connection.	Recharge the battery. Ensure tail cap is tight and battery contacts are clean.

Problem	Possible Cause	Solution
Flashlight does not charge.	Charging cable or adapter faulty. Charging port obstructed.	Try a different USB-C cable and power adapter. Check the charging port for debris and clean if necessary.
Flashlight gets hot during use.	Normal operation at high brightness.	This is normal for high-lumen flashlights. Reduce brightness mode if excessive heat is a concern.

7. SPECIFICATIONS

Feature	Detail
Brand	Shadowhawk
Model	S1476
Light Source Type	LED (XHP70.2)
Brightness	1000 Lumens (Max)
Beam Distance	Up to 500 meters
Lighting Modes	Strong, Strobe, Medium, Low, SOS (5 modes)
Power Source	Battery Powered
Battery Type	Rechargeable Lithium-Ion (5000mAh) or 3 x AAA batteries
Running Time	Up to 12 hours (depending on mode)
Charging Time	4-6 hours (via USB-C)
Material	Aluminum
Color	Black
Special Feature	Adjustable Focus (Zoom), Power Bank Function
Waterproof Rating	IP67
Product Dimensions	1.57 x 1.57 x 5.91 inches
Item Weight	1.08 pounds (approx. 0.49 kg)
Voltage	4.2 Volts



Image 9: Product Information Sheet with detailed specifications.

For more detailed product information and energy efficiency data, please refer to the EPREL database:

<https://eprel.ec.europa.eu/qr/2076366>

8. SAFETY INFORMATION

Please read and adhere to the following safety precautions to prevent injury or damage to the flashlight:

- **WARNING: Do not shine the light directly on the eyes.** The high intensity beam can cause temporary vision impairment or permanent eye damage.
- Keep out of reach of children.
- Do not disassemble the flashlight. This will void the warranty and may cause damage.
- Avoid exposing the flashlight to extreme temperatures or open flames.
- Use only the recommended battery types and charging methods.
- Ensure the rubber cover for the charging port is securely closed when not charging to maintain waterproof integrity.



Image 10: Important safety warning regarding direct eye exposure.

9. WARRANTY & SUPPORT

The Shadowhawk S1476 LED Flashlight comes with a **Lifetime Warranty**, reflecting our commitment to quality and durability.

For any questions, technical support, or warranty claims, please contact our customer service team:

Manufacturer: Shadowhawk

After-Sales Service Email: support.eu@shadowhawk.top

EC/REP EU Authorized Representative:

Name: TechTribe GmbH

Address: Romy-Schroder-Strasse 4a, 40549 Dusseldorf, Germany
Email: SherifaTradingEU@163.com



Image 11: Product information and contact details from packaging.

© 2025 Shadowhawk. All rights reserved.
Shadowhawk S1476 LED Flashlight User Manual

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09CY4HZVD>

More documents and user manuals: <https://manuals.plus/>