

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› [Easytry123 Replacement Remote Control User Manual for RCA Smart TVs \(RNSMU Series\)](#)

**Easytry123 Replacement Remote Control for RCA RNSMU4336, RNSMU5036, RNSMU6036, RNSMU5536, RNSMU5536REM, RNSMU6536, RNSMU7036, RNSMU**

# Easytry123 Replacement Remote Control User Manual

For RCA Smart TV Models: RNSMU4336, RNSMU5036, RNSMU6036, RNSMU5536, RNSMU5536REM, RNSMU6536, RNSMU7036, RNSMU7036-B, RNSMU5836, RNSMU8220, RNSMU7536-B, RHOS581SM-D

## 1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various RCA Smart TV models. This remote offers essential functions for controlling your television. Please note that as a replacement unit, some advanced or specific functions of your original remote may not be fully supported.



Image 1: Front view of the Easytry123 replacement remote control, showing all buttons.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires two (2) AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to remove it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2: Rear view of the remote control with the battery cover removed, showing the battery slots.

## 2.2 Initial Use

This replacement remote control uses infrared (IR) technology and typically does not require programming. Once batteries are installed, point the remote directly at your RCA TV and press the **POWER** button to test functionality. Ensure there are no obstructions between the remote and the TV's IR receiver.

## 3. OPERATING THE REMOTE CONTROL

The remote control features a standard layout for easy navigation and control of your RCA TV. Below is a general guide to the main button functions:

- **POWER (Red Button)**: Turns the TV on or off.
- **MUTE**: Mutes or unmutes the TV audio.
- **Number Pad (0-9)**: Directly input channel numbers.
- **BACK/RETURN**: Returns to the previous menu or screen.
- **MENU**: Accesses the TV's main menu.
- **SOURCE**: Selects input sources (e.g., HDMI 1, AV, TV).
- **Navigation Buttons (Up, Down, Left, Right)**: Navigate through menus and options.
- **OK**: Confirms selections in menus.
- **HOME** (House icon): Returns to the TV's home screen or smart TV interface.
- **EXIT**: Exits the current menu or application.
- **VOL +/-**: Adjusts the volume level.

- **CH +/-:** Changes TV channels.
- **INFO:** Displays information about the current program or input.
- **EPG:** Accesses the Electronic Program Guide.
- **CC/SUBTITLE:** Toggles Closed Captions or subtitles.
- **MTS:** Selects Multi-channel Television Sound options.
- **REC:** Initiates recording (if supported by TV and connected device).
- **CH LIST:** Displays the channel list.
- **FAV:** Accesses favorite channels.
- **QUICK:** Provides quick access to certain functions (functionality may vary by TV model).
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the TV menu or application.
- **Media Control Buttons** (Play/Pause, Rewind, Fast Forward, Stop): Control media playback.

## 4. MAINTENANCE

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types of batteries.

## 5. TROUBLESHOOTING

- **Remote is not working:**
  - Ensure batteries are installed correctly with the correct polarity (+/-).
  - Replace old batteries with new ones.
  - Point the remote directly at the TV's infrared receiver.
  - Remove any obstructions between the remote and the TV.
  - Confirm the TV is powered on.
- **Some functions are not working:**
  - As a replacement remote, certain advanced or specific functions of your original TV remote may not be supported. This is normal for universal or replacement remotes.
  - Ensure your TV model is listed as compatible in the product description.

## 6. SPECIFICATIONS

<b>Brand</b>	Easytry123
<b>Compatible Devices</b>	RCA Smart TVs (RNSMU4336, RNSMU5036, RNSMU6036, RNSMU5536, RNSMU5536REM, RNSMU6536, RNSMU7036, RNSMU7036-B, RNSMU5836, RNSMU8220, RNSMU7536-B, RHOS581SM-D)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Batteries Required</b>	2 x AA (not included)
<b>Special Feature</b>	Ergonomic design

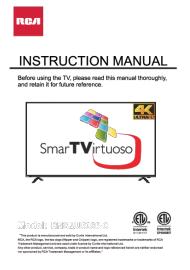
## 7. WARRANTY AND SUPPORT

Information regarding warranty and specific customer support for this Easytry123 replacement remote control is not provided in the product details. For any issues or inquiries, please refer to the seller or your purchase documentation.

© 2023 Easytry123. All rights reserved. This manual is for informational purposes only.

### Related Documents - Replacement Remote Control for RCA RNSMU4336, RNSMU5036, RNSMU6036, RNSMU5536, RNSMU5536REM, RNSMU6536, RNSMU7036, RNSMU

 A detailed exploded view diagram for the Bissell Lift-Off Bagless vacuum cleaner, showing various components like the motor, filter, and base assembly with part numbers and descriptions.	<p><a href="#">Bissell Lift-Off Bagless Vacuum Cleaner Parts List and Diagram</a></p> <p>Official parts list and exploded view diagram for Bissell Lift-Off Bagless (Models 3750, 6595, 6801) and Lift-Off Revolution Bagless (Models 3760, 4220, 6850, 6860) vacuum cleaners, detailing replacement parts and assembly.</p>
 A red and black technical specification sheet for the Autonics AiC-D-CL Series 2-Phase Closed-Loop Stepper Motor Drivers, featuring a table of contents and several pages of detailed technical data.	<p><a href="#">Autonics AiC-D-CL Series: 2-Phase Closed-Loop Stepper Motor Driver Technical Specification</a></p> <p>Detailed technical specifications, features, ordering information, configuration diagrams, and control I/O for the Autonics AiC-D-CL Series 2-Phase Closed-Loop Stepper Motor Drivers, essential for industrial automation and motion control applications.</p>

	<p><a href="#"><u>Bobrick Sanitary Napkin and Tampon Vendor Manuals and Instructions</u></a></p> <p>Comprehensive guide covering maintenance, installation, and conversion instructions for Bobrick ADA-Compliant Sanitary Napkin and Tampon Vendors, including models B-2706, B-3706, B-37063, B-370634, B-370639, B-4706, B-47064, and B-47069.</p>
	<p><a href="#"><u>RCA RNSMU5836 58-inch 4K UHD Smart TV Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the RCA RNSMU5836 58-inch 4K UHD Smart TV. Covers setup, connections, smart features, menu options, and troubleshooting for optimal user experience.</p>
	<p><a href="#"><u>RCA RNSMU5036-C Smart TV Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the RCA RNSMU5036-C Smart TV, covering setup, operation, features, troubleshooting, and safety precautions. Learn how to connect, configure, and use your RCA television.</p>
	<p><a href="#"><u>Rheem RKKN-B Commercial Package Gas-Electric Unit Parts List and Technical Information</u></a></p> <p>Comprehensive parts list, model explanation, and technical diagrams for the Rheem RKKN-B Commercial Series Package Gas-Electric Rooftop Unit. This document details component identification, part numbers, and assembly views for HVAC service professionals.</p>