

Dprofy Pro (B09CYP72W8)

Dprofy Pro Portable Magnetic Bluetooth Golf Speaker User Manual

Model: Pro (ASIN: B09CYP72W8)

Brand: Dprofy

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Dprofy Pro Portable Magnetic Bluetooth Golf Speaker. Please read this manual thoroughly before operation and retain it for future reference.

The Dprofy Pro speaker is designed for portability and durability, featuring strong magnetic attachment, IPX6 waterproof and shockproof capabilities, and TWS (True Wireless Stereo) functionality for an enhanced audio experience. It is ideal for use in various outdoor environments, including golf courses.



Image: Two Dprofy Pro Portable Magnetic Bluetooth Golf Speakers. These speakers are black with red accents, featuring a rugged design and visible control buttons on the top surface. They are shown from an angled top-down perspective, highlighting their compact and robust build.

2. WHAT'S IN THE BOX

Verify that all components are present upon unboxing:

- 2 x Dprofy Pro Portable Magnetic Bluetooth Golf Speakers
- 1 x Type-C Charging Cable
- 1 x Aux-in Cable
- 1 x Carabiner (for portability)
- 1 x User Manual (this document)

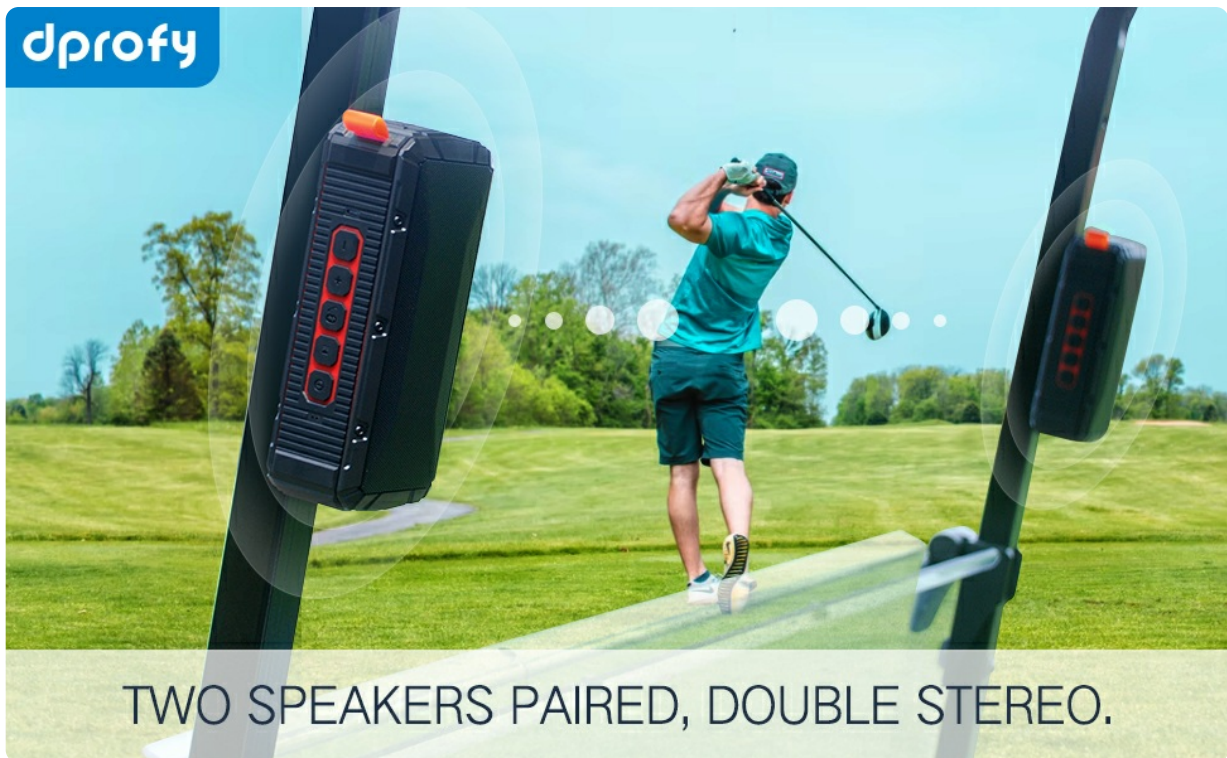


Image: The package contents of the Dprofy speaker, including two speakers, a Type-C charging cable, an Aux-in cable, a carabiner, and the user manual, neatly arranged on a green, grass-like surface.

3. SETUP AND CHARGING

3.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's Type-C port and the other end to a USB power adapter (not included). The charging indicator light will illuminate during charging and turn off when fully charged.

- Battery Capacity: 3200mAh (per speaker)
- Charging Time: Approximately 1.5 hours for a full charge.
- Fast Charging: Achieves 80% charge in approximately 60 minutes.



Image: A close-up view of the Dprofy speaker's Type-C charging port, with a charging cable connected, emphasizing the fast charging capability.

3.2 Powering On/Off

To power on the speaker, press and hold the Power button until you hear an audible prompt and the indicator light illuminates. To power off, press and hold the Power button again until the speaker shuts down.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicator light flashing).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Dprofy Pro" from the list of devices.
4. Once connected, the speaker will provide an audible confirmation, and the indicator light will remain solid.

The speaker is compatible with any Bluetooth-enabled signal source, including iPhone and Android devices.



Image: The Dprofy speaker highlighting its Bluetooth 5.3 connectivity and 16W power output, with a smartphone displaying music playback, indicating a successful Bluetooth connection.

4.2 True Wireless Stereo (TWS) Pairing

To achieve real stereo sound, you can pair two Dprofy Pro speakers together:

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the TWS button (often indicated by a chain link or infinity symbol). The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. You will hear an audible confirmation once TWS pairing is successful.
4. Now, connect your device to the primary speaker via Bluetooth as described in Section 4.1. Audio will play through both speakers, providing a stereo experience.

TWS pairing distance is within 9.8ft (3m).

WIRELESS STEREO PAIRING

Automatic pairing of two speakers when powered on.



Image: Two Dprofy speakers positioned to demonstrate the True Wireless Stereo (TWS) pairing feature, with visual cues indicating left and right channel separation for an immersive audio experience.

4.3 SD Card Function

The speaker supports playback directly from a Micro SD card (also known as TF card). Simply insert your Micro SD card into the designated slot on the speaker. The speaker will automatically switch to SD card playback mode.



Image: A detailed view of the Dprofy speaker's connectivity ports, clearly showing the Micro SD card slot, Type-C charging port, and Aux-in port, all protected by a rubber flap.

4.4 Aux-in Mode

For devices without Bluetooth, use the provided 3.5mm Aux-in cable. Connect one end to the speaker's Aux-in port and the other end to your audio source's headphone jack. The speaker will automatically switch to Aux-in mode.

4.5 Controls

The speaker features intuitive controls on its top panel:

- **Power Button:** Press and hold to power on/off.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Up (+):** Press to increase volume. Press and hold for continuous volume increase.
- **Volume Down (-):** Press to decrease volume. Press and hold for continuous volume decrease.
- **Next Track Button:** Press to skip to the next track.
- **Previous Track Button:** Press to go to the previous track.
- **TWS Button:** Double-press to initiate TWS pairing (see Section 4.2).

4.6 Magnetic Mounting and Portability

The Dprofy Pro speaker features super powerful magnets for secure attachment to any steel or iron surface, such as golf carts, forklifts, filing cabinets, refrigerators, bicycles, RVs, ATVs, and basketball stands. This eliminates the need for clumsy cup holders or clips.

Additionally, the speaker includes a carabiner for easy attachment to golf bags, backpacks, or other gear, enhancing its portability.



Built-in powerful magnets no longer using clumsy cup holder or clip and no loss due to broken belt.

Image: A visual comparison demonstrating the Dprofy speaker's magnetic attachment to a golf cart frame, contrasting it with a traditional strap-based speaker mount. The image emphasizes the ease of installation, secure hold, and overall convenience of the magnetic feature.



Easy to carry

In two ways, it can be easily fixed to golf carts or various golf bags through magnets and hooks.

Image: The Dprofy speaker shown in two scenarios: magnetically attached to a golf cart frame and secured to a golf bag using its integrated carabiner, demonstrating its versatile and easy portability.

5. MAINTENANCE AND CARE

5.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals, cleaning solvents, or strong detergents. Ensure all ports are closed before cleaning if water is involved.

5.2 Water and Dust Resistance (IPX6)

The Dprofy Pro speaker is IPX6 waterproof and dustproof, meaning it can withstand powerful water jets and is protected against dust ingress. It is suitable for use in rain or dusty environments. However, it is not designed for submersion in water.

Important: Ensure the rubber flap covering the charging and AUX ports is securely closed to maintain water resistance.



Image: The Dprofy speaker being splashed with water, visually confirming its IPX6 waterproof and dustproof rating, suitable for outdoor use in various weather conditions.

5.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its lifespan.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully using the provided Type-C cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device Bluetooth is off; speaker is already connected to another device.	Ensure speaker is in pairing mode (flashing indicator). Turn on Bluetooth on your device. Disconnect speaker from any other device. Restart both speaker and device.

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low on speaker or device; incorrect input mode; speaker not connected.	Increase volume on both speaker and connected device. Ensure correct input mode (Bluetooth, SD, Aux). Verify successful connection.
TWS pairing fails.	Speakers are too far apart; one speaker is already connected to a device.	Ensure speakers are within 9.8ft (3m) of each other. Disconnect both speakers from any Bluetooth devices before initiating TWS pairing.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge the speaker. Move speaker closer to the audio source or away from potential interference sources.

7. SPECIFICATIONS

Feature	Detail
Model Name	Pro
Material	Iron, Plastic
Speaker Type	Outdoor
Special Features	Stereo Pairing (TWS), Strong Magnetic Base, IPX6 Waterproof/Dustproof
Recommended Uses	For Music Players (Golf Cart, Outdoor Activities)
Compatible Devices	Smartphone, Tablet, MP3 Player, Desktop, Laptop, Television, Projector
Unit Count	2 Count (for TWS functionality)
Surround Sound Channel Configuration	2.0
Color	Black, Red
Product Dimensions (L x W x H)	6"D x 2"W x 4"H (approx. 15.24cm x 5.08cm x 10.16cm)
Item Weight	2.23 pounds (approx. 1.01 kg)
Waterproof Rating	IPX6
Wireless Communication Technology	Bluetooth 5.3
Power Source	Battery Powered
Battery Capacity	3200 mAh (per speaker)
Playtime Duration	Up to 24 hours at 60% volume; 4-5 hours at full volume
Charging Time	Approx. 1.5 hours for full charge (Type-C)

Feature	Detail
Speaker Maximum Output Power	16 Watts (8W x 2 RMS)
Connectivity Technology	Bluetooth, Aux-in, Micro SD (TF Card)
Mounting Type	Magnetic (Flush Mount)
TWS Pairing Distance	Within 9.8ft (3m)

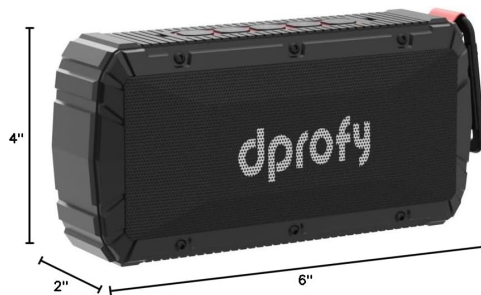 


Image: A diagram illustrating the physical dimensions of the Dprofy speaker, showing its length as 6 inches, width as 2 inches, and height as 4 inches.

8. WARRANTY AND SUPPORT

 



Dprofy stands proudly behind every product offered. For any issues or inquiries, please contact Dprofy customer support. Refer to your purchase documentation for specific warranty terms and contact information.

Protection plans are available for extended coverage:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect Plan (monthly subscription covering eligible past and future purchases)

For further assistance, you may visit the official Dprofy Store:[Dprofy Store on Amazon](#)

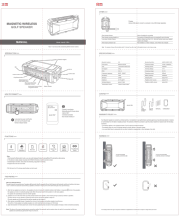Related Documents - Pro (B09CYP72W8)

	<p>dprofy V3M Magnetic Wireless Golf Speaker User Manual</p> <p>User manual for the dprofy V3M Magnetic Wireless Golf Speaker, detailing its features, functions, specifications, and usage instructions for Bluetooth connectivity, TWS pairing, and operation.</p>
	<p>Dprofy GM10 Golf Cart Magnetic Phone Mount User Manual</p> <p>User manual for the Dprofy GM10 Golf Cart Magnetic Phone Mount and Training Aid, detailing package contents, installation, phone mounting, rotation adjustment, Bluetooth remote shutter usage, golf bag clip attachment, and battery replacement.</p>
	<p>Precision Pro NX10 Golf Rangefinder: Personalization, Features, and How-To Guide</p> <p>Explore the Precision Pro NX10 golf rangefinder, including personalization options, key features like slope adjustment, magnetic mounting, and step-by-step usage instructions. Learn about customer support and warranty.</p>
	<p>Voice Caddie T11 PRO GPS Golf Watch User Manual</p> <p>Comprehensive user manual for the Voice Caddie T11 PRO GPS Golf Watch, detailing its features, functions, and operation for an enhanced golf experience.</p>