

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› [Easytry123 Replacement Remote Control Instruction Manual for Panasonic Air Conditioners](#)

Easytry123 CWA75C3755, CS-YE9MKV-7, CS-RE15NKX, CS-RE12NKX, CS-YE9PKY, CS-RE12JKE, CS-RE15JKE, CWA75C3814, CS-RE9NKX, CS-RE9NKR

Easytry123 Replacement Remote Control Instruction Manual

For Panasonic Air Conditioner Models: CWA75C3755, CS-YE9MKV-7, CS-RE15NKX, CS-RE12NKX, CS-YE9PKY, CS-RE12JKE, CS-RE15JKE, CWA75C3814, CS-RE9NKX, CS-RE9NKR

IMPORTANT SAFETY INFORMATION

Please read this manual carefully before using the remote control. Keep this manual for future reference.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Keep the remote control away from direct sunlight, heat sources, and moisture.
- This is a replacement remote control. Some advanced functions of your original air conditioner unit may not be fully supported. Verify compatibility with your specific air conditioner model.

PRODUCT OVERVIEW

This Easytry123 replacement remote control is designed to operate various Panasonic Room Air Conditioner models. It provides essential functions for controlling your air conditioning unit.



Image 1: Front view of the Easytry123 replacement remote control. It features an LCD screen at the top, an orange ON/OFF button, and various function buttons for mode, temperature, fan speed, swing, turbo, quiet, and timer settings.

Before use, ensure your air conditioner model is listed as compatible. While designed for broad compatibility, specific advanced features of your original remote may not be replicated.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Replace the battery cover by sliding it back into position until it clicks securely.



Image 2: Back view of the remote control with the battery cover removed, revealing the compartment for two AA batteries. The positive and negative terminals are clearly marked.

Note: Batteries are not included with the remote control and must be purchased separately.

OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.

Button Functions:

- **ON/OFF:** Press to turn the air conditioner unit on or off.
- **MODE:** Cycles through operating modes such as AUTO, HEAT, COOL, DRY, and FAN.

- **TEMP ▼ (Down) / TEMP ▲ (Up):**Adjusts the desired temperature setting.
- **FAN:** Selects the fan speed (e.g., Low, Medium, High, Auto).
- **SWING:** Activates or deactivates the louver swing function for air distribution.
- **TURBO:** Engages a powerful operating mode for rapid cooling or heating.
- **QUIET:** Activates a low-noise operating mode.
- **TIMER (SET/CANCEL, SELECT):** Used to set or cancel programmed on/off times for the air conditioner. Refer to your air conditioner's manual for detailed timer programming.

The LCD screen will display the current settings, including mode, temperature, and fan speed.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the surface or internal components.

Battery Replacement

Replace batteries when the remote control's range decreases or if the display becomes dim. Always replace both batteries simultaneously with new AA batteries.

TROUBLESHOOTING

- **Remote control not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner unit.
 - Confirm the remote control is pointed directly at the air conditioner's receiver.
- **Some functions do not work:**
 - This is a replacement remote. It may not support all advanced or unique functions present on your original air conditioner remote.
 - Verify that your air conditioner model is listed as compatible with this remote.

SPECIFICATIONS

| | |
|--------------------------------|---|
| Brand | Easytry123 |
| Compatible Devices | Panasonic Room Air Conditioners (Specific models listed in title) |
| Connectivity Technology | Infrared |
| Controller Type | Button Control |

| | |
|---------------------------|---------------------------------|
| Special Feature | Ergonomic design |
| Batteries Required | 2 x AA batteries (not included) |

© 2023 Easytry123. All rights reserved.