

Manuals.plus /

› Tefal /

› Tefal Access Steam Force Handheld Garment Steamer DT8250 Instruction Manual

Tefal DT8250

Tefal Access Steam Force Handheld Garment Steamer DT8250

Instruction Manual

INTRODUCTION

The Tefal Access Steam Force handheld steamer is designed as a practical and efficient solution for fabric and home textile care. This device offers impressive steam power, continuous steam output, and a powerful steam boost to smooth fabrics, sanitize, and remove dust. Its ultra-fast heat-up time and heated soleplate technology allow for quick garment preparation. The included microfiber brush effectively removes hair, dust, and lint. Utilizing natural steam, it helps create a sanitized and healthy home environment without the need for harsh chemicals. It is safe and effective for all fabric types, including delicate ones, preventing shine or burn marks.

SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage of your power supply matches the voltage specified on the appliance.
- Do not direct steam at people, animals, or electrical appliances.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup and damage to the appliance.
- Unplug the appliance from the power outlet when not in use, before filling or emptying the water tank, and before cleaning.
- Keep the appliance and its cord out of reach of children.
- Never immerse the appliance in water or any other liquid.
- Do not operate the appliance if it has a damaged cord or plug, or if it has been dropped or damaged in any way. Contact customer service for repair.
- Use the appliance only for its intended household use as described in this manual.

PRODUCT OVERVIEW

The Tefal Access Steam Force DT8250 is a powerful and versatile handheld garment steamer designed for efficient fabric care. Key features include:

- **Powerful Steam:** Highly efficient steam brush for smoothing, sanitizing, and dust removal.
- **Easy to Use:** Features a removable 190 ml water tank, a long power cord for flexibility, a self-standing design, two easy-to-use steam settings (Delicate and Turbo), and automatic shut-off for enhanced safety.
- **Dust and Dirt Removal:** Includes a microfiber brush that effectively removes hair, dust, and lint from all garments and textiles. Three microfiber cloths are provided.
- **Sanitizing Steam:** Natural steam power refreshes and sanitizes without cleaning agents or chemicals, eliminating up to 99.99% of bacteria, viruses, and germs.
- **Safe for All Fabrics:** Smart temperature technology ensures safe use on all garments and textiles, whether ironable or not, including delicate fabrics, without causing shine or burns.





Figure 1: Front view of the Tefal Access Steam Force DT8250.



Figure 2: Steamer in its self-standing position.



Figure 3: Included microfiber cloths for lint and dust removal.

SETUP

1. **Fill the Water Tank:** Detach the 190 ml water tank from the main unit. Open the filling cap and fill the tank with distilled or demineralized water. Close the cap securely and reattach the tank to the steamer.
2. **Attach Accessories (Optional):** If desired, attach the microfiber brush or other accessories to the steam head. Ensure it clicks into place firmly.
3. **Plug In:** Insert the power plug into a suitable electrical outlet. The appliance is ready for use once plugged in.



Figure 4: Detaching the water tank for filling.



Figure 5: Control panel with power and steam mode buttons.

Setup Video Guide

Your browser does not support the video tag.

This video demonstrates how to fill the water tank and prepare the steamer for use.

OPERATING INSTRUCTIONS

1. **Power On:** Press the power button. The indicator light will illuminate, and the steamer will begin to heat up. It reaches operating temperature in approximately 25 seconds.
2. **Select Steam Mode:** Choose between 'Delicate' for sensitive fabrics or 'Turbo' for tougher wrinkles and sanitizing. Press the corresponding button on the handle.
3. **Steam Garments:** Hold the garment taut with one hand and move the steam head over the fabric in a vertical motion. For best results, steam from top to bottom.
4. **Using Attachments:** The microfiber brush can be used to remove lint and dust while steaming. Simply attach it to the steam head before use.
5. **Automatic Shut-off:** For safety, the steamer will automatically shut off if left inactive for a period.



Figure 6: Steaming a jacket on a hanger.



Figure 7: Steaming a pillow for refreshing and sanitizing.

Operation Video

Your browser does not support the video tag.

This short video demonstrates the steamer in action, showing its steam output.

MAINTENANCE AND CLEANING

- 1. Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Remove the water tank and empty any remaining water.
- 2. Clean the Steam Head:** Wipe the steam head with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- 3. Clean Accessories:** The microfiber cloths can be hand-washed or machine-washed according to their care instructions. Ensure they are dry before reattaching.
- 4. Storage:** Store the steamer in a dry, safe place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output	Water tank is empty or low. Unit not heated.	Refill water tank. Allow 25 seconds for heating.
Water leakage	Water tank not properly sealed. Overfilled tank.	Ensure tank cap is tight. Do not overfill past max line.
Appliance not turning on	Not plugged in correctly. Power outage.	Check power connection. Test outlet with another device.

SPECIFICATIONS

Brand: Tefal

Model Number: DT8250

Color: Black

Product Dimensions (L x W x H): 14.7 cm x 12.8 cm x 32 cm

Product Weight: 1.4 Kilograms

Wattage: 2000 Watts

Voltage: 240 Volts

Heat-up Time: 25 Seconds

Water Tank Capacity: 190 Milliliters



Figure 8: Product dimensions.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the warranty card included in your product packaging. You may also visit the official Tefal website for the most up-to-date support resources and contact information.

