

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOOLOO](#) /

› [GOOLOO 1500A Car Jump Starter \(Model GE1500\) User Manual](#)

## GOOLOO GE1500

# GOOLOO 1500A Car Jump Starter (Model GE1500) User Manual

Model: GE1500 | Brand: GOOLOO

## 1. IMPORTANT SAFETY INFORMATION

Read all safety information before using this product. Failure to follow these instructions may result in electric shock, explosion, fire, which may result in property damage, serious injury, or death.

- Do not operate the jump starter if the clamps or cables are damaged.
- Do not jump start a frozen battery.
- Do not connect the positive and negative clamps together.
- Do not expose the product to water or extreme temperatures.
- Keep out of reach of children.
- Use only the smart jump cables provided with the device.
- Ensure proper ventilation during use.
- The device features 10 types of protection, including overcurrent, overload, overvoltage, and short-circuit protection.

## 2. PRODUCT OVERVIEW AND PACKAGE CONTENTS

The GOOLOO GE1500 is a portable car jump starter and power bank designed to start 12V vehicles and charge electronic devices. It features a compact design and multiple safety protections.

# A VERSATILE EMERGENCY POWER



Image: Overview of the GOOLOO GE1500 Jump Starter with its various ports and controls labeled.

## Package Contents:

- GOOLOO GE1500 Jump Starter Power Bank
- Smart Jump Cables
- USB-C Cable
- Storage Bag
- User Manual (this document)

# WHAT'S IN THE BOX



Image: All items included in the GOOLOO GE1500 product box.

## 3. CHARGING THE JUMP STARTER

Before first use, fully charge the GOOLOO GE1500. It is recommended to recharge the device every 3-6 months to maintain battery health, even when not in use.

1. Connect the provided USB-C cable to the USB-C input port on the jump starter.
2. Connect the other end of the USB-C cable to a compatible USB wall charger (not included, use your own).
3. The indicator lights will illuminate to show the charging progress. All lights will be solid when fully charged.
4. A full charge from 0% to 100% takes approximately 3 hours with PD15W fast charging.

## 4. OPERATING INSTRUCTIONS: JUMP STARTING A VEHICLE

The GOOLOO GE1500 is designed to jump start 12V vehicles with up to 6.0L gasoline or 4.0L diesel engines.

# 1500A PEAK CURRENT

6.0L | 4.0L  
GAS | DIESEL



Image: The GOOLOO GE1500 Jump Starter connected to a vehicle battery.

## Steps to Jump Start:

- Ensure Sufficient Charge:** Make sure the jump starter has at least 50% charge (2 indicator lights).
- Connect Smart Cables:** Insert the blue plug of the smart jump cables into the jump start socket on the GOOLOO GE1500. Ensure a firm connection.
- Connect to Battery:**
  - Connect the **RED** positive (+) clamp to the positive (+) terminal of the vehicle battery.
  - Connect the **BLACK** negative (-) clamp to the negative (-) terminal of the vehicle battery.

The indicator light on the smart clamp will show the connection status. A solid green light indicates a correct and safe connection.

- Start Vehicle:** Once the smart clamp indicator is solid green, start your vehicle's engine.
- Remove Cables:** After the engine starts, immediately remove the smart clamps from the vehicle battery, then disconnect the smart cables from the jump starter.

Safety Protections of Smart Cables:

# SAFETY CABLE PROTECTIONS

10 ADVANCED SAFETY PROTECTIONS



Image: The smart jump cables feature multiple safety protections for secure operation.

The smart jump cables are equipped with 10 types of protection, including spark-proof, reverse polarity, overcurrent, overload, overvoltage, and short-circuit protection, ensuring safe operation.

## 5. POWER BANK FUNCTIONALITY

The GE1500 can also function as a portable power bank to charge various electronic devices.

# PORTABLE CHARGER

Always Have A Flashlight And A Charger In Your Car



Image: The GOOLOO GE1500 being used to charge a tablet and a smartphone.

1. Connect your device's USB charging cable to the USB 5V/2.1A output port on the jump starter.
2. The jump starter will automatically begin charging your device.
3. The indicator lights will show the remaining battery level of the jump starter.

## 6. LED FLASHLIGHT OPERATION

The GE1500 includes a built-in LED flashlight with multiple modes for emergency situations.

# PORTABLE LED FLASHLIGHT



Image: The GOOLOO GE1500's LED flashlight demonstrating its various modes.

1. Press and hold the power button for 3 seconds to turn on the LED flashlight (Stable mode).
2. Press the power button once to switch to Strobe mode.
3. Press the power button again to switch to SOS mode.
4. Press the power button once more to turn off the flashlight.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	GE1500 (JS-378B)
Peak Current	1500 Amperes
Battery Capacity	15000 mAh

Feature	Specification
Vehicle Service Type	12V Car, Truck, Motorcycle, Snowmobile, Boat
Engine Compatibility	Up to 6.0L Gasoline, 4.0L Diesel
Input (USB-C)	5V/2A (PD15W Fast Charging)
Output (USB)	5V/2.1A
Battery Cell Composition	Lithium Ion
Product Dimensions	8.26 x 16.99 x 3.4 cm
Product Weight	730 g
Operating Temperature	(Implied from image: -20°C to 60°C)



Image: The GOOLOO GE1500 is designed to operate in a wide temperature range.

## 8. TROUBLESHOOTING

---

If you encounter issues with your GOOLOO GE1500, refer to the following common problems and solutions:

- **Device not turning on:** Ensure the device is charged. Connect it to a power source using the USB-C cable.
- **Vehicle not starting:**
  - Check if the smart clamp indicator light is solid green. If not, re-check connections to the battery terminals.
  - Ensure the jump starter has sufficient charge (at least 50%).
  - The vehicle battery might be severely discharged or faulty. In such cases, the "BOOST" function on the smart clamp might be needed (refer to smart clamp manual for specific instructions).
  - Ensure the vehicle's engine size is within the GE1500's specifications (6.0L Gas / 4.0L Diesel).
- **Smart clamp indicator light is red or flashing:** This indicates a safety warning (e.g., reverse polarity, short circuit). Disconnect immediately and re-check connections.
- **Device not charging external devices:** Ensure the external device is properly connected and the jump starter has sufficient power.

## 9. MAINTENANCE AND STORAGE

---

- Keep the jump starter clean and dry. Wipe with a soft, dry cloth.
- Store the device in its provided storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- Recharge the jump starter every 3-6 months to prevent deep discharge and prolong battery life.
- Do not attempt to disassemble or modify the device.

## 10. WARRANTY AND SUPPORT

---

The GOOLOO GE1500 Jump Starter comes with an 18-month warranty from the date of purchase. This warranty covers manufacturing defects and workmanship.

For warranty claims, technical support, or any questions regarding the product, please contact GOOLOO customer service through the retailer where the product was purchased or visit the official GOOLOO website for contact information.

