

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Safely](#) /
- › [Safely All-Purpose Universal Cleaner Instruction Manual](#)

Safely 0850023229007

Safely All-Purpose Universal Cleaner Instruction Manual

Model: 0850023229007 | Brand: Safely

PRODUCT OVERVIEW

The Safely All-Purpose Universal Cleaner, with its refreshing Rise scent, is a versatile cleaning solution designed to effortlessly cut through grease, grime, and dirt on various household surfaces. Formulated with plant-powered ingredients, it provides a squeaky clean without the use of harsh chemicals.

- **Universal Cleaning Power:** Effectively cleans and removes tough stains.
- **Multi-Surface Compatibility:** Safe for use on steel, marble, hardwood, porcelain, and more.
- **No Harsh Chemicals:** Free from parabens, phthalates, dyes, bleach, sulfates, stabilizers, animal testing, and ammonia.
- **Rise Scent:** Features top notes of orange flower, middle notes of violet, jasmine, and geranium, with base notes of dry woods and bois de gaiac, offering a bright, lightly floral aroma.
- **Convenient Spray Bottle:** Comes in a 28 Fl Oz (828 mL) refillable spray bottle for easy application.



Image: Safely Universal Cleaner in a green spray bottle, showcasing its design and branding.

SAFETY INFORMATION & INGREDIENTS

Always keep out of reach of children. When using this product, keep out of eyes. If product gets in eyes, rinse thoroughly with water. If swallowed, get medical help or contact a poison control center immediately. Discontinue use if irritation or rash occurs.

Ingredients:

Water, Alcohol Denat., Sodium Methyl 2-Sulfolaurate, Disodium 2-Sulfolaurate, Alcohol Ethoxylate, Fragrance, Coco-Glucoside, Cocamidopropyl Betaine, Thymol, Cymbopogon Flexuosus (Lemongrass) Leaf Oil, Citric Acid, Disodium

Edta, Benzisothiazolinone.

Contains fragrance allergens Linalool, Hexyl Cinnamal, Citronellol, and Geraniol.

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.



Image: Visual representation of harmful chemicals Safely products are free from.

SETUP

1. **Unpack:** Remove the Safely Universal Cleaner bottle from its packaging.
2. **Prepare Sprayer:** Ensure the spray nozzle is in the "ON" position. Some sprayers may have a twist mechanism to open or close.
3. **Shake Well:** Gently shake the bottle before each use to ensure the ingredients are well mixed.

OPERATING INSTRUCTIONS

The Safely Universal Cleaner is designed for direct application and effective cleaning across multiple surfaces.

1. **Direct Application:** Spray the product directly onto the surface you wish to clean.
2. **Wipe Clean:** Immediately wipe the sprayed area with a clean, lint-free cloth or paper towel.
3. **For Tougher Stains:** For areas with stubborn grease or grime, allow the cleaner to sit for approximately one minute before wiping. This allows the plant-powered formula to penetrate and break down the dirt more effectively.
4. **Surface Compatibility:** This cleaner is suitable for most household surfaces, including but not limited to: steel, marble, hardwood, porcelain, granite, tile, toilets, bathtubs, and showers. Always test on an inconspicuous area first if unsure.



Image: Safely Universal Cleaner being sprayed on a kitchen countertop.

MAINTENANCE

- **Storage:** Store the bottle in a cool, dry place away from direct sunlight and extreme temperatures.
- **Refillable Bottle:** The 28oz bottle is designed to be refillable, promoting sustainability. Ensure the bottle is clean before refilling with Safely Universal Cleaner.
- **Disposal:** Unused liquid may be disposed of down the drain. The bottle is made from 30% post-consumer recycled plastic and is recyclable (check local recycling guidelines).



Image: Safely cleaner bottle highlighting its Green Seal and B Corporation certifications, emphasizing its environmental commitment.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Streaks left on surface	Excess product applied or not wiped thoroughly.	Use less product or wipe immediately with a clean, dry cloth. For existing streaks, re-wipe with a damp cloth and then a dry cloth.

Problem	Possible Cause	Solution
Sprayer not working	Nozzle is in "ON" position or clogged.	Twist the nozzle to the "ON" or "SPRAY" setting. If clogged, rinse the nozzle under warm water.
Product not cleaning effectively	Surface is too dirty or product not left long enough.	For heavy grime, allow the product to sit for up to one minute before wiping. Ensure the surface is not excessively soiled for general cleaning.

SPECIFICATIONS

Product Dimensions: 3 x 3 x 11.1 inches

Item Weight: 2.02 Pounds

Item Model Number: 0850023229007

Manufacturer: Safely

Item Form: Liquid

Scent: Rise

Material Feature: Plant Based

WARRANTY AND SUPPORT

Specific warranty information for the Safely All-Purpose Universal Cleaner is not provided in the product details. For any product-related inquiries, support, or concerns, please refer to the manufacturer's official website or contact their customer service directly.

Visit the [Safely Store on Amazon](#) for more products and information.