

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Proctor Silex](#) /

› [Proctor Silex Fresh Grind Electric Coffee and Spice Grinder, Model 80301PS, White](#)

## Proctor Silex 80301PS

# Proctor Silex Fresh Grind Electric Coffee and Spice Grinder

Model: 80301PS | Brand: Proctor Silex

### IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The built-in interlock prevents the grinder from turning on unless the lid is securely locked in place. Do not attempt to bypass this safety feature.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

### PRODUCT OVERVIEW

---

The Proctor Silex Fresh Grind Electric Coffee Grinder is designed for ease of use, allowing you to enjoy freshly ground coffee beans daily. Its durable stainless steel blades are also suitable for grinding various spices.



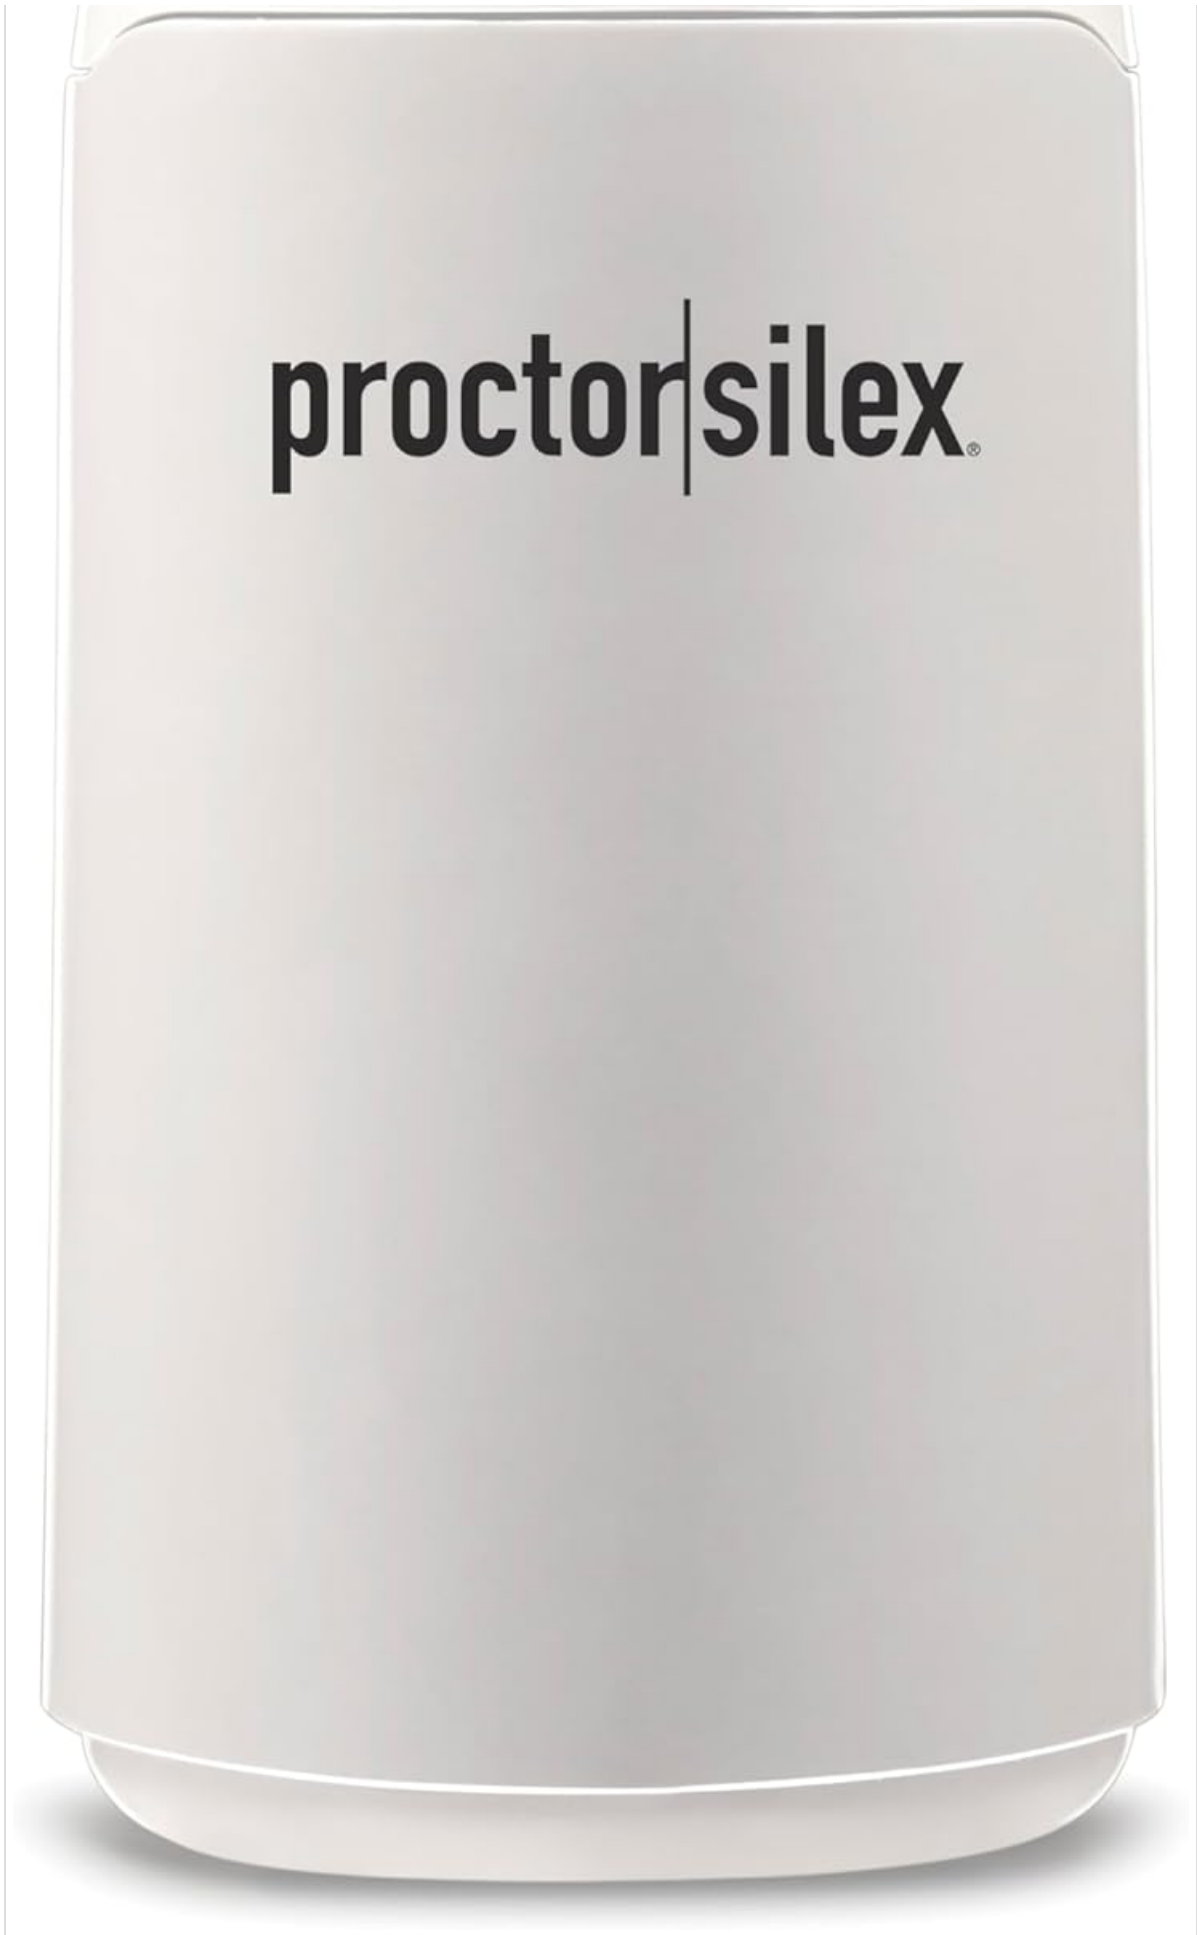


Image: Front view of the white Proctor Silex Fresh Grind Electric Coffee Grinder.

**Key Features:**

- **Simple and Intuitive Operation:** Just press the button to grind coffee and release to stop.
- **Safety Interlock:** Prevents accidental starts by ensuring the lid is securely locked before operation.
- **Durable Stainless Steel Blades:** Designed for powerful performance and long-lasting durability.
- **Capacity:** Grinds enough coffee to brew up to 12 cups.
- **Versatile Grinding:** Excellent for grinding coffee beans, herbs, spices, and seeds.

## SETUP

---

1. **Unpack:** Carefully remove the grinder and all packaging materials from the box.
2. **Initial Cleaning:** Before first use, wipe the exterior of the grinder with a damp cloth. Clean the grinding chamber and lid with a soft, damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the grinder on a stable, dry, and level surface near an electrical outlet.

## OPERATING INSTRUCTIONS

---

### Grinding Coffee Beans:

1. **Add Beans:** Fill the grinding chamber with whole coffee beans. Do not overfill; ensure the lid can close securely.

# Simple and intuitive

Just press the button to grind coffee & release to stop



Image: A hand pressing the button on the grinder, showing coffee beans inside the clear lid.

2. **Secure Lid:** Place the clear lid onto the grinding chamber and twist or press down until it locks securely into place. The grinder will not operate if the lid is not properly secured.

# No accidental starts or spills

Built-in interlock prevents grinder from turning on unless the lid is locked tight



Image: A diagram illustrating the safety on/off button and lid interlock mechanism.

3. **Grind:** Plug the grinder into a 120V AC electrical outlet. Press and hold the safety on/off button on the lid to begin grinding.
4. **Monitor Grind:** Observe the coffee beans through the clear lid. Release the button once the desired grind consistency is achieved. For a coarser grind, grind for a shorter duration. For a finer grind, grind for a longer duration.



# Powerful performance and proven durability

With stainless steel grinding blades

Image: Close-up view of the stainless steel grinding blades within the chamber, surrounded by ground coffee.

5. **Remove Ground Coffee:** Unplug the grinder. Remove the lid and carefully pour the ground coffee into your coffee maker or storage container.

# Grinds enough coffee to brew a full pot

Or a quick cup



Image: A hand pouring freshly ground coffee from the grinder into a coffee filter in a coffee machine.

## Grinding Herbs and Spices:

1. Follow steps 1-3 from "Grinding Coffee Beans," replacing coffee beans with your desired herbs or spices.

# Great for grinding herbs, spices & seeds

From peppercorns and fennel to sesame and chia seeds



Image: An assortment of whole herbs and spices, including peppercorns, fennel, sesame, and chia seeds, displayed on wooden spoons.

2. Grind until the desired consistency is reached. Be aware that some spices may require shorter grinding times than coffee beans.
3. Unplug the grinder and carefully remove the ground herbs or spices.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Always Unplug:** Ensure the grinder is unplugged from the electrical outlet before cleaning.
2. **Clean Grinding Chamber:** Use a small brush or a dry cloth to remove any remaining coffee grounds or spice residue from the grinding chamber and around the blades. Do not use water directly in the grinding chamber.
3. **Clean Lid:** The clear lid can be washed with warm, soapy water. Rinse thoroughly and dry completely before reattaching.
4. **Clean Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. **Storage:** Store the grinder in a dry place when not in use.

## TROUBLESHOOTING

- **Grinder does not turn on:**
  - Ensure the power cord is securely plugged into a working 120V AC outlet.
  - Verify that the lid is correctly placed and locked into position. The safety interlock prevents operation if the lid is not secure.

- **Inconsistent grind:**

- Adjust grinding time. Shorter pulses result in a coarser grind, longer pulses for a finer grind.
- Ensure the grinding chamber is not overfilled, which can hinder proper blade movement.

- **Excessive noise during operation:**

- This is normal for blade grinders. Ensure the unit is on a stable surface to minimize vibration.
- Check for any foreign objects in the grinding chamber.

## SPECIFICATIONS

<b>Model Number</b>	80301PS
<b>Brand</b>	Proctor Silex
<b>Color</b>	White
<b>Style</b>	FreshGrind
<b>Product Dimensions</b>	3.43"L x 3.31"W x 7.01"H
<b>Voltage</b>	120 Volts
<b>Item Weight</b>	1.08 pounds
<b>Manufacturer</b>	Hamilton Beach Brands

proctorsilex®



## Fresh Grind™ Coffee Grinder

Image: Diagram illustrating the dimensions (3.4" x 3.3" x 7") of the Fresh Grind Coffee Grinder.

### WARRANTY AND SUPPORT

This Proctor Silex Fresh Grind Electric Coffee and Spice Grinder comes with a **Limited Three Year Warranty**.



Image: A badge indicating a Limited Three Year Warranty.

For detailed warranty information, product registration, or customer support, please visit the official Proctor Silex website or contact their customer service department.

You can find more information and support at the [Proctor Silex Store](#).