

Super Impulse 341

Tiny Arcade Atari 2600 Instruction Manual

Model: 341

INTRODUCTION

The Tiny Arcade Atari 2600 is a miniature, fully functional replica of the classic Atari 2600 console and television set. Designed for portability and authentic retro gaming, this unit includes a 1.5-inch color TV monitor, a functional joystick, and a console with 10 pre-loaded classic Atari games. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Tiny Arcade Atari 2600.

WHAT'S IN THE BOX

- 1 Miniature Atari 2600 console
- 1 Miniature TV
- 1 Joystick

SETUP

1. **Battery Installation:** The Tiny Arcade Atari 2600 requires 3 AAA batteries (included). Locate the battery compartment on the underside of the console. Open the compartment, insert the batteries according to the polarity indicators (+/-), and close the cover securely.
2. **Connect Components:** Connect the miniature joystick to the console using the attached cable. Ensure the connection is firm. The console is pre-wired to the miniature TV.
3. **Power On:** Locate the power switch on the console. Slide the switch to the 'ON' position. The miniature TV screen should illuminate and display the game selection menu.



Image: The Tiny Arcade Atari 2600 console, miniature TV, and joystick, ready for use. The TV displays the 'Tiny Arcade Atari 2600' title screen with 'PRESS TO START!' prompt.

OPERATING INSTRUCTIONS

- Navigating the Menu:** Use the joystick to navigate through the list of available games on the TV screen. Move the joystick up or down to highlight different game titles.
- Selecting a Game:** Once your desired game is highlighted, press the red button on the joystick to select and launch the game.
- Playing Games:** Control your in-game character or actions using the joystick for movement and the red button for actions (e.g., firing, jumping). Refer to specific game instructions for detailed controls.
- Returning to Menu:** To exit a game and return to the main menu, locate the 'RESET' button on the console and press it.

Included Games:

- Pac-Man
- Breakout
- Tempest
- Centipede

- Combat
- Pong
- Warlords
- Missile Command
- Millipede
- Asteroids

Includes 10 Games



Image: The Tiny Arcade Atari 2600 TV screen showing a list of included games, such as Pac-Man, Centipede, Missile Command, Combat, and Asteroids, with pixel art graphics.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the console, TV, and joystick. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.
- **Battery Replacement:** When the display becomes dim or the unit stops responding, it is time to replace the batteries. Follow the battery installation steps in the 'Setup' section. Always replace all 3 AAA batteries at the same time.

- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AAA batteries.
Screen is dim or flickering.	Low battery power.	Replace with fresh AAA batteries.
Joystick controls are unresponsive.	Joystick cable is loose or damaged.	Ensure the joystick cable is securely plugged into the console. If issues persist, contact customer support.
Game freezes or crashes.	Temporary software glitch.	Press the 'RESET' button on the console to restart the game or return to the menu. If the problem continues, power off the unit, remove batteries for 30 seconds, then reinsert and power on.

SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	7.33" x 1.5" x 3.15"
Screen Size	1.66 Inches (color LCD)
Item Weight	7 ounces (0.2 Kilograms)
Power Source	Battery Powered
Batteries Required	3 AAA batteries (included)
Number of Players	1
Platform	Atari 2600
Material	Plastic
Model Number	341
UPC	810010991775
Manufacturer Recommended Age	8 years and up



Image: The Tiny Arcade Atari 2600 console and TV with measurements indicating its compact size, including the 2-inch width and height of the TV, and 1.25-inch width of the console.

IMPORTANT SAFETY INFORMATION

Choking Hazard - Small Parts: This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended during use, especially for younger users.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or contact the manufacturer, Super Impulse USA, directly. Contact details can typically be found on the product packaging or their official website.

