

Salora 32 _Inch_HD

Salora 32-inch Smart TV User Manual

Model: 32 _Inch_HD

1. INTRODUCTION

Thank you for purchasing the Salora 32-inch Smart TV. This television combines a compact design with advanced smart features, including built-in Chromecast and Google TV, providing endless entertainment options. This manual will guide you through the setup, operation, and maintenance of your new television to ensure optimal performance and longevity.

This Salora Smart TV is designed for versatile use, perfect for bedrooms, kitchens, or any space where a compact yet powerful entertainment hub is desired. Enjoy HD LED picture quality, robust connectivity options like WiFi and Bluetooth, and multiple HDMI ports for all your devices.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the television. Keep this manual for future reference.

- **Power Supply:** Ensure the power voltage matches the rating label on the TV. Do not overload power outlets.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat Sources:** Keep the TV away from radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Lightning:** Unplug the TV during lightning storms or when unused for long periods.
- **Children:** Supervise children to ensure they do not play with the TV.

3. PACKAGE CONTENTS

Before proceeding with the setup, please verify that all items listed below are included in your package:

- Salora 32-inch Smart TV
- Remote Control (requires 2 AA batteries, not included)
- Power Cable
- TV Stands (2 pieces)
- Screws for Stands
- User Manual (this document)

4. SETUP

4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or service needs.

4.2 Stand Installation

If you are not wall-mounting the TV, attach the included stands:

1. Place the TV face down on a soft, flat surface to prevent screen damage.
2. Align each stand with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are firmly attached.



Figure 4.2.1: Salora 32-inch Smart TV with stands.

4.3 Wall Mounting (Optional)

This TV is VESA compatible. For wall mounting, please refer to the instructions provided with your wall mount kit. Ensure the wall mount is suitable for the TV's size and weight.



Figure 4.3.1: TV dimensions for mounting reference.

4.4 Connections

Connect your devices to the TV using the appropriate ports:

- **HDMI Ports:** Connect Blu-ray players, game consoles, set-top boxes, etc. (HDMI 1.4 supported).
- **USB Ports:** Connect USB drives for media playback (USB 2.0 supported).
- **Ethernet (LAN) Port:** For a wired internet connection.
- **Antenna (ANT.) Input:** Connect your terrestrial or cable antenna for DVB-T2/C reception.
- **Audio Out (SPDIF Optical/3.5mm):** Connect external sound systems or headphones.
- **Bluetooth:** Pair wireless headphones or speakers.
- **Back AV In (RCA):** For older devices with composite video and stereo audio output.



Figure 4.4.1: Rear connection ports.



Figure 4.4.2: Side connection ports.



Figure 4.4.3: Key connectivity features.

5. OPERATING

5.1 First Time Setup

After connecting the power cable and turning on the TV for the first time, you will be guided through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Network Connection:** Connect to your Wi-Fi network or use an Ethernet cable for a wired connection.
3. **Google Account Sign-in:** Sign in with your Google account to access Google TV features, apps, and personalized recommendations.
4. **Channel Scan:** Scan for available digital channels (DVB-T2/C).
5. **Privacy Settings:** Review and adjust privacy settings as desired.

5.2 Remote Control

Familiarize yourself with the remote control buttons for easy navigation and control of your TV.



Figure 5.2.1: Remote Control Layout.

- **Power Button:** Turns the TV on/off or to standby.
- **Home Button:** Accesses the Google TV home screen.
- **Navigation Buttons (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Netflix/YouTube Buttons:** Direct access to these streaming applications.
- **Back Button:** Returns to the previous screen or menu.

5.3 Google TV Interface

The Google TV interface provides a centralized hub for all your entertainment. Browse movies, TV shows, and live TV from across your apps and subscriptions, all organized for you.



Figure 5.3.1: Google TV Home Screen.



Figure 5.3.2: Supported Streaming Applications.

5.4 Chromecast Built-in

With Chromecast built-in, you can cast your favorite entertainment from your phone, tablet, or laptop directly to the TV. Simply tap the Cast icon in compatible apps.

5.5 Voice Control (Google Assistant)

Use the built-in Google Assistant for hands-free control. Press the Google Assistant button on your remote and

speak commands to search for content, control smart home devices, or get information.

5.6 Picture and Sound Settings

Access the TV's settings menu to customize picture and sound to your preference. Adjust brightness, contrast, color, and select sound modes for an optimized viewing experience.

6. MAINTENANCE

6.1 Cleaning

- Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.
- TV Body:** Use a soft, dry cloth to wipe the TV casing. Avoid abrasive materials or chemical cleaners.

6.2 Software Updates

To ensure your TV has the latest features and security patches, regularly check for software updates:

1. Go to the Settings menu on your TV.
2. Navigate to 'System' or 'About'.
3. Select 'Software Update' or 'System Update'.
4. Follow the on-screen prompts to check for and install any available updates.

6.3 Storage

If you need to store the TV for an extended period, unplug it, remove the batteries from the remote, and store it in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

If you encounter issues with your Salora Smart TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cable disconnected; Power outlet issue	Check power cable connection; Try a different outlet; Press power button on TV.
No Picture, but Sound is Present	Incorrect input source; Loose HDMI cable	Press 'Source' button on remote to select correct input; Reconnect HDMI cable.
No Sound, but Picture is Present	Volume muted or too low; External audio system issue	Unmute or increase volume; Check connections to external audio devices.
Remote Control Not Working	Dead batteries; Obstruction between remote and TV	Replace batteries (2 AA); Remove any obstructions; Point remote directly at TV.

Problem	Possible Cause	Solution
Wi-Fi Connection Issues	Incorrect password; Router issue; TV too far from router	Re-enter Wi-Fi password; Restart router; Move TV closer to router or use Ethernet.

If the problem persists after trying these solutions, please contact Salora customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Salora
Model Number	32_Inch_HD
Screen Size	32 inches (81.3 Centimeters)
Display Technology	LED
Resolution	1080p (HD)
Refresh Rate	50 Hz
Operating System	Android (Google TV)
Special Features	Chromecast Built-in, Web Browser, Google Assistant
Connectivity	Bluetooth, Ethernet, HDMI, USB, Wi-Fi
HDMI Ports	Multiple (HDMI 1.4)
USB Ports	2 (USB 2.0)
Dimensions (L x W x H)	69 x 10 x 40 Centimeters (approx.)
Color	Black
Material	Plastic

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

This Salora Smart TV comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Salora customer support. You can find contact information on the official Salora website or through your retailer. Visit the official Salora store for more products and information:[Salora Brand Store](#)

© 2024 Salora. All rights reserved.