



Manuals.plus /

› Hoover /

› Hoover Complete Performance UH30651 Corded Bagged Upright Vacuum Cleaner User Manual

Hoover UH30651

Hoover Complete Performance UH30651 Corded Bagged Upright Vacuum Cleaner User Manual

1. PRODUCT OVERVIEW

The Hoover Complete Performance Upright Vacuum Cleaner is engineered for powerful suction, effectively lifting and removing deeply embedded dirt. This bagged vacuum cleaner features advanced filtration to capture 95% of dust matter down to 0.5 microns, ensuring a cleaner home environment. It includes specialized tools for versatile cleaning across various surfaces.



Figure 1: Hoover Complete Performance Upright Vacuum Cleaner with included accessories.

2. SETUP AND ASSEMBLY

Before first use, ensure all components are present and undamaged. Assembly typically involves attaching the handle to the main vacuum body and securing the hose. Refer to the quick start guide included in the packaging for detailed visual instructions.

2.1 Inserting the Dust Bag

The vacuum uses filtered bags for dust collection. To insert a new bag:

1. Open the bag compartment cover.
2. Align the new bag with the bag collar and push firmly until it clicks into place.
3. Close the compartment cover securely.



Figure 2: Proper insertion of the bagged filtration system.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Recline

To turn the vacuum on or off, press the power button located on the main unit. To recline the vacuum for cleaning, step on the foot pedal at the base and pull the handle back.

3.2 Height Adjustment

The vacuum features a 4-level height adjustment to optimize cleaning for different floor types. Rotate the dial on the cleaner head to select the appropriate setting:

- **Low Carpet:** For low-pile carpets.
- **Medium Carpet:** For medium-pile carpets.
- **High Carpet:** For high-pile carpets and shag rugs.
- **Hard Floor:** For bare floors like hardwood, tile, or laminate.



Figure 3: Adjusting the cleaning height for optimal performance on various floor types.

3.3 Using Attachments for Above-Floor Cleaning

For cleaning furniture, stairs, and hard-to-reach areas, detach the hose and attach the desired tool. The vacuum includes an 8-foot hose for extended reach.

- **Pet Upholstery Tool:** Designed to effectively remove stubborn pet hair and dirt from upholstered surfaces.
- **Crevice Tool:** For tight spaces, corners, and edges.

- **Extension Wand:** For reaching high areas or extending the reach of other tools.



Figure 4: Utilizing the hose and extension wand for above-floor cleaning.

PET UPHOLSTERY TOOL



Figure 5: The Pet Upholstery Tool effectively removes pet hair from furniture.

3.4 Product Demonstration

Your browser does not support the video tag.

Video 1: Official demonstration of the Hoover Complete Performance Corded Bagged Vacuum, highlighting its features and ease of use.

4. MAINTENANCE

4.1 Replacing the Dust Bag

When the 'Bag Check Indicator' turns red, the dust bag is full and needs to be replaced. The easy-release design ensures mess-free disposal.

1. Turn off and unplug the vacuum cleaner.
2. Open the bag compartment cover.
3. Carefully remove the full dust bag, ensuring the bag opening is sealed to prevent dust escape.
4. Insert a new Hoover Type-Y replacement bag as described in Section 2.1.

4.2 Filter Maintenance

The vacuum is equipped with a HEPA filter that captures 95% of matter down to 0.5 microns. Regularly check and clean the filter according to the instructions in the full user manual to maintain optimal suction and filtration performance.

5. TROUBLESHOOTING

If your vacuum cleaner is not performing as expected, try the following:

- **No Power:** Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
- **Loss of Suction:** Check if the dust bag is full and needs replacement. Inspect the hose and attachments for any clogs. Ensure the height adjustment is set correctly for the surface.
- **Brush Roll Not Spinning:** Check for obstructions in the brush roll. Ensure the vacuum is reclined and the brush roll is engaged (if applicable).

For more detailed troubleshooting, please consult the complete user manual or contact Hoover customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Hoover
Model Name	Hoover Complete Performance Corded Bagged Upright Vacuum Cleaner, UH30651, White
Model Number	UH30651
Power Source	Corded Electric
Amperage	12 Amps
Motor Horsepower	2.53 horsepower
Filter Type	HEPA Filter
Hose Length	2.4 Meters (approx. 8 feet)
Product Dimensions	15"L x 15"W x 47"H
Item Weight	24.1 pounds
Color	White
Surface Recommendation	Carpet, Hard Floor, Hardwoods, Upholstery

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Hoover website. You can also find additional support and FAQs on the [Hoover Store on Amazon](#).

