

[Manuals.plus](#) /

› [PayLessHere](#) /

› PayLessHere 39-Inch Computer Desk (Model CD-LLKJ10012) Instruction Manual

PayLessHere CD-LLKJ10012

PayLessHere 39-Inch Computer Desk (Model CD-LLKJ10012) Instruction Manual

Nature Finish, Sturdy Office Desk

INTRODUCTION

Thank you for purchasing the PayLessHere 39-Inch Computer Desk. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new desk. Please read this manual thoroughly before assembly and use.



Fully assembled PayLessHere 39-Inch Computer Desk in Nature finish, suitable for home office or study.

SAFETY INFORMATION

For safety reasons, do not exceed the weight limit of approximately 220 pounds on the metal bracket. Ensure the desk's stability by adjusting the foot-pads as needed. Always check the desk's stability before use, especially if a high weight is placed on it.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Desktop Panel (1)
- Desk Legs/Frame Components (4-6 pieces, depending on design)
- Crossbars/Support Brackets (2-4 pieces)

- Adjustable Foot Pads (4)
- Assembly Hardware (Screws, Allen Wrench)

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your computer desk.

1. **Step 1: Unpack and Identify Parts.** Lay out all components on a clean, soft surface to prevent scratches. Refer to the parts list to ensure everything is accounted for.



Diagram showing the dimensions of the 39-inch computer desk: 40 inches (W) x 20 inches (D) x 29 inches (H).

2. **Step 2: Assemble the Frame.** Connect the leg components and crossbars using the provided screws and Allen wrench. Ensure all connections are secure but do not overtighten initially.



Detail of the triangular steel bracket reinforcement for enhanced stability.

3. **Step 3: Attach the Desktop.** Carefully place the desktop panel onto the assembled frame. Align the pre-drilled holes on the desktop with the holes on the frame. Secure the desktop using the remaining screws.
4. **Step 4: Install Adjustable Foot Pads.** Screw the adjustable foot pads into the bottom of each leg. These allow you to level the desk on uneven surfaces.



Durable & Sturdy Construction

Extra fixed steel brackets and adjustable leg pads provide greater stability.



Close-up showing the 20mm thick MDF desktop and an adjustable leg pad for stability on uneven floors.

5. **Step 5: Final Tightening.** Once the desk is fully assembled, go back and tighten all screws firmly. Do not overtighten to avoid damaging the materials.

Assembly Video

Your browser does not support the video tag.

Video demonstrating the assembly process of the PayLessHere computer desk, showing how to connect the frame components and attach the desktop.

OPERATING INSTRUCTIONS

The PayLessHere 39-Inch Computer Desk is designed for versatile use in various settings.

- **Work Area:** The 40-inch wide and 20-inch deep desktop provides ample space for a computer, laptop, books, and other work or study essentials.
- **Leveling:** Use the adjustable foot pads to ensure the desk is stable and level on any floor surface. Rotate the pads clockwise or counter-clockwise to raise or lower each corner.

- **Placement:** Position the desk in your desired location, ensuring it is not exposed to excessive moisture or direct sunlight for prolonged periods.

Ample Work Area

Equipped with a 40in * 20in desktop to provide enough work space to accommodate laptop or other daily necessities



Notebook



Books



Desk Lamp



Potted Plant

Top-down view of the desk surface, illustrating space for a laptop, keyboard, mouse, and other office essentials.

MAINTENANCE

Proper care will extend the life and appearance of your desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish. The surface is water-resistant and scratch-proof for easy cleaning.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Avoid Overloading:** Do not place items exceeding the 220-pound weight limit on the desk.

TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common solutions:

- **Desk is Wobbling:**
 - Ensure all assembly screws are securely tightened.
 - Adjust the foot pads on the bottom of each leg to compensate for uneven flooring.
- **Scratches or Damage to Surface:**
 - While the surface is scratch-resistant, extreme force or sharp objects can still cause damage. Use coasters or desk mats for protection.

SPECIFICATIONS

Feature	Detail
Brand	PayLessHere
Model Number	CD-LLKJ10012
Color	Nature
Size	39 Inch
Product Dimensions (D x W x H)	20"D x 40"W x 30"H
Item Weight	18 pounds
Top Material Type	Wood (MDF)
Base Material	Metal
Tabletop Thickness	20 millimeters (approx. 0.79 inches)
Special Feature	Adjustable Feet, Water-Resistant, Scratchproof Surface
Maximum Weight Recommendation	220 pounds
Assembly Required	Yes

WARRANTY AND SUPPORT

This PayLessHere computer desk comes with a**90-day limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. For warranty claims, missing parts, or technical support, please contact PayLessHere customer service. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question