

[Manuals.plus](#) /

› [Yealink](#) /

› Yealink YHS34 LITE DUAL Wideband Headset Instruction Manual

Yealink YHS34 LITE DUAL

Yealink YHS34 LITE DUAL Wideband Headset Instruction Manual

Model: YHS34 LITE DUAL

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Yealink YHS34 LITE DUAL Wideband Headset. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.



Image: The Yealink YHS34 LITE DUAL Wideband Headset, showing its over-the-head design with two earcups and an adjustable microphone boom arm.

SETUP

Connecting the Headset

The Yealink YHS34 LITE DUAL headset is designed for plug-and-play connectivity with compatible Yealink IP phones using its QD (Quick Disconnect) to RJ9 cable.

1. Connect the QD end of the cable to the headset.
2. Connect the RJ9 end of the cable to the headset port on your Yealink IP phone.
3. The phone will automatically optimize acoustic parameters for the headset.



Image: The Yealink YHS34 LITE DUAL headset displayed alongside its QD to RJ9 connection cable, illustrating the plug-and-play setup.

Compatible Yealink IP Phones

This headset is compatible with the following Yealink IP phone models:

- T19(P) E2, T21(P) E2, T23P, T23G, T27G, T29G
- T30, T30P, T31, T31P, T31G, T33P, T33G
- T40P, T40G, T41S, T42S, T46S, T48S
- T42U, T43U, T46U, T48U
- T53, T53W, T54W, T57W, T58A, VP59
- T41S SFB, T42S SFB, T46S SFB, T48S SFB
- T55A SFB, T56A SFB, T58A SFB, MP56

OPERATING INSTRUCTIONS

Wearing the Headset

Position the headset comfortably over your head. The ear cushions are designed for extended wear. Adjust the headband for a secure yet comfortable fit.



Image: A close-up view of the soft ear cushions on the Yealink YHS34 LITE DUAL headset, highlighting their design for comfort during long periods of use.

Microphone Adjustment

The microphone features a 330° bendable boom arm. Position the microphone approximately 2-3 cm (1 inch) from your

mouth for optimal voice pickup. The noise-canceling microphone helps reduce background noise for clearer conversations.

Audio Quality

The headset provides HD Voice/Wideband speaker performance. Its independent cavity design and passive noise cancellation contribute to a richer and clearer audio experience by minimizing ambient distractions.

Volume Control

Volume adjustments are typically managed directly from your connected Yealink IP phone or through the phone's interface. Refer to your specific IP phone's manual for detailed volume control instructions.

MAINTENANCE

Cleaning

- Use a soft, dry cloth to clean the headset.
- For ear cushions, gently wipe with a slightly damp cloth and allow to air dry completely before use.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.

Storage

When not in use, store the headset in a clean, dry place away from extreme temperatures and direct sunlight. Avoid tangling the cables to prevent damage.

TROUBLESHOOTING

No Sound from Headset

- Ensure the QD to RJ9 cable is securely connected to both the headset and the IP phone.
- Check the volume settings on your IP phone.
- Verify that the headset is selected as the audio output device on your IP phone, if applicable.

Microphone Not Working

- Confirm the microphone boom arm is positioned correctly near your mouth.
- Check if the microphone is muted on your IP phone.
- Ensure all cable connections are secure.

Poor Audio Quality

- Ensure the headset is properly connected.
- Adjust the microphone position to reduce background noise.
- Check for any physical damage to the cables or headset.

SPECIFICATIONS

Brand	Yealink
-------	---------

Model Number	YHS34 LITE DUAL
Color	Black
Ear Placement	On Ear
Form Factor	Over-Ear (Dual Earcup)
Impedance	32 Ohms
Connectivity Technology	Wired (RJ9)
Microphone Type	Uni-Directional ECM, Noise-Canceling
Microphone Frequency Response	100 Hz - 8 kHz (Wideband)
Microphone Sensitivity	-44.0 dB re. 1 V/Pa
Speaker Size	28mm
Speaker Sensitivity	93 dB SPL @ 1 kHz
Speaker Frequency Response	20 Hz - 20 kHz (Wideband)
Speaker Input Power	Max 10 mW
Headset Cable Length	0.9m
QD to RJ9 Cable Length	1.2m
Storage Temperature	-30 °C to +70 °C
Operating Temperature	-10 °C to +50 °C
Weight	160 Grams
Materials	Foam, Leather (Ear Cushions)

WARRANTY INFORMATION

For detailed warranty information regarding your Yealink YHS34 LITE DUAL headset, please refer to the warranty card included with your product or visit the official Yealink website. Warranty terms and conditions may vary by region and retailer.

SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Yealink customer support or visit the official Yealink support website for FAQs, drivers, and additional resources.

Official Yealink Website: www.yealink.com