

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› **VINABTY Remote Control Instruction Manual for RCA DVD Home Theater System Models RT2781, RT2781BE, RT2781HBU, RT2760, RT2770, RT2870, RT2870A, RT2906, RCR192AB2, RT2781H, RT2780R, RT2910, RT2911**

VINABTY RT2781

VINABTY Remote Control Instruction Manual

For RCA DVD Home Theater Systems

INTRODUCTION

This manual provides instructions for the VINABTY replacement remote control, designed for use with various RCA DVD Home Theater System models. This remote is a direct replacement and requires no programming.

Compatible RCA DVD Home Theater System Models:

- RT2781BE, RT2781, RT2781HB U, RT2781HBU
- RT2760, RT2770, RT2870, RT2870A
- RT2906, RCR192AB2, RT2781H, RT2780R
- RT2910, RT2911

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 1: Back of the remote control with the battery compartment open. Insert two AAA batteries as shown, observing polarity.

2. Initial Use

This remote control is a basic infrared (IR) remote and does not require any programming. Once batteries are installed, it is ready for use with your compatible RCA DVD Home Theater System.

Point the remote control directly at the infrared receiver on your RCA DVD Home Theater System for optimal performance.

OPERATING INSTRUCTIONS

The VINABTY remote control provides full functionality for your RCA DVD Home Theater System. Below is a general overview of common buttons and their functions.



Figure 2: Front view of the remote control with button layout.

Key Functions:

- **ON-OFF:** Powers the system on or off.
- **Numeric Keypad (0-9):** For direct track selection or input.
- **MUTE:** Silences the audio output.
- **VOL+ / VOL-:** Adjusts the main volume up or down.
- **SUBWOOFER:** Adjusts subwoofer level.

- **LEVEL:** Adjusts various audio levels.
- **SETUP:** Accesses the system's setup menu.
- **Directional Buttons (Up, Down, Left, Right) & OK:** Navigates menus and confirms selections.
- **EXIT:** Exits the current menu or function.
- **TUNER+ / TUNER-:** Changes radio stations.
- **SOURCE / AUX / COAXIAL / OPTICAL / LINE-IN:** Selects input sources.
- **Sound Modes (POP, FLAT, CLASSIC, ROCK, JAZZ):** Selects preset equalizer modes.
- **BASS / TREBLE:** Adjusts bass and treble levels.
- **SLEEP:** Sets a sleep timer for automatic power off.
- **NIGHT:** Activates night listening mode.
- **TEST TONE:** Initiates a test tone for speaker setup.
- **MONO/ST SURROUND:** Toggles between mono/stereo and surround sound modes.
- **DISTANCE:** Adjusts speaker distance settings.
- **MEMORY / MEM+:** Stores or recalls settings.

For detailed operation of specific functions, please refer to the original user manual of your RCA DVD Home Theater System.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.

Battery Replacement

- Replace batteries when the remote control's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Solution
Remote control does not work.	<ul style="list-style-type: none"> • Ensure batteries are inserted correctly with the correct polarity. • Replace old batteries with new AAA batteries. • Ensure there are no obstructions between the remote control and the RCA DVD Home Theater System's IR receiver. • Point the remote directly at the system.

Problem	Solution
Remote control works intermittently.	<ul style="list-style-type: none">Check battery strength; replace if low.Ensure you are within the effective range of the system.Clean the remote's IR emitter and the system's IR receiver if dirty.

SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Number	RT2781 (Compatible with various RCA models)
Product Dimensions	7.7 x 2 x 0.75 inches
Item Weight	2.89 ounces
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic design
Color	Black
Compatible Devices	RCA DVD Home Theater Systems

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. Please refer to the seller's return policy or contact the seller directly for warranty inquiries and support.

For operational issues related to your RCA DVD Home Theater System, consult the original system's user manual or contact RCA customer support.