

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [GKTZ](#) /

> [GKTZ Kids Camera - Waterproof Underwater Camera for Kids, Christmas Birthday Gifts for Girls Age 3-12, 1080P HD Children Digital Action Camera, Pool Toys for Kids Age 4-12 Pink](#)

GKTZ 190-par

GKTZ Kids Camera User Manual

Model: 190-par | Brand: GKTZ

INTRODUCTION

Thank you for choosing the GKTZ Kids Camera. This durable and versatile digital action camera is specifically designed for young adventurers, allowing them to capture their exciting moments both on land and underwater. With its user-friendly interface and robust features, your child can explore their creativity and document their world in high definition.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years. Adult supervision is recommended during use, especially when handling small accessories.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Waterproof Camera (Pink)
- Charging Cable & Lanyard
- 32GB Micro SD Card
- User Manual
- Gift Packaging Box
- Bicycle Mount
- Helmet Mount
- Fastening Straps (x2)

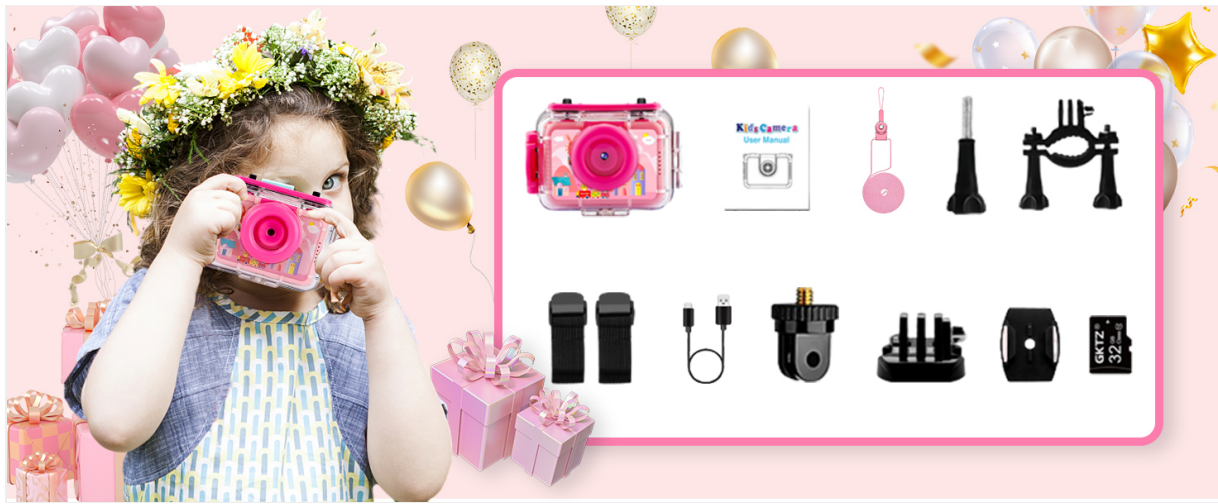


Image: All components included in the GKTZ Kids Camera package.

SETUP GUIDE

1. Charging the Camera

Before first use, please fully charge the camera. Connect the provided charging cable to the camera's Type-C port and a USB power source. The charging indicator will show the charging status and turn off when fully charged. A full charge provides 2-2.5 hours of continuous use.

2. Inserting the Micro SD Card

Locate the SD card slot on the camera. Gently insert the provided 32GB micro SD card until it clicks into place. Ensure the camera is powered off before inserting or removing the card.

3. Attaching the Waterproof Case

For underwater use or enhanced shock protection, place the camera inside the transparent waterproof case. Ensure the case is securely latched on all sides to prevent water ingress. The camera is waterproof up to 30 meters (100 feet) when properly enclosed in its case.



Waterproof Case
Waterproof up to 100FT

Image: The GKTZ Kids Camera in its waterproof case, suitable for depths up to 100 feet.

4. Using Mounts and Lanyard

The camera comes with various accessories for different activities:

- **Bicycle Mount:** Attach the camera to bicycle handlebars using the bicycle mount and fastening straps to record rides.
- **Helmet Mount:** Secure the camera to a helmet for point-of-view action shots using the helmet mount and straps.
- **Lanyard:** Use the lanyard to wear the camera around the neck for easy access and to prevent loss.

Record Your Kids Brave Moments



Image: Examples of mounting the GKTZ Kids Camera for different activities.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the Power button (usually marked with a power symbol) to turn the camera on or off. The LCD screen will illuminate upon power-on.

2. Taking Photos

In photo mode, press the Shutter button to capture a picture. The camera features 20MP resolution for clear images. Utilize the 180-degree rotatable lens for easy selfies and dual front/rear shots. Experiment with 20 funny photo frames and 6 filters to add creativity to your pictures.

Selfie Kids Camera



Image: The 180-degree rotatable lens and creative photo options.

3. Recording Videos

Switch to video mode and press the Shutter button to start recording. Press it again to stop. The camera records in 1080P HD. The camera also supports time-lapse video recording (3s/5s/10s intervals) and burst shooting for action sequences.

4. Playback

Enter playback mode to view your captured photos and videos on the 2.4-inch LCD screen. Use the navigation buttons to browse through your media.

5. Special Features

- **Games:** The camera includes built-in games for entertainment.
- **Voice Recorder:** Use the voice recorder function to capture audio.
- **Power Saving Mode:** Adjust the auto-off time in settings to conserve battery life.
- **Digital Zoom:** The camera features 4x digital zoom.

More Use in Outdoor Sports Activities

It supports taking pictures, videos and playback



Skateboarding



Swimming



Skiing



Surfing



Riding a bike



Climbing

Image: The GKTZ Kids Camera is suitable for various outdoor sports and activities.

MAINTENANCE

1. Cleaning

Wipe the camera and waterproof case with a soft, dry cloth. For the waterproof case, ensure no debris is present on the rubber seal before closing to maintain its waterproof integrity. Do not use harsh chemicals or abrasive cleaners.

2. Battery Care

To prolong battery life, avoid fully discharging the camera frequently. Charge the camera regularly, even if not in use for extended periods. Store the camera in a cool, dry place.

3. SD Card Management

Regularly transfer photos and videos from the SD card to a computer or other storage device to free up space and prevent data loss. Format the SD card periodically for optimal performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera won't turn on.	Low battery; Power button not pressed long enough.	Charge the camera fully. Press and hold the Power button for a few seconds.
Cannot take photos/videos.	SD card full or not inserted correctly.	Check SD card insertion. Delete old files or replace SD card.
Date/Time resets.	Internal battery for clock may be low or depleted.	Ensure camera is regularly charged. Re-set date/time in settings after each power cycle if issue persists.
Poor image/video quality.	Lens dirty; Low light conditions; Camera shake.	Clean the lens. Use in well-lit environments. Hold camera steady.
Water inside waterproof case.	Case not sealed properly; Damaged seal.	Ensure all latches are securely closed. Check rubber seal for debris or damage. Do not use if seal is compromised.

SPECIFICATIONS

Feature	Detail
Brand	GKTZ
Model Name	video player (internal model name)
Model Number	190-par
Color	Pink
Photo Sensor Resolution	12 MP (Effective Still Resolution: 12)
Maximum Webcam Image Resolution	12 MP
Video Resolution	1080p
Memory Storage Capacity	32 GB (Micro SD Card included)
Screen Size	2.4 inches
Display Type	LCD
Optical Zoom	4
Digital Zoom	4x
Water Resistance Level	Waterproof (with case)
Item Weight	55 Grams
Item Dimensions (D x W x H)	1.5"D x 3.7"W x 2.7"H
Battery Type	Lithium Polymer (1 included)
Battery Average Life	5 years

Feature	Detail
Connectivity Technology	USB
Supported File Format	JPEG (Photo), MP4 (Video)
Special Feature	Self Timer, 180-degree Rotation
Shooting Modes	Underwater, Sports

WARRANTY

The GKTZ Kids Camera comes with a **12 Month Warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the information provided with your product packaging or contact customer support.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your GKTZ Kids Camera, please do not hesitate to contact our customer support team. You can typically find contact information (email or phone number) on the product packaging or on the official GKTZ brand store page on Amazon. Our team is dedicated to providing assistance and ensuring your satisfaction.