

[Manuals.plus](#) /

› [OIMIS](#) /

› OIMIS 30L 1800W Stainless Steel Air Fryer Oven User Manual

OIMIS AFO-10D

OIMIS 30L 1800W Stainless Steel Air Fryer Oven User Manual

Model: AFO-10D

1. INTRODUCTION

Thank you for choosing the OIMIS 30L 1800W Stainless Steel Air Fryer Oven. This appliance is designed to provide a versatile and efficient cooking experience, combining the functions of an air fryer, oven, grill, toaster, and dehydrator. Please read this manual thoroughly before operating the appliance to ensure safe and optimal use. Keep this manual for future reference.



Image 1.1: The OIMIS 30L Air Fryer Oven, showcasing its spacious interior with a roasted chicken and fries.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electric shock.
- A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the appliance when not in use.
- Do not place any of the following materials in the appliance: paper, cardboard, plastic, and the like.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the appliance.

3. PACKAGE CONTENTS

Carefully unpack all components and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x OIMIS 30L Air Fryer Oven (Model AFO-10D)
- 1 x Baking Pan
- 1 x Air Fry Basket
- 1 x Oven Rack
- 1 x Rotisserie Fork
- 1 x Rotating Basket
- 1 x Grill Gripper
- 1 x Crumb Tray
- 1 x User Manual



Image 3.1: A visual representation of the OIMIS Air Fryer Oven's included accessories, such as the baking pan, air fry basket, oven rack,

rotisserie fork, rotating basket, grill gripper, and crumb tray.

4. PRODUCT OVERVIEW

4.1 Main Unit

The OIMIS Air Fryer Oven features a stainless steel exterior, a large viewing window, and an intuitive control panel.



Image 4.1: The OIMIS Air Fryer Oven, highlighting its digital control panel and the interior with food cooking, demonstrating its 21-in-1 multifunctionality.

4.2 Control Panel

The control panel consists of an LED display, a rotary knob, and several touch buttons for various functions.

- **LED Display:** Shows time, temperature, and selected cooking programs.
- **Rotary Knob:** Used to adjust time, temperature, and navigate menus.

- **MENU Button:** Selects from 21 preset cooking programs.
- **ON/OFF Button:** Powers the appliance on or off.
- **TEMP/TIME Button:** Toggles between temperature and time adjustment modes.
- **START/STOP Button:** Initiates or pauses the cooking process.
- **LIGHT Button:** Turns the interior light on or off.
- **PREHEAT Button:** Activates the preheating function.
- **DUAL COOK Button:** Activates the intelligent composite cooking function.



Image 4.2: A detailed view of the OIMIS Air Fryer Oven's control panel, showing the digital display, rotary knob, and various function buttons.

5. SETUP

5.1 Before First Use

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the appliance with a damp cloth.
3. Wash all accessories (baking pan, air fry basket, oven rack, rotisserie fork, rotating basket, grill gripper, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.
4. Place the crumb tray at the bottom of the oven.
5. Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation. Maintain at least 10 cm (4 inches) of clear space on all sides.
6. Plug the power cord into a grounded electrical outlet.

5.2 Initial Burn-Off

It is recommended to perform an initial burn-off to eliminate any manufacturing odors.

1. Ensure the oven is empty and the crumb tray is in place.
2. Close the oven door.
3. Turn on the appliance. Set the temperature to 200°C (390°F) and the time to 15 minutes.
4. Run the cycle. A slight odor or smoke may be present; this is normal.
5. Once complete, allow the appliance to cool down completely and wipe the interior with a damp cloth.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

1. Place food on the appropriate accessory (e.g., air fry basket, baking pan) and insert it into the oven.
2. Close the oven door securely.
3. Press the **ON/OFF** button to power on the appliance.
4. Select a preset menu by pressing the **MENU** button and rotating the knob, or manually set the temperature and time.
5. To manually set: Press **TEMP/TIME** to toggle between temperature and time. Rotate the knob to adjust values.
6. Press the **START/STOP** button to begin cooking.
7. The internal light can be turned on/off using the **LIGHT** button to monitor cooking progress.
8. Once cooking is complete, the appliance will beep. Carefully remove food using the grill gripper or oven mitts.

6.2 Preset Menus

The appliance features 21 preset cooking programs for various dishes. Refer to the display for specific program names.

- Examples include: Fry, Fries, Grilled Wing, Pizza, Steak, BBQ, Root Vegetables, Popcorn, Grill, Toast, Pastry, Bagel, Vegetables, Dried Fruit, Roast, Bacon, Fermentation, Heating, Reheating, Defrosting, Cookie.
- Each preset has a default temperature and time, which can be adjusted manually if needed.

6.3 Temperature and Time Control

The appliance offers a wide temperature range from 30°C to 230°C (86°F to 446°F) and a timer from 0 to 2 hours. The keep warm function can be set from 0 to 8 hours.

Ampio intervallo di temperatura 30°-230°

Temperatura di controllo precisa ogni 1°

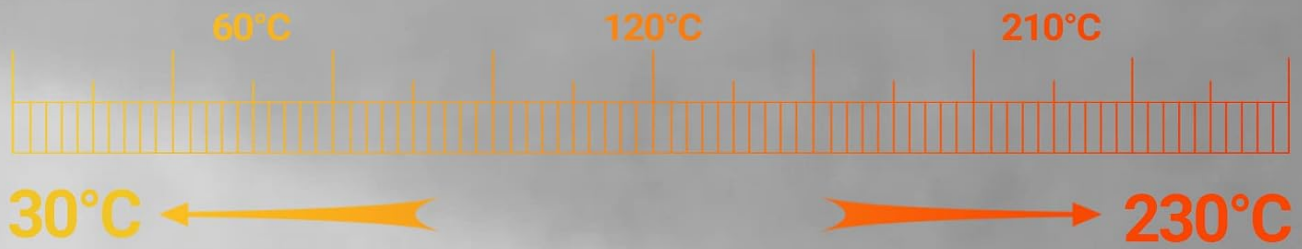


Image 6.1: The OIMIS Air Fryer Oven illustrating its precise temperature control capabilities, ranging from 30°C to 230°C.

6.4 DUAL COOK Function

The DUAL COOK function allows for intelligent composite cooking, combining two cooking stages with different temperatures and times. This feature is designed to optimize cooking results for specific recipes.

- Press the **DUAL COOK** button to activate.
- Set the temperature and time for the first stage.
- Set the temperature and time for the second stage.
- Press **START/STOP** to begin the dual cooking process.

6.5 Air Circulation Technology

The OIMIS Air Fryer Oven utilizes 360° hot air circulation technology to cook food evenly and efficiently, resulting in crispy textures with significantly less oil compared to traditional deep frying.



Image 6.2: A diagram illustrating the 360-degree hot air circulation system within the OIMIS Air Fryer Oven, ensuring even cooking.

Circolazione dell'aria calda a 360°

Mantenere la freschezza degli alimenti



Meno
olio



Meno
grassi



Cucina
sana



Calore
uniforme



Cucina
veloce



Facile da
pulire



OIMIS Forno per friggere aria



Friggitura profonda tradizionale

Image 6.3: A visual comparison demonstrating the difference between air-fried fries (left) and traditionally deep-fried fries (right), highlighting the reduced oil content and crispiness achieved with air frying.

7. USING ACCESSORIES

The OIMIS Air Fryer Oven comes with 7 durable accessories to enhance your cooking versatility.

- **Baking Pan:** Ideal for baking cakes, cookies, roasting vegetables, or catching drips.
- **Air Fry Basket:** Designed for air frying items like fries, chicken wings, and other snacks, allowing hot air to circulate around food for even crisping.
- **Oven Rack:** Used for general baking, toasting, or supporting other accessories.
- **Rotisserie Fork:** For roasting whole chickens or larger cuts of meat. Ensure the meat is balanced and secured.
- **Rotating Basket:** Perfect for tumbling smaller items like fries, nuts, or coffee beans for even cooking.
- **Grill Gripper:** A tool for safely inserting and removing hot accessories from the oven.
- **Crumb Tray:** Placed at the bottom of the oven to collect crumbs and drips, making cleanup easier. Always ensure it is in place during operation.

7 Accessori durevoli

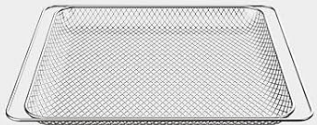
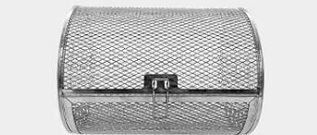
Vassoio da forno		
Cestino Air Fry		
Rack forno		
Forchetta per rotisserie		
Cestino rotante		
Recupera rack		
Vassoio Crumb		

Image 7.1: A visual guide to the 7 durable accessories included with the OIMIS Air Fryer Oven, showing each item and its typical use.

8. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your OIMIS Air Fryer Oven.

8.1 Cleaning the Interior

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the crumb tray and empty any food debris.
3. Wipe the interior walls with a damp cloth and a mild detergent. For stubborn stains, use a non-abrasive sponge.
4. Do not use abrasive cleaners or metal scouring pads, as they can damage the non-stick coating.
5. Ensure the interior is dry before next use.



Image 8.1: A user cleaning the interior of the OIMIS Air Fryer Oven with a cloth, demonstrating ease of access for maintenance.

8.2 Cleaning Accessories

All removable accessories can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing or reusing.

8.3 Cleaning the Exterior

Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.

8.4 Door Removal for Cleaning

The oven door can be removed for more thorough cleaning.

1. Open the door fully.
2. Locate the hinges and follow the instructions in the diagram to unlatch and lift the door.
3. Clean the door and glass panels. The double tempered glass is designed for easy removal for cleaning.
4. Reattach the door by reversing the removal steps, ensuring it is securely latched.



Image 8.2: A diagram illustrating the process of removing the OIMIS Air Fryer Oven door for comprehensive cleaning.



Image 8.3: A close-up showing the removal of the inner glass panel from the oven door, facilitating thorough cleaning.

9. TROUBLESHOOTING

If you encounter any issues with your OIMIS Air Fryer Oven, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not switched on.	Ensure the power cord is securely plugged into a working outlet. Press the ON/OFF button.
Food is not cooking evenly.	Overcrowding the basket; incorrect temperature/time; food not rotated.	Do not overcrowd the basket. Adjust temperature and time as needed. For best results, rotate or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food cooking.	Clean the interior and accessories thoroughly after each use. For fatty foods, ensure the crumb tray is clean and consider using less oil.

Problem	Possible Cause	Solution
Appliance emits a burning smell.	Food debris burning; new appliance odor.	Perform an initial burn-off as described in Section 5.2. Clean the interior and crumb tray. If the smell persists, contact customer support.
Control panel unresponsive.	Temporary electronic glitch.	Unplug the appliance from the power outlet for 5 minutes, then plug it back in and try again.

10. SPECIFICATIONS

Feature	Detail
Brand	OIMIS
Model Number	AFO-10D
Color	Silver
Product Dimensions (L x W x H)	43.4 x 46 x 37.5 cm
Item Weight	10.61 kg
Capacity	30 Liters
Power	1800 Watts
Voltage	220 Volts (AC)
Material	Stainless Steel
Automatic Shut-off	Yes
Noise Level	60 Decibels
Special Features	Temperature Control, 21-in-1 Multifunction
Recommended Uses	Dehydrator, Roaster, Air Fryer, Oven, Grill, Toaster

Four Friteuse Air Chaud	VS	Friteuse à Air	Four Friteuse Air Chaud	VS	Four Encastré
					
90% Métal		99,99% Plastique	✓		✗
Métal Point de Fusion 1535°C		ABS 170°C	30 mins 0.8KWH		60 mins 2.8KWH
✓		✗	7 mins 0.21KWH		15 mins 0.7KWH
					
					Rôti
					
					Steak

Image 10.1: A comparison highlighting the OIMIS Air Fryer Oven's advantages in material (90% metal vs. 99.99% plastic for traditional air fryers) and energy efficiency compared to built-in ovens.

11. WARRANTY AND CUSTOMER SUPPORT

OIMIS is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in this manual, we encourage you to register your product on our official website for any applicable warranty coverage.

If you have any questions, concerns, or require assistance with your OIMIS Air Fryer Oven, please do not hesitate to contact our customer support team. We aim to provide a satisfactory solution within 24 hours.

Contact Information: Please refer to the contact details provided on your product packaging or our official website for the most up-to-date support information.

© 2023 OIMIS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What material are the internal walls of the OIMIS AFO-10D Air Fryer Oven made of?

The internal walls of the OIMIS AFO-10D Air Fryer Oven are primarily constructed from metal, specifically stainless steel. According to the product specifications and maintenance instructions:Material Composition: The product is marketed as being 90%...

[Read full answer](#)