



[Manuals.plus](#) /

> [Arteck](#) /

> Arteck Wireless Mouse MW167 User Manual

## Arteck MW167

# Arteck Wireless Mouse MW167 User Manual

Comprehensive guide for setup, operation, and maintenance of your Arteck Wireless Mouse.

## 1. INTRODUCTION

The Arteck Wireless Mouse MW167 is an ergonomic 2.4G USB optical mouse designed for comfortable and efficient use across various computing environments. It features silent clicking, multiple programmable buttons, and a long-lasting rechargeable battery, making it suitable for daily tasks, office work, and casual use.



Figure 1: Arteck Wireless Mouse MW167 and its Nano USB Receiver.

## 2. SETUP GUIDE

Setting up your Arteck Wireless Mouse is a straightforward process. Follow these steps to begin using your mouse instantly:

1. **Locate the Nano USB Receiver:** The compact Nano USB receiver is conveniently stored inside the battery compartment at the back of the mouse. Gently open the battery cover to retrieve it.
2. **Insert the Receiver:** Plug the Nano USB receiver into an available USB port on your computer (desktop, PC, or laptop).
3. **Power On the Mouse:** Locate the ON/OFF switch on the underside of the mouse and slide it to the 'ON' position.
4. **Automatic Connection:** The mouse will automatically connect to your computer. No additional drivers are typically required for standard functionality.
5. **Optional Pairing (Arteck Keyboard):** If you intend to pair this USB dongle with an Arteck Keyboard, please refer to the specific instructions provided by Arteck support for keyboard pairing.



## EASY SETUP

Plug the nano USB receiver and use

\*The nano USB receiver is stored inside the back of the mouse

Figure 2: Location of the Nano USB receiver and ON/OFF switch on the mouse underside.

Your browser does not support the video tag.

Video 1: Official Arteck USB Wireless Mouse setup and feature overview. This video demonstrates the simple plug-and-play setup process and highlights key functionalities of the mouse.

### 3. OPERATING INSTRUCTIONS


The Arteck Wireless Mouse MW167 is designed for enhanced productivity and comfort. Familiarize yourself with its buttons and features:

- **Left and Right Click Buttons:** Standard mouse buttons for primary and secondary actions. These buttons feature silent clicking for a quiet working environment.
- **Scroll Wheel:** Located between the left and right click buttons, used for vertical scrolling through documents and web pages.
- **DPI Switch Button:** Positioned below the scroll wheel, this button allows you to adjust the cursor sensitivity (DPI - Dots Per Inch). Cycle through 800, 1200, 1600, 2000, and 2400 DPI settings to match your preference and task requirements.
- **Side Buttons (Backward/Forward):** Two buttons located on the left side of the mouse. The top button typically functions as

'Page Forward' and the bottom button as 'Page Backward' in web browsers and file explorers.

- **Windows Switch Button:** An additional button, typically located near the side buttons, designed to facilitate quick switching between open windows or applications.

## Ergonomic Design, Changeable DPI, Silent Clicking






		
<b>3 Productive Side Buttons</b>	<b>5 Level DPI</b>	<b>Quiet Click</b>
2 Page Backward & Forward Buttons 1 Windows Switching Button	Switch the DPI Between 800/ 1200/1600/2000/2400 DPI	Silent Clicking Free Your Worry About Bothering Others

Figure 3: Overview of the mouse's ergonomic design, DPI switch, and silent click functionality.



# Strong Durability

5000000 times keystroke test

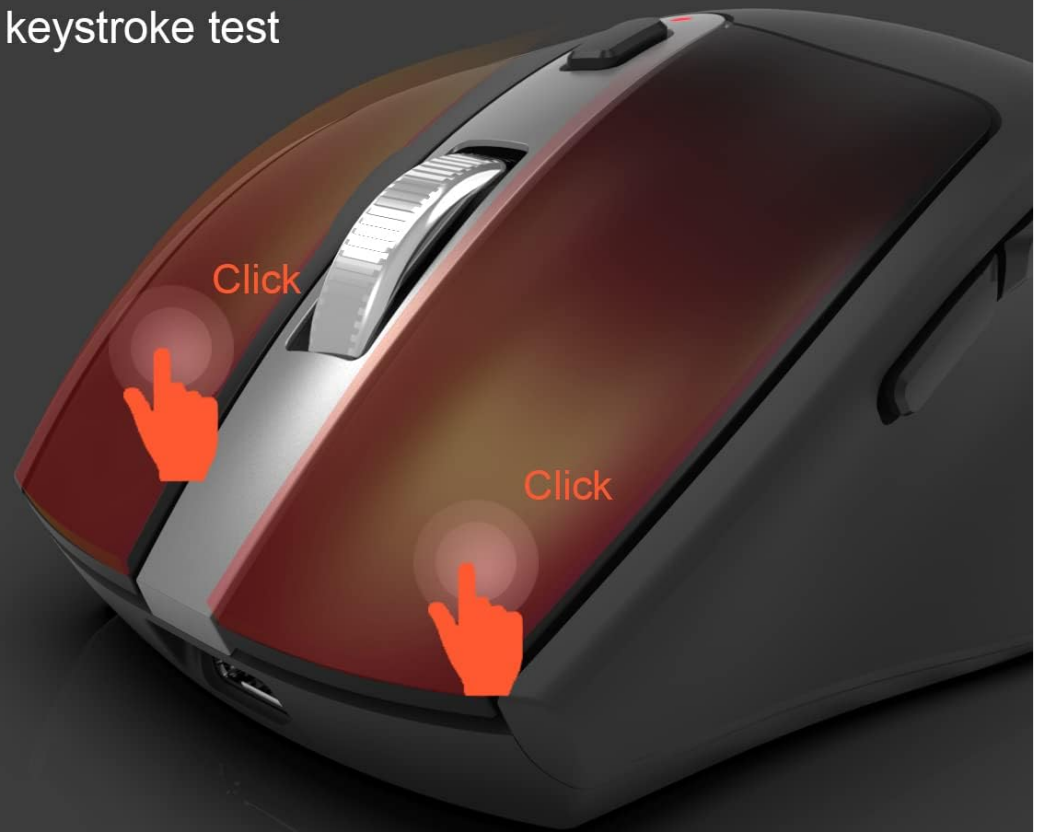


Figure 4: Illustration of the mouse's durable construction and button lifespan.

# 2.4G Wireless Mouse

Suitable for Various Environments



Home



Cafe



Meeting



Library

Figure 5: The 2.4G wireless mouse is suitable for diverse working environments due to its stable connection and silent operation.

## 4. MAINTENANCE AND BATTERY INFORMATION

The Artek Wireless Mouse MW167 is equipped with a long-life rechargeable lithium battery, designed for extended use on a single charge.

- **Battery Life:** A full charge can last for approximately 4 months, based on an average of 2 hours of non-stop daily use. Actual battery life may vary depending on usage patterns and environmental conditions.
- **Charging:** Use the provided USB-C charging cable to recharge the mouse. Connect the USB-C end to the mouse's charging port (located at the front) and the USB-A end to a compatible USB power source (e.g., computer USB port, wall adapter).
- **Charging Indicator:** The mouse features an LED indicator that typically changes color to show charging status (e.g., red for charging, green for fully charged).
- **Cleaning:** To maintain optimal performance, periodically clean the mouse surface with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

# Long Battery Life

Use for 4 months per charge, based on 2 hours per day



Figure 6: The mouse offers extended battery life, reducing the frequency of recharging.

## 5. TROUBLESHOOTING

If you encounter issues with your Artek Wireless Mouse, consider the following common solutions:

- **Mouse Not Responding:**
  - Ensure the mouse is powered on.
  - Check if the Nano USB receiver is securely plugged into a working USB port on your computer.
  - Verify the mouse battery is charged. Connect the USB-C charging cable and allow it to charge for a few minutes.
  - Try plugging the USB receiver into a different USB port.
  - Restart your computer.

• **Intermittent Connection:**

- Ensure the mouse is within the effective operating range (up to 10 meters) of the USB receiver.
- Minimize interference from other wireless devices or large metal objects.
- Try moving the USB receiver to a different port, especially one closer to the mouse.

• **Cursor Movement Issues:**

- Clean the optical sensor on the underside of the mouse.
- Ensure you are using the mouse on a suitable surface. Highly reflective or transparent surfaces may affect tracking.
- Adjust the DPI setting using the DPI switch button to see if a different sensitivity improves performance.

• **Buttons Not Functioning:**

- Ensure the mouse is fully charged.
- If specific buttons are not working, try restarting the mouse (turn off and on) or reconnecting the USB receiver.

For further assistance or issues not covered here, please contact Artek customer support.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	MW167
Connectivity Technology	2.4G Wireless (USB Receiver)
Movement Detection	Optical
DPI Settings	800 / 1200 / 1600 / 2000 / 2400 DPI
Buttons	7 (Left, Right, Scroll Wheel, DPI Switch, 2 Side Buttons, Windows Switch)
Battery Type	Rechargeable Lithium Ion (1 included)
Charging Port	USB-C
Item Weight	5.6 ounces (approx. 158.7 grams)
Package Dimensions	4.84 x 4.06 x 1.85 inches



Figure 7: Physical dimensions and approximate weight of the Arteck Wireless Mouse MW167.

## 7. WARRANTY AND SUPPORT

Arteck stands behind the quality of its products. Your Arteck Wireless Mouse MW167 comes with a comprehensive warranty and dedicated customer support.

- **Warranty Period:** This product is covered by a **24-month warranty** from the date of purchase.
- **Claiming Warranty:** For any warranty claims or technical support, please contact our friendly customer service team.
- **Support Email:** [support@arteck.com](mailto:support@arteck.com)

Please retain your proof of purchase for warranty validation.

Arteck is a registered trademark.