

Philips FC6718/01

Philips SpeedPro Aqua FC6718/01 Cordless Stick Vacuum Cleaner

USER MANUAL

Model: FC6718/01

1. Important Safety Information

Read this user manual carefully before using the appliance and save it for future reference. Always follow the basic safety precautions listed below to reduce the risk of fire, electric shock, or injury.

- Do not use the appliance outdoors or on wet surfaces.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

2. Package Contents

Verify that all components are present and in good condition upon unpacking.

- Main Unit (Handheld Vacuum)
- Extension Wand
- Floor Brush Nozzle
- Crevice Tool
- Aqua Nozzle (for wet cleaning)
- Mop Pads (2x)
- Power Adapter



Image: The Philips SpeedPro Aqua FC6718/01 vacuum cleaner and its main components: the handheld unit, extension wand, floor

nozzle, Aqua nozzle, and mop pads.

3. Setup and Initial Use

3.1 Assembly

1. Insert the extension wand into the main unit until it clicks into place.
2. Attach the desired nozzle (Floor Brush or Aqua Nozzle) to the other end of the extension wand until it clicks.
3. For handheld use, attach accessories directly to the main unit.





Image: Philips SpeedPro Aqua FC6718/01 cordless stick vacuum cleaner, fully assembled.

3.2 Charging the Battery

Before first use, fully charge the appliance. The battery indicator lights will show the charging status.

- Connect the power adapter to the charging port on the main unit.
- Plug the adapter into a wall outlet.
- A full charge typically takes several hours.

4. Operating Instructions

4.1 Dry Vacuuming

1. Ensure the Floor Brush Nozzle is attached.
2. Press the power button to turn on the vacuum.
3. Select the desired power setting (2 speeds available) using the speed control button.
4. Move the vacuum across the surface to be cleaned.



Image: A man using the Philips SpeedPro Aqua FC6718/01 stick vacuum cleaner to clean a kitchen floor.

4.2 Wet Cleaning (Aqua Function)

1. Fill the Aqua Nozzle's water tank with clean water. You may add a small amount of non-foaming detergent if desired.
2. Attach a clean mop pad to the Aqua Nozzle.
3. Attach the Aqua Nozzle to the extension wand.
4. Turn on the vacuum. The Aqua Nozzle will dispense water onto the floor as you move it.
5. For optimal results, vacuum first to remove loose dirt, then use the Aqua function.





Image: Philips SpeedPro Aqua FC6718/01 cordless stick vacuum cleaner with the Aqua nozzle attached for wet cleaning.

4.3 Using Accessories

- **Crevice Tool:** Ideal for narrow spaces, corners, and edges. Attach directly to the main unit or extension wand.
- **Handheld Mode:** Detach the extension wand and floor nozzle to use the main unit as a handheld vacuum for furniture, car interiors, or high surfaces.



Image: A woman using the Philips SpeedPro Aqua FC6718/01 handheld vacuum to clean blinds above a kitchen sink.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Bin

1. Turn off the appliance.
2. Press the release button to detach the dust bin from the main unit.
3. Open the dust bin lid and empty its contents into a waste bin.
4. Close the lid and reattach the dust bin to the main unit.

5.2 Cleaning the Filter

The foam filter is washable and should be cleaned regularly, ideally after every 4-5 uses, or when suction power decreases.

1. Remove the dust bin as described above.
2. Carefully remove the filter assembly from the dust bin.
3. Separate the foam filter from the filter cage.
4. Rinse the foam filter under running tap water until the water runs clear.
5. Allow the filter to air dry completely for at least 24 hours before reassembling. Do not place in direct sunlight or use a dryer.
6. Reassemble the filter and place it back into the dust bin, then reattach the dust bin to the main unit.

5.3 Cleaning the Floor Brush Nozzle

- Regularly check the brush bar for tangled hair or debris.
- Use scissors or a brush to remove any obstructions from the brush bar.
- Wipe the exterior of the nozzle with a damp cloth.

5.4 Cleaning the Aqua Nozzle and Mop Pads

- After each wet cleaning session, empty any remaining water from the Aqua Nozzle's tank.
- Rinse the water tank with clean water.
- Remove the mop pads and wash them by hand or machine (follow care instructions on the pad).
- Allow all components to air dry completely before storage.

6. Troubleshooting

If you encounter issues with your Philips SpeedPro Aqua, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on	Battery is discharged Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Reduced suction power	Dust bin is full Filter is clogged Nozzle or wand is blocked	Empty the dust bin Clean or wash the filter Check and clear any blockages in the nozzle or wand
Water not dispensing (Aqua function)	Water tank is empty Mop pad is not properly attached Water outlet is clogged	Refill the water tank Ensure mop pad is securely attached Check for blockages in the water outlet
Unusual noise during operation	Obstruction in the brush bar or air path Loose component	Turn off and check for obstructions; remove if found Ensure all parts are securely assembled

7. Specifications

Feature	Specification
Brand	Versuni (Manufactured by Philips)
Model Number	FC6718/01
Color	Black, Blue
Dimensions (L x W x H)	50 x 50 x 28 cm
Weight	2.1 Kilograms
Voltage	18 Volts
Material (Wheels)	Rubber
Number of Speeds	2
Noise Level	80 Decibels
Runtime	40 minutes
Cleaning Type	Dry & Wet

Feature	Specification
Suction Technology	Filtering
Filter Type	Foam (Washable)
Surface Recommendation	Upholstery (also suitable for hard floors and carpets)
Power Source	Battery Powered
Battery Type	1 Lithium-ion (included)
Included Components	Floor brush, Crevice tool, Power adapter

8. Warranty and Support

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Philips (Versuni) website. You can also find FAQs and additional support resources online.

Keep your proof of purchase for warranty claims.