

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Magnavox](#) /

> [Magnavox MD6924 Portable Top Loading CD Boombox User Manual](#)

Magnavox MD6924

Magnavox MD6924 Portable Top Loading CD Boombox User Manual

Model: MD6924

INTRODUCTION

The Magnavox MD6924 is a versatile portable audio system designed for listening to your favorite music from various sources. This boombox features a top-loading CD player, AM/FM stereo radio, and an auxiliary input for connecting external devices. It is compatible with CD-R/CD-RW discs and includes a clear LED display for easy operation. Its compact design and dual power options (AC/DC with batteries) make it suitable for both indoor and outdoor use.



Image: Magnavox MD6924 Portable CD Boombox, front view.

KEY FEATURES

- **Top Loading CD Player:** Compatible with CD-R/CD-RW discs for versatile playback.
- **AM/FM Stereo Radio:** Enjoy your favorite radio stations with clear reception.
- **AUX Input:** Connect external audio devices via the 3.5mm auxiliary port.
- **LED Display:** Provides clear track and function information.
- **Portable Design:** Features a sturdy carry handle and supports both AC power and 6 C batteries (not included) for on-the-go use.
- **Programmable CD Player:** Allows for custom playback sequences.

Features

Programmable & Repeatable cd player



**LED
display**



**CD-R/CD-W
compatible**



**AM / FM
Stereo Radio**



**3.5mm
Aux-in Jack**

**NOT FOR
HEADPHONES**

MAGNAVOX

Image: Overview of Magnavox MD6924 features, highlighting LED display, CD compatibility, AM/FM radio, and Aux-in port.



Image: Magnavox MD6924 demonstrating its top-loading CD player, AC/DC power option, carry handle, and battery usage.

SETUP

Powering the Device

The Magnavox MD6924 can be powered in two ways:

1. **AC Power:** Connect the provided AC power cord to the AC IN jack on the back of the unit and then plug it into a standard wall outlet.
2. **Battery Power:** For portable use, open the battery compartment on the bottom of the unit. Insert 6 C-size batteries (not included), ensuring correct polarity (+/-). Close the battery compartment securely.

Antenna Setup

For optimal FM radio reception, extend the telescopic antenna fully. For AM reception, the unit has a built-in antenna, so no external adjustment is needed.

OPERATING INSTRUCTIONS

CD Playback

1. Open the CD compartment lid located on the top of the unit.
2. Carefully place a CD (CD-R/CD-RW compatible) onto the center spindle with the label side facing up.
3. Close the CD compartment lid firmly until it clicks.
4. Slide the FUNCTION switch (located on the side) to the 'CD' position.
5. Press the PLAY/PAUSE button to start playback. The track number will appear on the LED display.
6. Use the SKIP/SEARCH buttons (◀◀ / ▶▶) to skip tracks or fast forward/rewind within a track.
7. Press the STOP button to stop playback.
8. To program tracks, press the PROG button while the CD is stopped, then use SKIP/SEARCH to select tracks and PROG to confirm. Press PLAY to start the programmed sequence.

AM/FM Radio

1. Slide the FUNCTION switch to the 'RADIO' position.
2. Select either 'AM' or 'FM' using the AM/FM band switch.
3. Rotate the TUNING dial (located on the side) to find your desired radio station.
4. Adjust the VOLUME dial to your preferred listening level.

AUX Input

1. Connect a 3.5mm audio cable (not included) from your external audio device (e.g., smartphone, MP3 player) to the AUX IN jack on the side of the boombox.
2. Slide the FUNCTION switch to the 'AUX' position.
3. Start playback on your external device.
4. Adjust the volume using the VOLUME dial on the boombox and/or your external device.

Listen to your favorite music

3.5 mm
Aux in Jack



Image: Magnavox MD6924 demonstrating connection to a smartphone using the 3.5mm Aux-in jack.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.
- **Battery Replacement:** Replace all batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the unit will not be used for an extended period.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	AC cord not connected; Batteries depleted or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
CD not playing/skipping	CD dirty or scratched; CD inserted incorrectly; CD compartment not closed.	Clean or replace CD; Insert CD with label side up; Close lid firmly.
Poor radio reception	Antenna not extended (FM); Unit too close to interference sources.	Extend FM antenna; Move unit away from other electronic devices.
No sound from AUX input	AUX cable not connected; Volume too low on boombox or external device.	Ensure AUX cable is securely connected; Increase volume on both devices.

SPECIFICATIONS

- **Model Number:** 813175
- **Product Dimensions:** 9.6 x 9 x 5.8 inches
- **Item Weight:** 2.57 pounds
- **Brand:** Magnavox
- **Connectivity Technology:** Auxiliary
- **Speaker Type:** Stereo
- **Power Source:** AC/DC (6 C-size batteries, not included)

Dimensions



Image: Magnavox MD6924 with key dimensions indicated.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: Magnavox MD6924 Portable Top Loading CD Boombox with Radio. This video provides a visual overview of the product's design and features.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Magnavox website. Keep your purchase receipt as proof of purchase for any warranty claims.

