

[Manuals.plus](#) /

> [Anbull](#) /

> Anbull Electric Pruning Shears User Manual - Model 21V 2Ah

Anbull 21V 2Ah Electric Pruning Shears

Anbull Electric Pruning Shears User Manual

Model: 21V 2Ah Electric Pruning Shears

1. PRODUCT OVERVIEW

The Anbull Electric Pruning Shears are professional-grade cordless tools designed for efficient and effortless pruning of branches up to 1.2 inches (30mm) in diameter. Featuring a brushless motor and SK5 high carbon steel blades, these shears are suitable for various gardening tasks in orchards, gardens, farms, and greenhouses.



Image 1.1: The Anbull Electric Pruning Shears kit, including the pruner, two 21V 2Ah batteries, a charger, replacement blades, and a portable storage case.

Package Contents:

- 1 x Cordless Electric Pruner
- 2 x 2Ah Rechargeable Lithium Batteries
- 1 x U.S. Charger
- 1 x Replacement Blade
- 2 x Matching Tools (for maintenance)
- 1 x User Manual (this document)
- 1 x Portable Storage Box

2. IMPORTANT SAFETY INSTRUCTIONS

Always read and understand all safety warnings and instructions before operating this electric pruning shear.

Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

General Safety:

- **Keep Work Area Clear:** Cluttered or dark areas invite accidents.
- **Avoid Dangerous Environments:** Do not use power tools in damp or wet locations, or where flammable liquids or gases are present.
- **Wear Appropriate Personal Protective Equipment (PPE):** Always wear safety glasses, gloves, and sturdy footwear. Consider hearing protection if operating for extended periods.
- **Stay Alert:** Watch what you are doing and use common sense when operating power tools. Do not use while tired or under the influence of drugs, alcohol, or medication.
- **Secure the Tool:** When not in use, store the tool in a dry, secure place out of reach of children.

Double Safety Protection Feature:

For enhanced user safety and to prevent accidental activation, the Anbull Electric Pruning Shears incorporate a double safety protection system:

1. **Activation Sequence:** After turning on the power switch (green light will illuminate), you must pull the trigger twice quickly. A "beep beep" sound confirms the shears are activated and ready for use.
2. **Automatic Standby:** If no cutting action occurs within 60 seconds of activation, the machine will automatically enter a "standby" mode and stop working. To resume operation, repeat the activation sequence (pull trigger twice quickly).

Warning: The blades are extremely sharp. Always handle with care. Keep fingers and other body parts away from the blades, especially during operation and maintenance.

3. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Anbull Electric Pruning Shears for safe and effective operation.



Image 3.1: Labeled diagram of the Anbull Electric Pruning Shears, highlighting key components and dimensions.

Key Components:

- **Movable Blade:** The upper blade that moves to perform the cut.
- **Fixed Blade:** The stationary lower blade against which the movable blade cuts.
- **Lubricant Oil Port:** Point for applying lubricant to the blades and cutting mechanism.
- **Ergonomic Non-slip Handle:** Designed for comfortable and secure grip.
- **Trigger:** Activates the cutting action.
- **Power Switch:** Turns the main power to the unit ON/OFF.
- **Battery Removal Button:** Releases the battery from the tool.
- **21V 2Ah Lithium Battery:** Provides power to the shears.
- **Heat Dissipation Hole:** Helps prevent overheating during operation.

4. SETUP GUIDE

4.1 Battery Installation and Charging

The pruning shears are powered by 21V 2Ah rechargeable lithium batteries. It is crucial to fully charge the batteries before their first use to ensure optimal performance and battery life.

Quick Access



Image 4.1: Two 21V 2Ah rechargeable lithium batteries, providing 6-8 hours of continuous operation when fully charged.

1. **Charge Batteries:** Connect the charger to a power outlet and then to the battery. Allow 1-1.5 hours for each battery to fully charge. The charger indicator light will change to signal a full charge.
2. **Install Battery:** Align the charged battery with the battery slot at the base of the pruning shears. Push firmly until it clicks into place. Ensure it is securely seated.

4.2 Initial Activation

Follow these steps to prepare your pruning shears for operation:

Two Large Capacity Rechargeable Lithium Batteries

To extend the battery life, please charge the batteries before the first use

1~1.5h each Charging time **3~4h** each Working time



Image 4.2: Quick access guide for installing the battery, switching on, activating the shears, and beginning work.

1. **Install the Battery:** (Refer to 4.1) Ensure a fully charged battery is securely installed.
2. **Switch on the Power:** Locate the power switch on the tool and slide it to the 'ON' position. A green indicator light should illuminate.
3. **Activate the Shears:** Pull the trigger twice quickly. You will hear a "beep beep" sound, indicating the shears are activated and the blades are ready to move.

5. OPERATING YOUR ELECTRIC PRUNING SHEARS

5.1 Basic Operation

Once activated, the shears are ready for use. To make a cut, simply pull the trigger normally. The blades will close rapidly to cut the branch.

- **Cutting Capacity:** The shears can easily cut branches up to 1.2 inches (30mm) in diameter. Do not attempt to cut branches exceeding this limit to avoid damage to the tool or injury.
- **Blade Opening:** The maximum blade opening is 1.6 inches.
- **Continuous Use:** The two included batteries provide a combined working time of 6-8 hours on a full

charge.

5.2 Tips for Efficient Pruning


The Anbull Electric Pruning Shears are designed for high efficiency and ease of use, significantly reducing effort compared to manual pruners.



Image 5.1: The lightweight design (2.2 lbs) of the Anbull Electric Pruning Shears minimizes user fatigue during extended use.

- **Positioning:** Position the branch as deep as possible into the blades for a clean cut.
- **Clean Cuts:** The sharp SK5 high carbon steel blades ensure clean cuts, promoting healthier plant growth.
- **Ergonomics:** The ergonomic handle and lightweight design (2.2 lbs) reduce strain during prolonged use.

Improve efficiency say goodbye to manual pruner

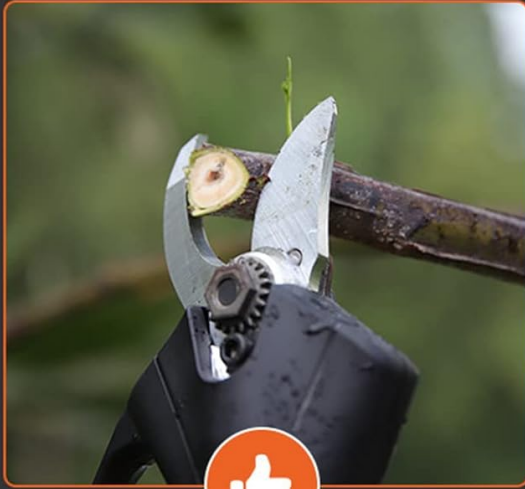

Electric pruning shears

- 1 second cutting
- Effortlessly
- Efficiency increased by 8–10 times



Traditional pruning shears

- Poor shear efficiency
- Uneven incision
- Pain in the hands easy to get arthritis

Image 5.2: The electric pruning shears offer 8-10 times higher efficiency and cleaner cuts compared to traditional manual pruners.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your pruning shears.

6.1 Blade Care

- **Cleaning:** After each use, clean the blades with a damp cloth to remove sap, dirt, and debris. For stubborn residue, use a specialized blade cleaner.
- **Lubrication:** Apply a few drops of lubricating oil to the lubricant oil port and directly onto the blades after cleaning, especially if the shears will be stored for a period. This prevents rust and ensures smooth operation.
- **Sharpening:** If the blades become dull, they can be sharpened using appropriate tools. If you are unsure, consult a professional or use the provided replacement blade.
- **Replacement:** Use the included replacement blade when the original blade shows significant wear or damage. Refer to the matching tools for blade replacement.

6.2 Battery Care

- **Charging:** Always use the provided charger. Do not overcharge or completely drain the batteries.
- **Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, charge batteries to approximately 50% capacity.

6.3 Storage

When not in use, store the pruning shears in their portable storage box. Ensure the power switch is OFF and the battery is removed. Store in a dry place, out of reach of children.

7. TROUBLESHOOTING COMMON ISSUES

This section addresses common problems you might encounter and their solutions.

Problem	Possible Cause	Solution
Shears do not turn on.	Battery not installed correctly or discharged. Power switch is OFF.	Ensure battery is fully charged and properly installed. Turn the power switch to 'ON'.
Shears do not cut after turning on.	Not activated. Entered standby mode.	Pull the trigger twice quickly to activate. If in standby, repeat activation.
Blades move slowly or get stuck.	Blades are dull, dirty, or not lubricated. Cutting branches too thick.	Clean and lubricate blades. Sharpen or replace blades if dull. Do not attempt to cut branches exceeding 1.2 inches (30mm).
Battery life is shorter than expected.	Battery not fully charged. Old battery. Extreme temperatures.	Ensure batteries are fully charged before use. Store batteries at appropriate temperatures. Consider replacing old batteries.

8. TECHNICAL SPECIFICATIONS

Detailed specifications for the Anbull Electric Pruning Shears.

Feature	Specification
Brand	Anbull
Model Number	21V 2Ah Electric Pruning Shears
Cutting Diameter	Up to 1.2 inches (30mm)
Max. Opening	1.6 inches
Blade Material	SK5 High Carbon Steel
Handle Material	Alloy Steel

Feature	Specification
Power Source	Battery Powered
Battery Type	21V 2Ah Lithium-Ion
Charging Time	Approx. 1-1.5 hours per battery
Working Time	Approx. 3-4 hours per battery (6-8 hours with two batteries)
Item Weight	1.5 pounds (tool only), 2.2 pounds (with battery)
Dimensions (Package)	12.68 x 10.83 x 4.06 inches

9. WARRANTY AND CUSTOMER SUPPORT

Anbull is committed to providing high-quality products and customer satisfaction. For specific warranty details, please refer to the warranty card included in your product packaging or visit the official Anbull website.

Customer Support:

If you have any questions, require technical assistance, or need to report an issue with your Anbull Electric Pruning Shears, please contact our customer support team. You can typically find contact information on the Anbull brand store page or through the retailer where you purchased the product.

For more information, visit the [Anbull Store on Amazon](#).

10. PRODUCT VIDEOS

No official product videos from the seller could be embedded due to missing video URLs and metadata in the provided product information.