

## Home MS8018

# Home Garment Steamer MS8018 User Manual

Model: MS8018 (JS-590)

## 1. INTRODUCTION

Thank you for purchasing the Home Garment Steamer MS8018. This appliance is designed to quickly and efficiently remove wrinkles from various fabrics using powerful steam. Please read this manual thoroughly before operating the steamer to ensure safe and optimal performance. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or injury.

- Always ensure the voltage matches the rating on the appliance.
- Do not immerse the steamer unit, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the steam head away from your body and hands during operation. Steam is hot and can cause burns.
- Use only distilled or demineralized water to prevent mineral buildup.
- Never direct steam at people, pets, or electrical appliances.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not overfill the water tank.
- Ensure the steamer is placed on a stable, flat surface during use.

## 3. PRODUCT OVERVIEW

The Home Garment Steamer MS8018 is designed for efficient wrinkle removal. Familiarize yourself with its components:

- Main Steamer Unit

- Water Tank (2.2 Liters capacity)
- Flexible Steam Hose
- Steam Head
- Brush Attachment
- Special Protective Glove
- Luxurious Foldable Clothes Hanger
- Adjustable Support Pole







Image: The Home Garment Steamer MS8018, showcasing its main unit, water tank, hose, steam head, and hanger assembly.

## 4. SETUP

---

Follow these steps for initial assembly and preparation:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed components are present.
2. **Assemble Support Pole:** Insert the adjustable support pole into the designated slot on the main steamer unit. Secure it firmly.
3. **Attach Clothes Hanger:** Mount the foldable clothes hanger onto the top of the support pole.
4. **Fill Water Tank:** Remove the water tank from the main unit. Unscrew the cap and fill the tank with clean, distilled, or demineralized water up to the MAX fill line. Do not use tap water to prevent mineral buildup. Securely replace the cap and reinsert the tank into the main unit.
5. **Connect Steam Hose and Head:** Attach the flexible steam hose to the steam outlet on the main unit. Then, connect the steam head to the other end of the hose. Ensure all connections are secure to prevent steam leakage.
6. **Position Steamer:** Place the assembled steamer on a flat, stable, and heat-resistant surface, away from walls or furniture.

## 5. OPERATING INSTRUCTIONS

---

Once the steamer is set up, follow these steps to begin steaming:

1. **Plug In:** Insert the power plug into a grounded electrical outlet (220V, 50Hz).
2. **Power On:** Turn on the steamer using the power switch. The indicator light will illuminate, signaling that the unit is heating up.
3. **Wait for Steam:** Allow approximately 45-60 seconds for the water to heat up and steam to be generated. Steam will begin to emit from the steam head.
4. **Prepare Garment:** Hang the garment on the provided hanger. For best results, gently pull the fabric taut with one hand while steaming with the other. Wear the protective glove to shield your hand from steam.
5. **Begin Steaming:** Hold the steam head a few inches away from the fabric. Move the steam head slowly over the garment, from top to bottom. For stubborn wrinkles, use the brush attachment to gently brush the fabric while steaming.
6. **Power Off:** Once steaming is complete, turn off the power switch and unplug the steamer from the outlet.
7. **Cool Down:** Allow the steamer to cool down completely before handling or storing.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your garment steamer.

### 6.1 After Each Use

- **Empty Water Tank:** After the unit has cooled, remove the water tank and empty any remaining water. This prevents mineral buildup and bacterial growth.
- **Wipe Down:** Wipe the exterior of the steamer unit and steam head with a soft, damp cloth.

6.2 Self-Cleaning Function

The steamer features a self-cleaning function to remove mineral deposits from the internal components. Refer to the specific instructions in your product packaging for detailed steps on activating this function. Typically, this involves filling the tank with clean water and activating a dedicated self-clean button or mode.

6.3 Storage

Store the steamer in a cool, dry place. Ensure the water tank is empty and all components are dry before storage. You can disassemble the pole and hanger for more compact storage if desired.

7. TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

| Problem                        | Possible Cause                                                                 | Solution                                                                                                              |
|--------------------------------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| No steam or very little steam. | Water tank empty; unit not heated sufficiently; mineral buildup.               | Refill water tank; allow more time to heat (45-60 seconds); perform self-cleaning.                                    |
| Water leakage from steam head. | Overfilled water tank; condensation in hose; steam head not properly attached. | Do not overfill tank; hold steam head upright to allow condensation to drain; ensure steam head is securely attached. |
| Steamer not turning on.        | Not plugged in; power switch off; power outage.                                | Check power plug connection; ensure power switch is ON; check household circuit breaker.                              |
| Overheat protection activated. | Low water level; prolonged use.                                                | Refill water tank; allow unit to cool down before resuming use.                                                       |

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

| Feature      | Specification   |
|--------------|-----------------|
| Brand        | Home            |
| Model Number | MS8018 (JS-590) |
| Product Type | Garment Steamer |
| Color        | Blue            |
| Power        | 1800 Watt       |
| Voltage      | 220 Volt        |
| Frequency    | 50 Hz           |

| Feature             | Specification                                                                    |
|---------------------|----------------------------------------------------------------------------------|
| Water Tank Capacity | 2.2 Liters                                                                       |
| Item Weight         | 6 Kilograms                                                                      |
| Product Benefits    | Wrinkle Removal                                                                  |
| Special Features    | Self-cleaning function, Overheat protection                                      |
| Included Components | Steamer stand, water tank, brush head, protective glove, foldable clothes hanger |

## 9. WARRANTY AND SUPPORT

This Home Garment Steamer MS8018 comes with a manufacturer's warranty of **one year** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage caused by misuse, neglect, accident, alteration, or unauthorized repair. Please retain your purchase receipt as proof of purchase for warranty claims.

For technical support, warranty claims, or service inquiries, please contact your retailer or the manufacturer's customer service department. Contact details can typically be found on the product packaging or the manufacturer's official website.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question