

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [SOUIDMY](#) /

> SOUIDMY G-310 Digital Piano Keyboard User Manual

SOUIDMY G-310

SOUIDMY G-310 Digital Piano Keyboard User Manual

Model: G-310 | Brand: SOUIDMY

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your SOUIDMY G-310 Full-Weighted Digital Piano Keyboard. Please read this manual thoroughly before using the instrument to ensure optimal performance and longevity.



Figure 1: The SOUIDMY G-310 Digital Piano Keyboard, showcasing its full 88-key layout and sleek design.

SETUP

1. Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts are present before beginning assembly. Refer to the included assembly guide for detailed instructions on attaching the stand (if applicable) and music rest.



Sticking to Classic Express Yourself

G-310 Digital Piano



WEIGHTED
KEYBOARD



25W
STEREO SOUND



CLASSIC
WOODEN DESIGN

Figure 2: A user seated at the SOUIDMY G-310 Digital Piano, demonstrating a typical setup with a music stand and tablet.

2. Initial Connections

Connect the power adapter to the DC IN port on the rear of the piano and then to a power outlet. For optimal sound, ensure the piano's speakers are unobstructed. If using external headphones or an amplifier, connect them to the appropriate audio output jacks.

All the Right Connections

Can easily link various devices, like pedal, audio, headphone and MIDI interfaces.



Figure 3: Close-up view of the rear connection panel, showing ports for power, sustain pedal, 3-pedal DIN, USB-MIDI, and audio input/output.

The G-310 features a variety of connectivity options:

- **Stereo 1/4" (6.35mm) Audio Input and Output:** For connecting to computers, external speakers, or headphones.
- **1/4" (6.35mm) Sustain Pedal Input:** For connecting the included sustain pedal.
- **3-Pedal 5-PIN DIN Input:** For advanced pedal units.
- **USB-MIDI Output:** For connecting to MIDI-compatible devices or computer software.

OPERATING INSTRUCTIONS

1. Power On/Off and Volume Control

To power on the piano, press the **POWER** button located on the control panel. Adjust the overall volume using the sliding volume control. The G-310 is equipped with 2x25W stereo speakers for clear sound output.



Figure 4: Close-up of the left control panel, showing the LCD screen and various function buttons.

2. Key Features and Functions

The G-310 features an 88-key full-weighted graded hammer action keyboard, designed to mimic the feel of an acoustic piano. It offers 4-level touch sensitivity for expressive playing.



Figure 5: Hands on the keyboard, illustrating the graded hammer action and full-size keys.

Voice Selection

The piano includes 168 standard sounds, such as grand piano, violin, and drums. Use the **TONE** button and the numeric keypad or navigation buttons to select different instrument voices.

Rhythms and Demos

Access 100 built-in rhythms and 60 demo songs using the **RHYTHM** and **DEMO** buttons respectively. Adjust tempo and volume for rhythms as needed.

Dual-Voice and Keyboard Split

The **DUAL-VOICE** function allows two different instrument sounds to be played simultaneously with each key press. The **KEYBOARD SPLIT** function divides the keyboard into two sections, each with a different voice, ideal for duets or teaching.

Recording and Playback

Utilize the recording and playback features to capture your performances. Press the **REC** button to start recording and **PLAY** to listen back. This is useful for practice and composition.

3. Official Product Video

Your browser does not support the video tag.

Video 1: An official demonstration of the SOUIDMY G-310 Digital Piano, highlighting its key features and sound quality. This video provides a visual and auditory overview of the instrument's capabilities, including its graded hammer action keyboard, various voices, and connectivity options.

MAINTENANCE

To ensure the longevity and optimal performance of your SOUIDMY G-310 Digital Piano, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the piano. For stubborn dirt, slightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or waxes, as these can damage the finish.
- **Storage:** Store the piano in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. These conditions can affect the electronic components and the wooden cabinet.
- **Handling:** Always lift the piano from its base when moving it. Avoid placing heavy objects on the keyboard or control panel.
- **Power Off:** Always power off the instrument and unplug it from the power outlet when not in use for extended periods or during electrical storms.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speakers/headphones.	Volume too low; headphones connected; power issue.	Increase volume; unplug headphones; check power connection.
Keys not responding or inconsistent touch.	Dust/debris under keys; internal malfunction.	Gently clean around keys; contact customer support if issue persists.
Distorted sound.	Volume too high; faulty cable; external interference.	Reduce volume; check all cable connections; move away from other electronic devices.
MIDI connection issues.	Incorrect driver; software settings; cable issue.	Install latest MIDI drivers; verify software settings; try a different USB cable.

SPECIFICATIONS

Feature	Detail
Model	G-310
Keys	88 Full-Weighted Graded Hammer Action Keys
Touch Sensitivity	4-level adjustable
Voices	168 Built-in Premium Voices
Rhythms	100 Built-in Rhythms
Demo Songs	60 Demo Songs
Speakers	2 x 25W Stereo Speakers
Connectivity	1/4" Audio In/Out, 1/4" Sustain Pedal, 5-PIN DIN (3-pedal), USB-MIDI
Dimensions (L x W x H)	53.07 x 12.2 x 4.92 inches
Weight	48.9 pounds



Figure 6: Technical diagram illustrating the dimensions and key components of the SOUIDMY G-310 Digital Piano.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official SOUIDMY website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Additional resources, including a downloadable PDF user manual, may be available on the product's Amazon page or the manufacturer's website.

Note: Product specifications and features are subject to change without prior notice.