

[manuals.plus](#) /› [PowerLocus](#) /› [PowerLocus P1 Kids Bluetooth Headphones User Manual](#)**PowerLocus P1**

# PowerLocus P1 Kids Bluetooth Headphones User Manual

Model: P1 (pwl-p1kids)

## INTRODUCTION

This manual provides comprehensive instructions for the PowerLocus P1 Kids Bluetooth Headphones. These headphones are designed with an 85dB volume limit for hearing protection, offering both wireless Bluetooth and wired connectivity. They include a built-in microphone, FM radio, and Micro SD card support, making them versatile for various uses such as music, online learning, and travel.

## WHAT'S IN THE Box

- PowerLocus P1 Kids Wireless Headphones
- 3.5mm Audio Cable
- USB Charging Cable
- Hard Shell Protective Carry Case

## OUR PACKAGE INCLUDES:



**1x PowerLocus P1 Kids**  
Wireless Headphones



**3.5mm**  
**Audio Cable**



**USB**  
**Charging Cable**



**Elegant Hard Shell**  
**Carry Case**

Image: The package contents include the PowerLocus P1 headphones, a 3.5mm audio cable, a USB charging cable, and a hard shell protective carry case.

### PRODUCT OVERVIEW

The PowerLocus P1 headphones feature a foldable design for portability, soft earmuffs for comfort, and intuitive button controls on the ear cup.

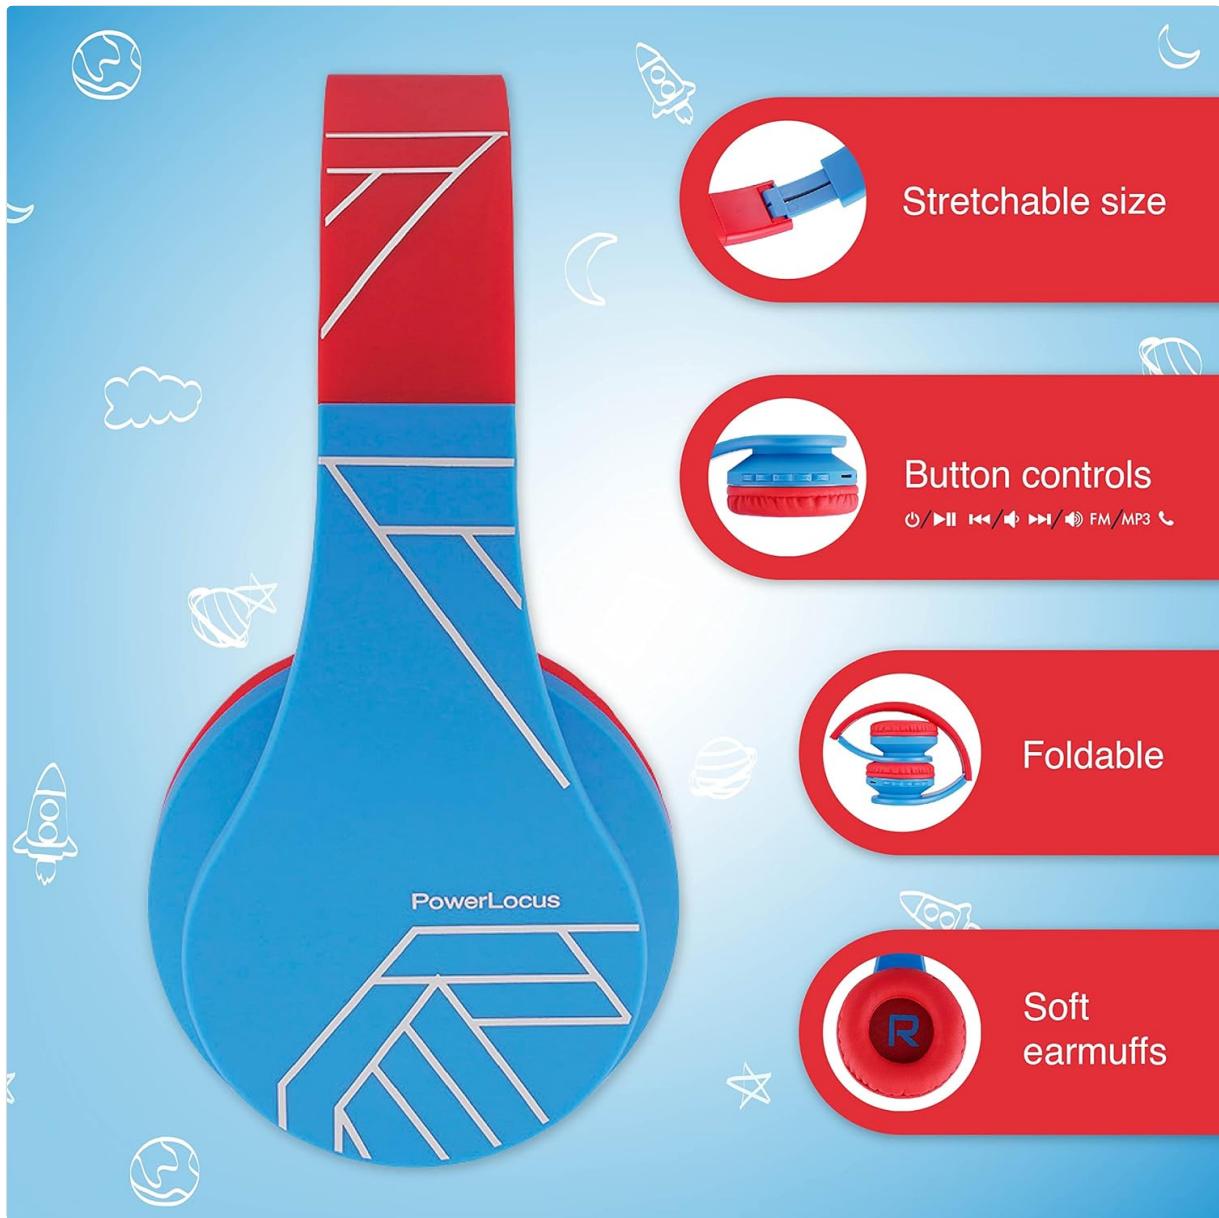


Image: An illustration highlighting key features: stretchable size adjustment, button controls, foldable design, and soft earmuffs.

### Controls and Ports:



Image: A detailed view of the control panel on the right ear cup, showing the power button, volume/track controls, play/pause, mode button (FM/MP3), and charging port.

- **Power Button:** On/Off, Play/Pause (short press), Answer/End Call (short press).
- **Volume Up / Next Track:** Short press for Volume Up, Long press for Next Track.
- **Volume Down / Previous Track:** Short press for Volume Down, Long press for Previous Track.
- **Mode Button (M):** Switch between Bluetooth, FM Radio, and Micro SD modes.
- **Microphone:** For hands-free calls and online learning.
- **3.5mm Audio Jack:** For wired connection.
- **Micro USB Charging Port:** For charging the headphones.
- **Micro SD Card Slot:** For playing music directly from a Micro SD card.

## SETUP

---

### 1. Charging the Headphones

1. Connect the provided USB charging cable to the Micro USB port on the headphones.
2. Connect the other end of the USB cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will illuminate during charging and turn off when fully charged.
4. A full charge takes approximately 2 hours and provides up to 15 hours of playback.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button until the LED indicator flashes.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off.

### 3. Bluetooth Pairing

1. Ensure the headphones are charged and powered on. The LED indicator will flash, indicating pairing mode.
2. On your device (smartphone, tablet, PC), enable Bluetooth.
3. Search for "PowerLocus P1" in the list of available Bluetooth devices.

4. Select "PowerLocus P1" to connect. The LED indicator will turn solid blue once connected.
5. The headphones will automatically reconnect to the last paired device when powered on, if within range.

## OPERATING INSTRUCTIONS

### 1. Volume Control and Track Navigation

- **Volume Up:** Short press the "Volume Up / Next Track" button.
- **Volume Down:** Short press the "Volume Down / Previous Track" button.
- **Next Track:** Long press the "Volume Up / Next Track" button.
- **Previous Track:** Long press the "Volume Down / Previous Track" button.
- **Play/Pause:** Short press the Power button.

*Note: The headphones have an 85dB volume limit to protect hearing.*



Image: A child wearing the PowerLocus P1 headphones, illustrating the safe 85dB volume limit feature.

### 2. Answering/Ending Calls

- **Answer Call:** Short press the Power button when a call comes in.

- **End Call:** Short press the Power button during a call.
- **Reject Call:** Long press the Power button when a call comes in.

### 3. Wired Mode (AUX)

1. Connect one end of the 3.5mm audio cable to the headphone's AUX port.
2. Connect the other end to your audio device's 3.5mm audio jack.
3. The headphones will automatically switch to wired mode. Bluetooth functions will be disabled.



Image: The PowerLocus P1 headphones with the 3.5mm audio cable connected, demonstrating wired usage.

### 4. FM Radio Mode

1. Power on the headphones.
2. Press the "M" (Mode) button to switch to FM Radio mode.
3. Long press the "Play/Pause" button to automatically scan and save available FM stations.
4. Use the "Next Track" and "Previous Track" buttons to navigate between saved stations.

### 5. Micro SD Card Playback

1. Insert a Micro SD card (with MP3 files) into the Micro SD card slot on the headphones.
2. Press the "M" (Mode) button to switch to Micro SD mode.
3. Music will automatically start playing from the card.
4. Use the "Volume Up/Next Track" and "Volume Down/Previous Track" buttons to control playback.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in the provided hard shell protective case to prevent damage. Avoid exposing them to extreme temperatures or humidity.
- **Battery Care:** To prolong battery life, charge the headphones regularly, even if not used frequently. Avoid fully discharging the battery for extended periods.



Image: The PowerLocus P1 headphones shown with their blue hard shell protective case, emphasizing portability and protection.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones using the provided USB cable.
Cannot pair via Bluetooth.	Bluetooth not enabled on device; headphones not in pairing mode; too far from device.	Ensure Bluetooth is on your device. Power off and on the headphones to re-enter pairing mode. Move headphones closer to the device (within 10 meters).
No sound in Bluetooth mode.	Volume too low; not connected; incorrect audio output selected on device.	Increase headphone and device volume. Re-pair the headphones. Check device's audio output settings.
Microphone not working.	Microphone muted on device; incorrect input device selected.	Check device's microphone settings and ensure "PowerLocus P1" is selected as the input device.
FM radio not receiving stations.	Poor signal; stations not scanned.	Move to an area with better signal. Long press the Play/Pause button to auto-scan for stations.
Micro SD card not playing.	Card not inserted correctly; unsupported file format; card corrupted.	Reinsert the Micro SD card. Ensure files are in MP3 format. Try a different Micro SD card.

## SPECIFICATIONS

- Model Name:** P1
- Connectivity:** Bluetooth 5.3, 3.5mm AUX
- Noise Control:** Sound Isolation
- Volume Limit:** 85dB (Safe for Kids)
- Audio Driver Size:** 40mm Dynamic Driver
- Impedance:** 32 Ohm
- Battery Life:** Up to 15 hours
- Charging Time:** Approximately 2 hours
- Wireless Range:** Up to 33ft / 10m
- Features:** Foldable design, Built-in Microphone, FM Radio, Micro SD Card Slot, Volume Control
- Material:** Faux Leather, Plastic
- Item Weight:** 165 Grams (5.8 ounces)
- Compatible Devices:** Cellphones, Desktops, Gaming Consoles (PS4, PS5, Xbox, Switch), Laptops, Tablets

## WARRANTY AND SUPPORT

PowerLocus provides a **2-year warranty** for these headphones. If you encounter any issues or require assistance, please contact PowerLocus customer support. Refer to the contact information provided in your product packaging or visit the official PowerLocus website for support details.

For further assistance, you may visit the [PowerLocus Store on Amazon](#).

## Related Documents - P1

 USER MANUAL PowerLocus P2 <small>For Warranty or Problems with the product, please contact us! Email Support: info@powerlocus.com</small> 	<p><a href="#"><u>PowerLocus P2 User Manual: Features, Operation, and Safety</u></a> Comprehensive user manual for the PowerLocus P2 headphones, detailing product features, pairing instructions, audio modes, charging, and safety guidelines. Includes technical specifications and compliance information.</p>
 USER MANUAL PowerLocus P2 Kids Princess <small>For Warranty or Problems with the product, please contact us! Email Support: info@powerlocus.com</small> 	<p><a href="#"><u>PowerLocus P2 Kids Princess User Manual</u></a> Comprehensive user manual for the PowerLocus P2 Kids Princess wireless headphones, covering setup, operation, features, and safety guidelines.</p>
  P2 Kids <small>User Manual • English manual • Uživatelský návod • Manual en • Benutzershandbuch •</small> 	<p><a href="#"><u>PowerLocus P2 Kids Wireless Headphones User Manual</u></a> Comprehensive user manual for the PowerLocus P2 Kids wireless headphones, covering product description, specifications, pairing, MP3/FM functions, call handling, charging, wired mode, safety instructions, and warranty conditions.</p>
 USER MANUAL PowerLocus P7 EN <small>Web: PowerLocus.com Email: info@powerlocus.com</small> 	<p><a href="#"><u>PowerLocus P7 Wireless Headphones User Manual</u></a> Comprehensive user manual for the PowerLocus P7 wireless headphones. Learn about specifications, Bluetooth pairing, button controls, charging, troubleshooting, and safety guidelines.</p>
 USER MANUAL PowerLocus P2 Kids <small>For Warranty or Problems with the product, please contact us! Email Support: info@powerlocus.com</small>  <small>PowerLocus • Registered PowerLocus.com • PowerLocus.com</small>	<p><a href="#"><u>PowerLocus P2 Kids User Manual</u></a> User manual for the PowerLocus P2 Kids wireless headphones, detailing features, setup, specifications, and safety guidelines.</p>



### [PowerLocus Move | Jumpy Open Ear Headphones User Manual](#)

User manual for the PowerLocus Move | Jumpy Open Ear Headphones, providing instructions on setup, usage, safety, technical specifications, and compliance information.