
[Manuals.plus](#) /

› [ELIKIDSTO](#) /

› ELIKIDSTO 4-in-1 Electric Milk Frother User Manual

ELIKIDSTO MK1000-UL

ELIKIDSTO 4-in-1 Electric Milk Frother User Manual

Model: MK1000-UL

1. INTRODUCTION

Thank you for choosing the ELIKIDSTO 4-in-1 Electric Milk Frother. This versatile appliance is designed to create various milk textures for your favorite beverages, including hot dense foam, hot airy foam, cold milk foam, and warm milk. Please read this manual carefully before use to ensure safe and optimal performance.



Image: The ELIKIDSTO 4-in-1 Electric Milk Frother, a white cylindrical unit with a handle and control buttons, next to a cup of coffee.

2. SAFETY PRECAUTIONS

To prevent personal injury or damage to the appliance, please observe the following safety guidelines:

- Do not immerse the frother base or power cord in water or other liquids.
- Ensure the power supply matches the voltage specified on the appliance.
- Keep out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- Always unplug the frother when not in use and before cleaning.
- Do not fill above the maximum fill line to prevent overflow.
- Use only milk in the frother; do not use other food items.
- The frother jug becomes hot during operation. Handle with care.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Electric Milk Frother Unit
- Power Base
- Frothing Whisk (for dense foam)
- Heating Whisk (for warm milk/airy foam)
- Cleaning Brush
- User Manual (this document)



Image: All components of the ELIKIDSTO Milk Frother, including the main unit, power base, two types of whisks, and a cleaning brush.

4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your milk frother:

- **Frother Jug:** The main container for milk, with a non-stick interior.

- **Lid:** Transparent lid to cover the jug during operation.
- **Handle:** Ergonomic handle for safe pouring.
- **Control Panel:** Features a 'Function' button to select modes and an 'ON/OFF' button.
- **Power Base:** Detachable base that supplies power to the frother.
- **Whisker:** Magnetic whisk for frothing and stirring.



Image: A close-up view of the ELIKIDSTO Milk Frother, highlighting the control panel with function and power buttons.

5. SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean:** Before first use, clean the frother jug interior and whisks with warm soapy water. Rinse thoroughly and dry. Do not immerse the power base.
3. **Place:** Position the power base on a stable, flat, heat-resistant surface near a power outlet.
4. **Insert Whisk:** Select the appropriate whisk for your desired milk texture and place it securely onto the magnetic pin at the bottom of the frother jug.

Easy to Use



Step 1
Pour milk



Step 2
Select mode



Step 3
Automatic foaming



Step 4
Enjoy your coffee

Image: A visual guide showing the steps for using the frother: pouring milk, selecting mode, automatic foaming, and enjoying coffee.

6. OPERATING INSTRUCTIONS

The ELIKIDSTO Milk Frother offers four distinct functions:

- **Warm Airy Milk Foam:** Ideal for cappuccinos.
- **Warm Dense Milk Foam:** Perfect for lattes.
- **Warm Milk:** For hot chocolates or other warm beverages.

- **Cold Milk Foam:** Great for iced coffees or cold desserts.

4 in 1 Function, Enjoy Your Taste



Warm airy
milk foam



Warm dense
milk foam



Warm milk



Cold milk foam



Image: A graphic illustrating the four functions of the frother: warm airy milk foam, warm dense milk foam, warm milk, and cold milk foam.

Fill Lines and Capacity

Observe the internal fill lines for optimal results:

- **Max (Heating Milk):** 300 ml / 10 oz (for warming milk without frothing)
- **Max (Frothing Hot & Cold Milk):** 150 ml / 5 oz (for frothing milk)
- **Min (Minimum Frother Milk):** 75 ml / 2.5 oz

Large Capacity

300 ml/10oz
Heating Milk

150 ml/5oz
Frothing Hot&Cold Milk

75 ml/2.5oz
Minimum Frother Milk



Image: A detailed view of the frother's interior, showing the MAX and MIN fill lines for heating and frothing milk.

Steps for Operation:

1. **Add Milk:** Pour fresh, cold milk into the frother jug, ensuring it is between the MIN and appropriate MAX fill line for your desired function.
2. **Attach Lid:** Securely place the lid on the frother jug.
3. **Place on Base:** Place the frother jug onto the power base.
4. **Select Mode:** Press the 'Function' button repeatedly to cycle through the four modes. The indicator light next to the selected mode will illuminate.
5. **Start:** Press the 'ON/OFF' button once to start the frothing/heating process. The indicator light will turn red.
6. **Completion:** The frother will automatically shut off when the process is complete, and the indicator light will turn off. This typically takes 40 to 120 seconds.
7. **Pour:** Carefully remove the frother jug from the base and pour the frothed or warmed milk into your cup.



Image: A visual representation of the frother's speed and quiet operation, showing milk being poured into a cup and a timer indicating 1-2 minutes.

7. MAINTENANCE & CLEANING

Regular cleaning ensures the longevity and hygiene of your frother. The ELIKIDSTO frother is designed for easy cleaning.

- **Unplug:** Always unplug the frother from the power outlet and allow it to cool down before cleaning.
- **Remove Whisk:** Carefully remove the whisk from the bottom of the jug.
- **Clean Jug:** Wash the interior of the frother jug with warm soapy water and the provided cleaning brush. The non-stick coating makes cleaning simple. Rinse thoroughly.
- **Clean Lid & Whisk:** Wash the lid and whisk with warm soapy water.
- **Wipe Exterior:** Wipe the exterior of the frother jug and the power base with a damp cloth. Do not immerse the power base in water.
- **Dry:** Ensure all parts are completely dry before storing or next use.



Image: A dynamic shot of the frother being cleaned with water, emphasizing its easy-to-clean and auto-shutoff features, along with ETL-Listed and safety certifications.

8. TROUBLESHOOTING

If you encounter issues with your ELIKIDSTO Milk Frother, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not turn on.	Not plugged in; power outage; frother not correctly placed on base.	Ensure power cord is securely plugged in. Check power outlet. Re-seat frother jug on the power base.
Milk is not frothing or heating properly.	Incorrect milk level; wrong whisk used; milk type not suitable for frothing.	Ensure milk is between MIN and MAX frothing lines. Use the correct whisk for frothing. Whole milk or 2% milk generally froth best.

Problem	Possible Cause	Solution
Frother stops unexpectedly.	Automatic shut-off activated; overheating.	This is normal operation if the cycle is complete. If not, unplug and let cool for 10 minutes before restarting.
Burnt smell or residue.	Milk residue left from previous use; not enough milk.	Clean the frother thoroughly after each use. Ensure milk level is above the MIN line.

9. SPECIFICATIONS

Feature	Detail
Brand	ELIKIDSTO
Model Number	MK1000-UL
Power Source	Electric
Wattage	600 watts
Voltage	120V
Capacity (Heating)	300 ml / 10.2 oz
Capacity (Frothing)	150 ml / 5 oz
Material	Stainless Steel, Plastic
Product Dimensions	4.2"W x 8.3"H
Item Weight	2.09 pounds
Special Feature	Auto Shut-Off

10. WARRANTY AND SUPPORT

Your ELIKIDSTO Milk Frother is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or contact ELIKIDSTO customer support.

If you have any questions, require technical assistance, or need to report an issue, please contact our customer support team. Contact information can typically be found on the product packaging or our official website.