

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Tower](#) /
- › [Tower T17071 Vortex Vizion Manual Air Fryer Instruction Manual](#)

Tower T17071

Instruction Manual

TOWER T17071 VORTX VIZION MANUAL AIR FRYER



Image: Front view of the Tower T17071 Vortex Vizion Manual Air Fryer, showcasing its sleek black design and transparent viewing window with food inside.

1. Introduction

The Tower T17071 Vortex Vizion Manual Air Fryer is designed to provide a healthier way to cook your favorite foods. Utilizing Vortex air frying technology, it rapidly circulates hot air, cooking food up to 30% faster than a conventional oven with little to no oil. This 7-liter capacity air fryer is an efficient addition to any kitchen, offering versatile cooking functions including air frying, roasting, grilling, and baking.



Vizion
viewing window

**7 LITRE
AIR FRYER**



Vortex
technology



99%
Less fat



Food
cooks faster



Extra large
capacity



Cooking
made simple



Image: Infographic highlighting key features of the Tower Air Fryer, such as the Vizion viewing window, Vortex technology for 99% less fat, faster cooking, 7L extra-large capacity, and simple controls.

2. Safety Information

Always adhere to the following safety guidelines to ensure safe operation and longevity of your air fryer:

- Ventilation:** Ensure adequate space around the appliance. Leave a minimum 150mm (6 inches) gap between the air fryer and any walls or cupboard tops to allow for proper airflow.
- Air Vents:** Never cover the air vents located on the appliance. Obstructed vents can lead to overheating.

and damage.

- **Heat Sources:** Do not place the air fryer directly next to hobs, open flames, or other direct heat sources. Heat or flames can damage the appliance.
- **Top Surface:** Avoid placing any items on top of the air fryer during operation or storage.
- **Submersion:** Never submerge the main unit of the air fryer in water or any other liquid. Only the crisper tray and basket are designed for washing.



Image: A user carefully removing cooked chicken pieces from the air fryer basket using tongs, demonstrating safe handling after cooking.

3. Setup

Before first use, ensure all packaging materials are removed. Place the air fryer on a stable, heat-resistant surface.

Initial Placement:

As highlighted in the safety section, proper ventilation is crucial. Position the air fryer with at least a 150mm gap from surrounding walls and cupboards to ensure optimal air circulation and prevent overheating.



Image: The Tower Air Fryer positioned on a clean kitchen countertop, illustrating the recommended clearance from surrounding surfaces for proper ventilation.

4. Operating Instructions

The Tower T17071 features manual controls for temperature and time, making operation straightforward.

Key Features for Cooking:

- **Vortex Air Frying Technology:** This technology ensures rapid air circulation for even cooking and crispy results with minimal oil.
- **Vizion Viewing Window:** Monitor your food's progress without opening the basket, preserving heat and ensuring consistent cooking.
- **Fast Cooking:** Achieve beautifully crisp chips in approximately 15 minutes.
- **4-in-1 Cooking:** Beyond air frying, this appliance supports roasting, grilling, and baking, expanding your culinary options.

4-in-1 Cooking

More ways to cook with air fryer,
roasting, grilling and baking functions

Air Frying

Roast

Grill

Bake



Image: A collage demonstrating the 4-in-1 cooking capabilities of the air fryer, including air-fried chicken, roasted vegetables, grilled meat, and baked goods.



VIZION

COOKING WITH CLARITY

See the food as it cooks

The **VIZION** viewing window allows

- you to monitor cooking without opening the Air Fryer.

Get the most delicious, evenly cooked, and perfectly crisp food. Every time.

Quick & easy family favourites

Perfect, crispy French-fries



Golden brown sausages from frozen



Juicy grilled beef burgers



Tasty chicken drumsticks



Image: The air fryer's Vizion window displaying cooking food, alongside examples of popular dishes and their approximate cooking times, such as French fries, golden brown sausages, juicy grilled beef burgers, and tasty chicken drumsticks.

5. Accessories

For optimal performance and safety, always use accessories specifically designed and recommended by Tower for your air fryer model.

- **Proper Fit:** Ensure all accessories fit properly within the air fryer basket and do not touch the heating element located at the top of the cavity.
- **Airflow:** Leave sufficient space for air circulation around any accessories placed inside the basket.



Image: A close-up view of a hand inserting the crisper tray into the air fryer basket, demonstrating proper accessory placement.

6. Maintenance and Cleaning

Regular cleaning is essential for maintaining your air fryer's performance and hygiene.

Cleaning Steps:

- 1. Exterior Cleaning:** Wipe the exterior of the air fryer with a soft, damp cloth. Avoid excessive water or drips.
- 2. Interior Cleaning:** Carefully wipe the interior cavity with a soft, damp cloth. Ensure no water enters the air vents.
- 3. Basket and Crisper Tray:** Remove the basket and crisper tray. These can be cleaned by filling the basket with warm, soapy water and allowing it to soak for approximately 30 minutes.
- 4. Wipe Clean:** After soaking, pour out the water and wipe the basket and crisper tray clean with a soft cloth.
- 5. Drying:** Ensure the basket and crisper tray are completely dry before reassembling and placing them back into the air fryer unit.



Image: A hand wiping the interior of the air fryer basket with a soft cloth, demonstrating the cleaning process.

Official Product Video: After Care

Watch this official video for detailed instructions on maintaining your Tower Air Fryer:

Your browser does not support the video tag.

Video: Tower Single Basket Air Fryer After Care. This video provides a visual guide on how to properly clean and maintain your air fryer for optimal performance and longevity.

7. Troubleshooting

If you encounter any issues with your Tower Air Fryer, consider the following common troubleshooting steps:

- **Appliance Not Turning On:** Ensure the air fryer is securely plugged into a working power outlet. Check if the basket is fully inserted and locked into place.
- **Food Not Cooking Evenly:** Ensure the basket is not overloaded. Shake or turn food halfway through the cooking process. Verify that the temperature and time settings are appropriate for the food being cooked.
- **White Smoke from Appliance:** This can occur if there is residual grease from previous cooking. Clean the basket and crisper tray thoroughly. If cooking fatty foods, consider using a liner.
- **Unusual Odor:** A new appliance may emit a slight odor during initial uses. This is normal and should dissipate. Ensure proper ventilation.

8. Specifications

Feature	Detail
Brand	Tower
Model Number	T17071
Colour	Black
Product Dimensions	32.3 x 37.5 x 36.6 cm
Capacity	7 litres
Power / Wattage	1800 watts
Voltage	240 Volts
Material	Aluminium, Plastic
Auto Shutoff	Yes
Special Features	Temperature Control, Programmable
Item Weight	5.4 kg

9. Storage

Proper storage helps preserve your air fryer and ensures it's ready for its next use.

- **Cool Down:** Always allow the air fryer to cool down completely for at least 30 minutes after use before storing. Removing the basket can help speed up this cooling process.
- **Storage Location:** Store the appliance in a dry, clean, and safe place. If storing on a countertop, ensure it is away from direct heat sources like gas hobs.



Image: A graphic displaying a '3 Year Guarantee' badge, indicating the product's warranty period.

10. Warranty and Support

The Tower T17071 Vortex Vizion Manual Air Fryer comes with a standard 1-year guarantee, which can be extended to 3 years upon product registration online. For any support, troubleshooting, or warranty claims, please refer to the official Tower website or contact their customer service directly.

For further assistance, visit the [Tower Store](#).

