

[manuals.plus](#) /› [Nikai](#) /› [Nikai NWM600FT 6 Kg Front Load Washing Machine User Manual](#)

## Nikai NWM600FT

# Nikai NWM600FT 6 Kg Front Load Washing Machine User Manual

Model: NWM600FT

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Nikai NWM600FT 6 Kg Front Load Washing Machine. Please read these instructions carefully before installation and use, and retain them for future reference.

The Nikai NWM600FT is designed for household laundry, featuring a 6 kg capacity, 800 RPM spin speed, and an A+ energy efficiency rating. Key features include silent operation, a quick wash mode, an auto imbalance sensor, and a water-saving device.

## 2. SAFETY INFORMATION

### Important Safety Instructions:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Keep packaging materials out of reach of children.
- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Never force the door open during operation.
- Unplug the appliance from the power supply before cleaning or performing any maintenance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- This appliance is intended for domestic use only.

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking

Carefully remove all packaging materials. Ensure all components are present and undamaged. Remove any transit bolts from the rear of the machine before use. Failure to do so can cause severe vibration and damage.

### 3.2 Location and Leveling

Place the washing machine on a firm, level surface. Avoid direct sunlight or extreme temperatures. The machine is equipped with adjustable feet to ensure stability and proper operation. Adjust the feet until the machine is perfectly level, preventing excessive vibration during spin cycles.



**Image 1:** Nikai NWM600FT Washing Machine with dimensions. The image shows the front view of the washing machine with measurements: 845mm height, 597mm width, and 497mm depth. This illustrates the compact design suitable for various spaces.

### 3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks. Do not use old hoses; always use the new hoses supplied with the appliance.

### 3.4 Drainage

Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent displacement during operation. The drain hose should be at a height between 60 cm and 100 cm from the floor.

### 3.5 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the appliance. Do not use extension cords or adapters.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The control panel features a program selector dial, push buttons for various functions, and an LED indicator display. The LED display shows program status, remaining time, and error codes.



**Image 2:** Front view of the Nikai NWM600FT Washing Machine. This image highlights the control panel with its program dial and LED display, the front-loading door, and the overall white finish of the appliance.

## 4.2 Loading Laundry

Open the door and load laundry into the stainless steel drum. Do not overload the machine; the maximum capacity is 6 kg. Ensure items are evenly distributed to prevent imbalance.

## 4.3 Detergent and Additives

Add appropriate detergent and fabric softener to the designated compartments in the dispenser drawer. Refer to detergent packaging for recommended quantities.

## 4.4 Selecting a Wash Program

Turn the program selector dial to choose one of the 13 available wash programs. These include options for cotton, synthetics, mixed fabrics, daily laundry, and delicate textiles. The machine also features a quick wash mode for faster cycles and a water-saving mode for reduced water consumption.




**Image 3:** Icons representing key features of the Nikai NWM600FT Washing Machine. These include Water Saving Feature, Stainless Steel Drum, Quick Wash, Auto Imbalance Sensing & Control, Silent Operation, and A+ Energy Efficiency.

## 4.5 Starting and Stopping a Cycle

Press the Start/Pause button to begin the selected program. To pause a cycle, press the button again. To cancel a program, turn the program selector to the 'Off' position or hold the Start/Pause button for a few seconds.

## 4.6 Special Features

- **Silent Operation:** Designed to minimize noise during wash cycles.
- **Auto Imbalance Sensor:** Automatically detects and adjusts for uneven loads to prevent excessive vibration and protect the machine.
- **Water Saving Mode:** Utilizes high pressure with less water for efficient cleaning.
- **Water Balanced Spin Tub:** Ensures even distribution of water during the spin cycle for optimal performance.

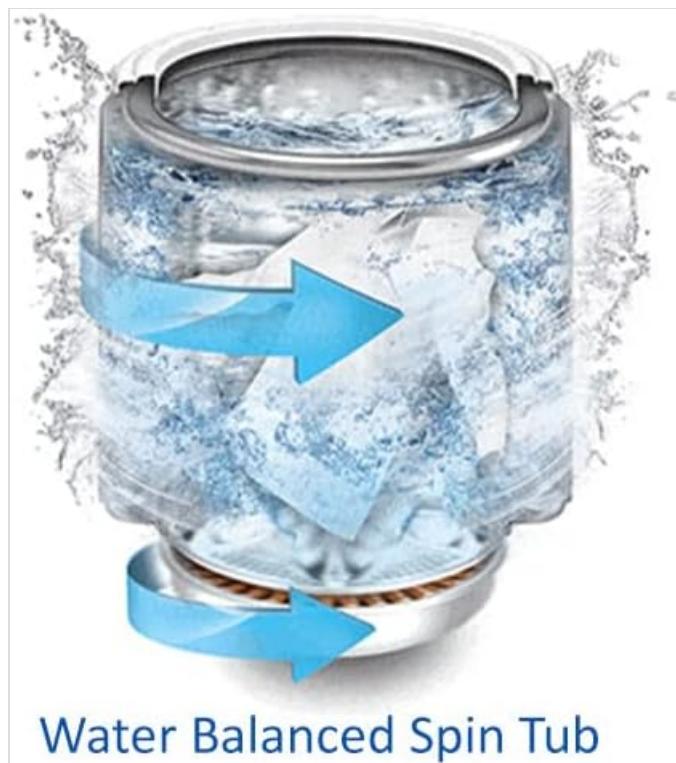

### Water Balanced Spin Tub

**Image 4:** Illustration of a Water Balanced Spin Tub. This graphic depicts water and clothes inside a washing machine drum with blue arrows indicating the balanced rotation during the spin cycle, highlighting the technology that reduces vibration.

## 5. MAINTENANCE AND CARE

### 5.1 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 5.2 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

### 5.3 Cleaning the Drum

The stainless steel drum is designed to resist rust and corrosion. For optimal hygiene, run a maintenance wash cycle (e.g., a hot wash without laundry and with a washing machine cleaner) periodically.

## 5.4 Filter Cleaning

Locate and clean the drain pump filter regularly to prevent blockages and ensure efficient drainage. Refer to the diagram in the full manual for filter location and removal instructions.

## 6. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

- **Machine does not start:** Check power supply, door closure, and ensure a program is selected and the Start/Pause button is pressed.
- **No water intake:** Check water tap connection, water pressure, and ensure the water inlet hose is not kinked.
- **Water not draining:** Check drain hose position and ensure the drain pump filter is clean.
- **Excessive vibration/noise:** Ensure the machine is level, transit bolts are removed, and laundry is evenly distributed. The auto imbalance sensor will attempt to correct this.
- **Error codes on display:** Refer to the full manual for specific error code meanings and troubleshooting steps.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Nikai
Model Info	NWM600FT
Capacity	6 Kilograms
Max Spin Speed	800 RPM
Energy Efficiency	A+
Installation Type	Freestanding
Product Dimensions (L x W x H)	65 x 60 x 86 cm
Item Weight	10.97 kg (approx. 11 kg)
Special Features	Water Saving Mode, Auto Imbalance Sensor, Silent Operation
Control Console	Push Button
Standard Cycles	13
Access Location	Front Load
Material Type	Stainless Steel (Drum)
Color	White

## 8. WARRANTY AND SUPPORT

Your Nikai NWM600FT Washing Machine comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal domestic use.

For warranty claims, technical support, or service inquiries, please contact your authorized Nikai service center or

retailer. Ensure you have your proof of purchase and the product model number (NWM600FT) available.

© 2023 Nikai. All rights reserved.