

Maxima 8719632127710

Maxima Poffertjes Plate User Manual

Model: 8719632127710

1. INTRODUCTION

Thank you for choosing the Maxima Poffertjes Plate. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the product and keep it for future reference.

The Maxima Poffertjes Plate is designed for the rapid production of 25 mini-pancakes (poffertjes) simultaneously. It features a robust construction, a non-stick baking mold, a variable thermostat, and an integrated timer for precise control.

2. SAFETY INSTRUCTIONS

To ensure safe operation, always follow these basic safety precautions:

- Read all instructions carefully before use.
- Connect the appliance only to a grounded power outlet with the correct voltage as indicated on the product label.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT FEATURES

The Maxima Poffertjes Plate offers the following key features:

- **Robust and Easy to Use:** Designed for durability and straightforward operation.
- **Fast Production:** Capable of producing 25 poffertjes quickly.
- **Non-Stick Baking Mold:** Ensures easy release of poffertjes and simplifies cleaning.
- **Variable Thermostat:** Temperature adjustable from 50°C to 300°C for precise cooking control.
- **Equipped with a Timer:** Allows for accurate cooking times.



Figure 3.1: Front angled view of the Maxima Poffertjes Plate, showing the control panel and the 25-cavity baking plate.



Figure 3.2: Front view of the Maxima Poffertjes Plate, highlighting the timer and temperature dials, and the power switch.



Figure 3.3: Side view of the Maxima Poffertjes Plate, showing its compact design and sturdy feet.



Figure 3.4: Rear view of the Maxima Poffertjes Plate, displaying the power input socket and product information label.



Figure 3.5: Top-down view of the non-stick baking plate, clearly showing the 25 circular cavities for poffertjes.



Figure 3.6: Angled view focusing on the control panel and the non-stick baking plate, ready for use.

4. SETUP

1. **Unpacking:** Carefully remove the appliance from its packaging. Retain the packaging for future storage or transport.
2. **Inspection:** Inspect the appliance for any damage. Do not use if damaged. Contact your supplier.
3. **Placement:** Place the poffertjes plate on a stable, level, and heat-resistant surface. Ensure there is adequate ventilation around the appliance. Keep it away from walls and other heat sources.
4. **Cleaning:** Before first use, wipe the non-stick baking plate with a damp cloth and mild detergent. Dry thoroughly.
5. **Power Connection:** Ensure the power switch is in the "OFF" position. Plug the power cord into a grounded electrical outlet that matches the voltage requirements of the appliance.

5. OPERATING INSTRUCTIONS

1. **Preheating:**
 - Turn the power switch to "ON". The power indicator light will illuminate.
 - Set the desired temperature using the "TEMPERATURE" dial (e.g., 180°C - 200°C for poffertjes). The heating indicator light will turn on.
 - Allow the appliance to preheat until the heating indicator light turns off, indicating the set temperature has been reached. This usually takes 5-10 minutes.
2. **Baking Poffertjes:**
 - Lightly grease the non-stick baking cavities with a small amount of cooking oil or butter, if desired.
 - Pour your poffertjes batter into each cavity, filling them about two-thirds full.
 - Set the "TIMER" to the desired cooking duration (e.g., 2-3 minutes per side). The timer will count down and

alert you when finished.

- Once the bottom side is golden brown and bubbles appear on top, carefully flip the poffertjes using a non-scratch utensil.
- Cook the other side until golden brown and cooked through.
- Remove the cooked poffertjes and repeat the process with the remaining batter.

3. After Use:

- Turn the "TEMPERATURE" dial to its minimum setting and the "TIMER" to "OFF".
- Turn the power switch to "OFF" and unplug the appliance from the wall outlet.
- Allow the appliance to cool completely before cleaning or storing.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Maxima Poffertjes Plate.

- Always unplug the appliance and allow it to cool completely before cleaning.
- Baking Plate:** Wipe the non-stick baking plate with a soft, damp cloth. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
- Exterior:** Clean the exterior stainless steel surfaces with a damp cloth. For a polished finish, use a stainless steel cleaner.
- Do Not Immerse:** Never immerse the appliance in water or any other liquid.
- Storage:** Store the appliance in a dry, clean place when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch off; no power from outlet.	Ensure power cord is securely plugged in; turn power switch to "ON"; check outlet with another appliance or circuit breaker.
Appliance not heating up.	Temperature dial set too low; heating element malfunction.	Increase temperature setting; if problem persists, contact customer support.
Poffertjes stick to the plate.	Plate not properly greased; non-stick coating damaged; plate not hot enough.	Lightly grease cavities before each batch; avoid using metal utensils; allow plate to fully preheat.
Poffertjes are unevenly cooked.	Uneven batter distribution; plate not fully preheated.	Ensure even batter distribution; allow sufficient preheating time.

8. SPECIFICATIONS

Attribute	Value
Model Number	8719632127710
Dimensions (L x W x H)	38 x 30 x 20 cm

Attribute	Value
Weight	6.32 kilograms
Manufacturer	Maxima Kitchen Equipment
Temperature Range	50°C to 300°C
Poffertjes Cavities	25
Origin	China

9. WARRANTY AND SUPPORT

Maxima products are manufactured with high-quality materials and craftsmanship. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Maxima website.

For technical support, spare parts, or any questions regarding your Maxima Poffertjes Plate, please contact Maxima customer service. Contact details can typically be found on the Maxima website or on your purchase documentation.

Note: Availability of spare parts information is not provided in the product data. Please contact the manufacturer for details.

© 2024 Maxima Kitchen Equipment. All rights reserved.

Documents - Maxima – 8719632127710



[\[pdf\] Specifications Dimension Guide Warranty Borchure](#)

POFFERTJES PLATE 09374130 maxima poffertjes plate 25 electric server maximakitchenequipment brochures |||

POFFERTJES PLATE MODEL: 25 PIECES - ELECTRIC SPECIFICATIONS Power Connection Nett Weight Gross Weight ... Kg 6.0 Kg H200 x W300 x D380 mm H210 x

W370 x D410 mm 0.03 CBM Carton Box with Foam 8 419 810 0 0 0 **8719632127710**

09374130 HIGH QUALITY / LOW PRICES 24 / 7 SUPPORT SERVICE

IMMEDIATELY AVAILABLE FRO...

lang:en score:18 filesize: 680.46 K page_count: 1 document date: 2021-06-28