



Manuals.plus /

› GOOTHY /

› GOOTHY C7 Christmas Candy Cane Pathway Lights Instruction Manual

GOOTHY C7

GOOTHY C7 Christmas Candy Cane Pathway Lights Instruction Manual

Model: C7

INTRODUCTION

Thank you for choosing the GOOTHY C7 Christmas Candy Cane Pathway Lights. This manual provides essential information for the safe and effective setup, operation, and maintenance of your new outdoor lighting product. Please read these instructions carefully before installation and retain them for future reference.



Image: GOOTHY C7 Christmas Candy Cane Pathway Lights illuminating an outdoor pathway.

SAFETY INFORMATION

For safe use of this product, please adhere to the following guidelines:

- Ensure the product is used in a suitable outdoor environment, protecting it from extreme weather conditions.
- Always unplug the light display when not in use or before performing any maintenance.
- Use only the recommended C7 bulbs (5W, E12/C7 candelabra socket base). Do not exceed the maximum connectable strands (up to 21 sets, Max 432 watts).
- Keep the light display away from flammable materials.
- This product is not a toy. Do not allow children to play with it.
- The product is UL Listed for indoor and outdoor decoration and lighting use.
- If a light bulb goes out, it will not affect other lighting bulbs in the string. Replace promptly.

PACKAGE CONTENTS

Each set includes:

- 4 C7 Candy Cane Shape Lights

- 4 Stakes
- 18-inch lead with male plug
- 6-inch tail with female connector
- 1 Spare Fuse
- 1 Spare C7 Bulb

This product comes as 2 sets, totaling 8 candy cane lights and 8 stakes.



Image: Overview of included components and features like UL listing and end-to-end connectivity.

SETUP AND INSTALLATION

Follow these steps to assemble and install your candy cane pathway lights:

1. **Prepare the Stakes:** Identify the plastic stakes. These will support the candy cane lights in the ground.



Image: Detailed dimensions of the candy cane light, stake, and bulb, highlighting the shatterproof plastic construction.

2. **Insert the C7 Socket:** Place the C7 light socket, which is part of the string light, onto the top of a plastic stake.



Image: Step 1 - Placing the C7 socket onto the stake.

3. **Secure the Wire:** Plug the wire into the two notches located on each side of the stake's top. This helps secure the light string.



Image: Step 2 - Securing the wire into the stake notches.

- 4. Push Down the Light String:** Gently push the C7 light string assembly down into the stake until it is firmly seated.



Image: Step 3 - Pushing the light string into the stake.

- 5. Attach the Candy Cane Shell:** Place the 3D candy cane shell over the assembled light and stake. Rotate it to the left to fix it securely in place.



Image: Step 4 - Attaching and securing the candy cane shell.

- 6. Position in Ground:** Once assembled, gently push the stakes into the ground along your desired pathway, lawn, or garden. Ensure the ground is soft enough to prevent damage to the stakes.

OPERATING INSTRUCTIONS

These pathway lights are designed for simple operation:

- **Power Connection:** Plug the male end of the light string into a standard outdoor electrical outlet. Ensure the outlet is protected from weather elements.
- **Connecting Multiple Sets:** Each set features an end-to-end connectable design. You can connect up to 21 sets (maximum 432 watts total) using the female connector at the end of each string. Simply plug the male end of a new set into the female connector of the previous set.
- **Illumination:** Once plugged in, the C7 clear bulbs will glow with a warm white light, creating a festive atmosphere.

- **Disconnection:** To turn off the lights, simply unplug the main power cord from the electrical outlet.

MAINTENANCE

To ensure the longevity and optimal performance of your GOOTHY C7 Christmas Candy Cane Pathway Lights, follow these maintenance tips:

- **Cleaning:** Gently wipe the candy cane shells and stakes with a soft, damp cloth to remove dirt or debris. Do not use harsh chemicals or abrasive cleaners.
- **Bulb Replacement:** If a bulb burns out, it will not affect the rest of the string. Unplug the unit, carefully unscrew the faulty C7 bulb, and replace it with a new 5W C7 incandescent bulb (E12/C7 candelabra base). A spare bulb is included in your package.
- **Fuse Replacement:** If the entire string fails to light, check the fuse located in the male plug. Unplug the unit, slide open the fuse compartment, and replace the blown fuse with the spare fuse provided.
- **Storage:** When not in use, especially during off-season, unplug the lights, clean them, and store them in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to store them in their original packaging to prevent damage.
- **Inspection:** Periodically inspect the wires, plugs, and bulb sockets for any signs of damage, fraying, or corrosion. Discontinue use if any damage is found and replace damaged components or the entire unit if necessary.

TROUBLESHOOTING

If you encounter issues with your pathway lights, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the outlet.	Check the power outlet with another device. Ensure the outlet is functional.
Lights do not turn on.	Blown fuse in the plug.	Unplug the unit and replace the fuse in the male plug with the spare fuse provided.
Lights do not turn on.	Loose connection.	Ensure all connections (including end-to-end connections if multiple sets are used) are secure.
One or more bulbs are out.	Burnt-out bulb.	Unplug the unit and replace the faulty C7 bulb with a new one.
Lights flicker.	Loose bulb or connection.	Unplug the unit and gently tighten all bulbs. Check all connections.

SPECIFICATIONS

- **Model:** C7
- **Brand:** GOOTHY
- **Light Color:** Warm White (from C7 clear bulbs)
- **Number of Light Sources per Set:** 4
- **Voltage:** 120 Volts
- **Wattage per Bulb:** 5 watts
- **Total Wattage per Set:** 20 watts

- **Type of Bulb:** Incandescent, C7 (E12/C7 candelabra socket base)
- **Power Source:** Corded Electric
- **Material:** Plastic (Shatterproof)
- **Special Features:** Waterproof (IP44 rated), End-to-End Connectable (up to 21 sets / Max 432 watts)
- **Usage:** Outdoor use only
- **Total Length per Set:** 7 feet (18 inch lead, 18 inch spacing between bulbs, 6 inch tail)
- **Item Weight (approx.):** 1.74 pounds (for 2 sets)
- **Package Dimensions (approx.):** 12.01 x 8.19 x 4.29 inches
- **Date First Available:** August 23, 2021

WARRANTY AND SUPPORT

For warranty information or technical support, please contact GOOTHY customer service through the retailer where the product was purchased. Please have your model number (C7) and purchase date available when contacting support.