

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal EasyFry Precision+ 2-in-1 Digital Air Fryer and Grill EY505D User Manual

Tefal EY505D

Tefal EasyFry Precision+ 2-in-1 Digital Air Fryer and Grill EY505D User Manual

Model: EY505D

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Tefal EasyFry Precision+ 2-in-1 Digital Air Fryer and Grill, model EY505D. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Do not immerse the appliance body, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Supervise children closely when the appliance is in use.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Avoid using accessories not recommended by the manufacturer, as they may cause injuries.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not place the appliance near hot gas or electric burners, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.

PRODUCT OVERVIEW

The Tefal EasyFry Precision+ is a versatile 2-in-1 appliance designed for both air frying and grilling. It features a digital control panel and a 4.2L capacity.

Components

1. Main Unit with Digital Control Panel
2. Removable Cooking Basket
3. Die-cast Aluminum Grill Plate
4. Handle



Image: The Tefal EasyFry Precision+ 2-in-1 Digital Air Fryer and Grill, showing the main unit and the separate die-cast aluminum grill plate.



Image: The Tefal EasyFry Precision+ with its cooking basket partially pulled out, revealing the interior.

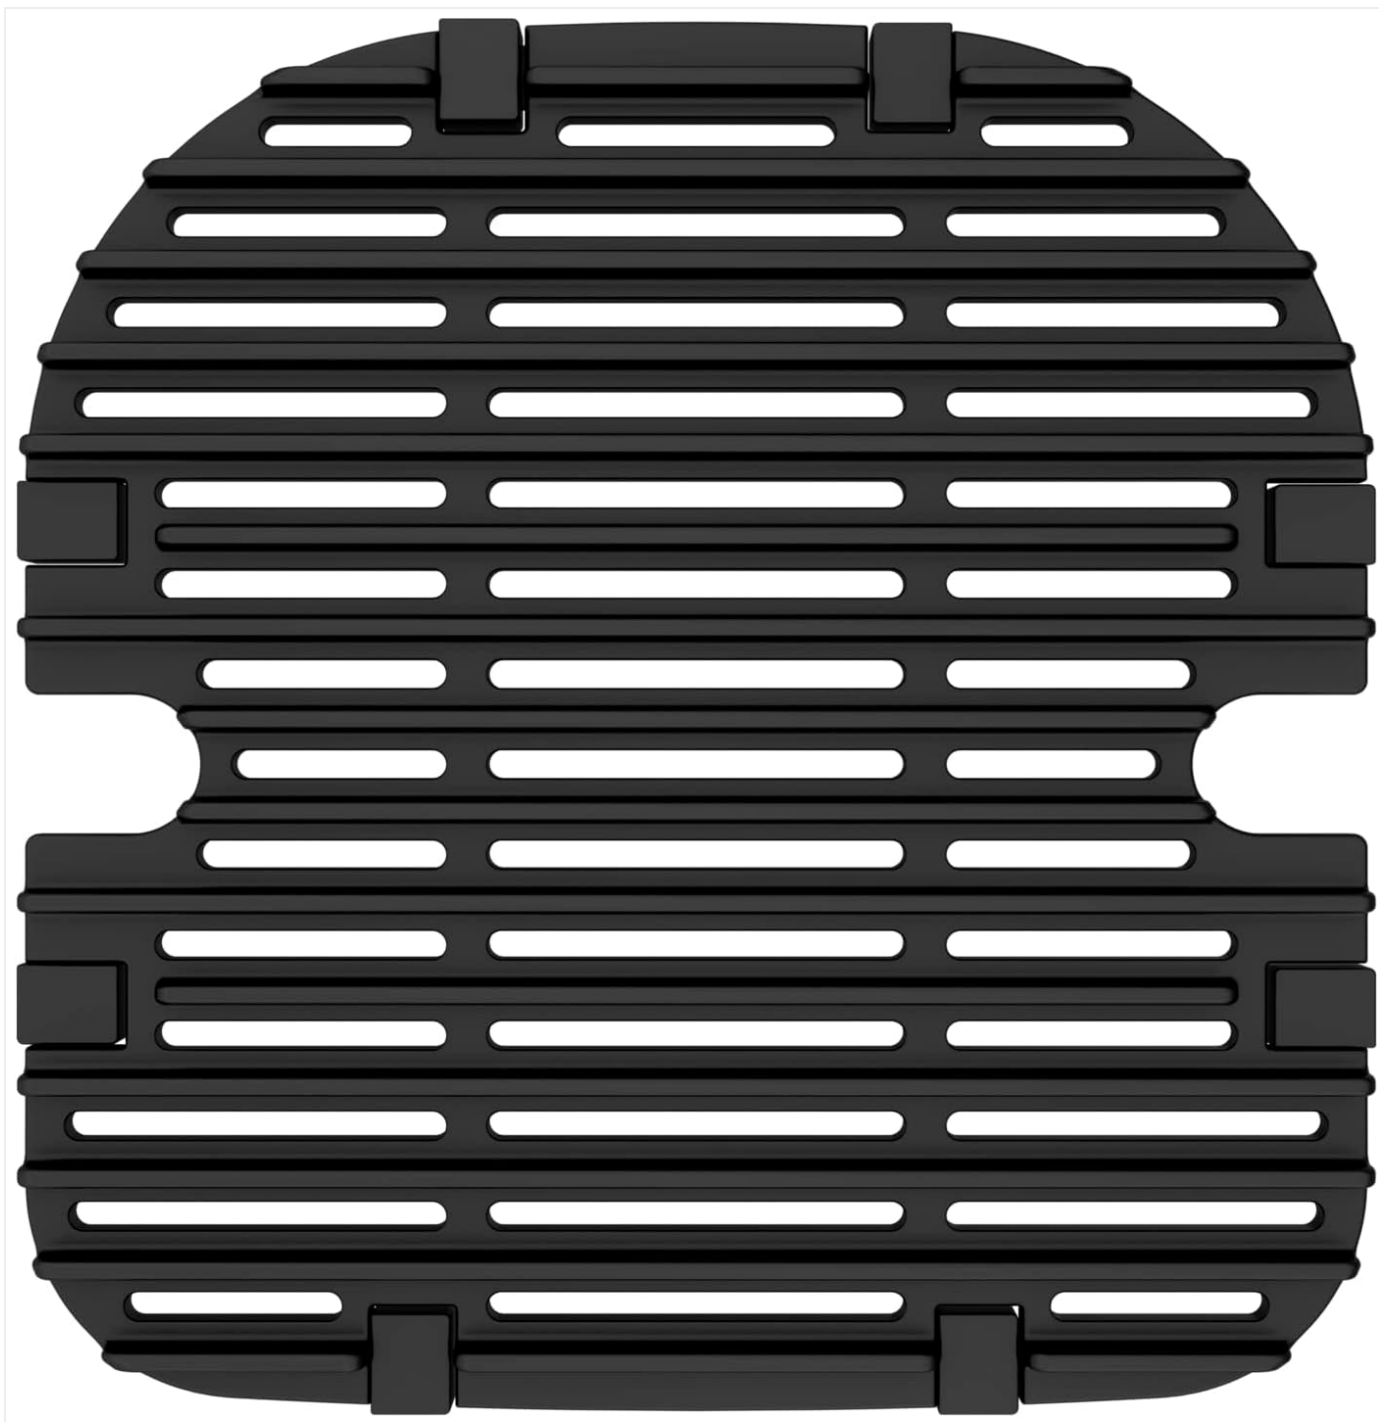


Image: A close-up view of the die-cast aluminum grill plate, designed for achieving grill marks.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and stickers from the appliance.
2. **Cleaning:** Wash the cooking basket and grill plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the appliance on a stable, level, heat-resistant surface. Ensure there is at least 10 cm of free space behind and above the appliance for proper air circulation.
4. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the appliance empty for about 10 minutes at 180°C (350°F) to eliminate any manufacturing odors. Ensure the area is well-ventilated during this process.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel

The digital control panel allows you to select cooking modes, adjust temperature, and set time. It features a touchscreen interface for ease of use.



Image: A close-up of the digital control panel, showing various icons for pre-set programs and temperature/time controls.

Pre-set Programs

The appliance includes 8 pre-set programs for common dishes. To use a pre-set program:

1. Place food in the cooking basket or on the grill plate.
2. Insert the basket into the main unit.
3. Press the power button to turn on the appliance.
4. Select the desired pre-set program icon on the digital display. The appliance will automatically set the temperature and time.
5. Press the start button to begin cooking.

Available programs include: Fries, Nuggets, Roasted Chicken, Pizza, Grilled Meat, Fish, Vegetables, and Dessert.

Manual Mode (Temperature and Time Adjustment)

For custom recipes, use the manual mode:

1. Place food in the cooking basket or on the grill plate.
2. Insert the basket into the main unit.
3. Press the power button.
4. Use the temperature control buttons (+/-) to set the desired cooking temperature.
5. Use the time control buttons (+/-) to set the desired cooking duration.
6. Press the start button to begin cooking.

Air Frying Function

The air frying function uses hot air circulation to cook food with little to no added oil, resulting in crispy textures.

- Ensure the grill plate is removed if not needed for air frying.
- Place food directly into the cooking basket. Do not overfill.
- Select an air fry pre-set program or set temperature and time manually.
- Shake the basket halfway through cooking for even results, especially for smaller items like fries. The appliance will pause when the basket is removed and resume when reinserted.

99% LESS ADDED FAT**
HEALTHY & EXTRA CRISPY GOLDEN RESULTS



****Cooking of 700g of fresh fries at 55% weight loss with 8mL of oil vs traditional deep frying with 2L
* vs traditional oven Energy Class A. Tests conducted in 2022 on frozen fries.**

Image: Crispy air-fried fries shown inside the cooking basket of the Tefal EasyFry.

Grilling Function

The grill function utilizes the die-cast aluminum grill plate to achieve authentic grill marks and flavors.

- Insert the die-cast aluminum grill plate into the cooking basket.
- Place food directly onto the grill plate.
- Select the "Grill" pre-set program or set temperature and time manually.
- For best results, preheat the grill plate for a few minutes before adding food.



Image: A steak being grilled on the die-cast aluminum grill plate inside the Tefal EasyFry.

Dehydrating Function

The dehydrator function allows you to make dried snacks. Refer to specific recipes for recommended temperatures and times for various foods.

- Prepare food for dehydration (e.g., thinly sliced fruits or vegetables).
- Place food in a single layer in the cooking basket.
- Set a low temperature (e.g., 40-70°C) and a long duration (several hours) as per your recipe.

Timer Function

The integrated 60-minute timer with an auto-ready bell will notify you when cooking is complete. The appliance will automatically shut off once the timer reaches zero.

CARE AND MAINTENANCE

Cleaning

1. **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Basket and Grill Plate:** The cooking basket and grill plate are non-stick and can be washed with hot water, dish soap, and a non-abrasive sponge. They are also dishwasher safe.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. **Interior:** Clean the interior of the appliance with a damp cloth and mild detergent if necessary. Ensure it is completely dry before next use.

Storage

Ensure the appliance is clean and completely dry before storing. Store it in a cool, dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Check power cord connection; try a different outlet; contact customer support.
Food is not cooked evenly.	Basket overloaded; food not shaken/turned.	Do not overload the basket; shake or turn food halfway through cooking.
White smoke coming from appliance.	Greasy food; food residue in basket.	Clean the basket and grill plate thoroughly; remove excess oil from food.
Appliance emits unusual smell during first use.	Manufacturing residue burning off.	This is normal for first use. Ensure good ventilation. Smell should dissipate.

SPECIFICATIONS

- **Model:** EY505D
- **Capacity:** 4.2 Liters
- **Power:** 1550 Watts
- **Voltage:** 220 Volts
- **Dimensions (D x W x H):** 36 x 27 x 32 cm
- **Item Weight:** 5.5 Kilograms
- **Material:** Stainless Steel
- **Special Features:** Temperature Control, Digital Display, 8 Pre-set Programs, Dehydrator Function

WARRANTY AND SUPPORT

This Tefal EasyFry Precision+ appliance comes with an international warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Tefal website. For technical assistance, spare parts, or repair services, please contact Tefal customer support in your region. Contact information can typically be found on the Tefal website or in the product packaging.

